

MLES-3738

# Miles Electronic Keyboard for Kids, 37 Keys - MLES-3738 User Manual

Model: MLES-3738 | Brand: GENERIC

<a href="#">Introduction</a>	<a href="#">Product Overview</a>	<a href="#">Setup</a>	<a href="#">Operation</a>	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>
<a href="#">Specifications</a>	<a href="#">Support</a>				

## 1. INTRODUCTION

Thank you for purchasing the Miles Electronic Keyboard for Kids. This manual provides important information on how to set up, operate, and maintain your new electronic keyboard. Please read this manual thoroughly before use and keep it for future reference.

### Important Safety Information

- Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age.
- Adult Supervision:** The toy must be operated under the direct supervision of parents or adults.
- Environmental Precautions:** Keep the keyboard away from sources of flame, direct sunlight, and excessive moisture or heat.

## 2. PRODUCT OVERVIEW

The Miles Electronic Keyboard (MLES-3738) is designed to provide hours of musical entertainment for children aged 3 and above. It features 37 standard accordion keys and various functions for an engaging play experience.



Figure 2.1: Front view of the Miles Electronic Keyboard (MLES-3738) in its packaging.



Figure 2.2: Top view of the Miles Electronic Keyboard, highlighting the keys and control panel.

## Key Features:

- 37 Standard Accordion Keys
- Large Scale Integration
- Metric Controlling Logical Circuit
- Eight Different Voices/Eight Kinds of Rhythms
- Single Finger/Finger Chord Functionality
- Demonstration Songs
- External Speaker/Microphone/DC/AC Power Input

## 3. SETUP

### 3.1 Unpacking

1. Carefully remove the electronic keyboard from its packaging.
2. Check for any visible damage. If the product is damaged, do not use it and contact customer support.
3. Ensure all components are present.

### 3.2 Powering On

The keyboard can be powered using batteries or an external DC/AC power adapter (not included, check

product specifications for compatible adapter). Batteries are not required for operation if using an adapter.

- **Battery Installation:** Locate the battery compartment on the underside of the keyboard. Insert the required number of batteries ensuring correct polarity (+/-). Close the battery compartment securely.
- **AC Adapter Connection:** If using an AC adapter, plug the adapter into the DC/AC power input jack on the keyboard. Then, plug the adapter into a standard wall outlet.

### 3.3 Initial Use

Once powered, locate the ON/OFF switch, usually on the front or side panel. Switch it to the "ON" position to power on the keyboard.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Playing the Keyboard

- Press any of the 37 keys to produce a musical note.
- Adjust the volume using the dedicated volume control buttons or knob (if present).

### 4.2 Changing Voices/Tones

The keyboard offers eight different voices. Locate the voice selection buttons, typically labeled with instrument names or numbers. Press the desired button to change the instrument sound.

### 4.3 Using Rhythms

There are eight kinds of rhythms available. Press the rhythm selection buttons to choose a rhythm. Use the tempo control (if available) to adjust the speed of the rhythm.

### 4.4 Chord Functions

The keyboard supports Single Finger and Finger Chord functions. Refer to the labels on the keyboard for specific chord activation areas or buttons.

### 4.5 Demonstration Songs

To play a demonstration song, press the "DEMO" or "SONG" button. Press it again to cycle through available songs or stop playback.

### 4.6 External Connections

The keyboard features external speaker and microphone inputs. Connect a compatible microphone to the microphone jack for singing along, or an external speaker to the speaker jack for amplified sound.

## 5. MAINTENANCE

---

### 5.1 Cleaning

- Wipe the surface of the keyboard with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the plastic.

- Avoid getting any liquids inside the keyboard.

## 5.2 Storage

- When not in use for extended periods, turn off the keyboard and remove batteries to prevent leakage.
- Store the keyboard in a cool, dry place, away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard does not turn on.	Batteries are dead or incorrectly inserted. AC adapter is not connected or faulty.	Replace batteries with new ones, ensuring correct polarity. Check AC adapter connection and try a different outlet.
No sound from the keyboard.	Volume is too low. External speaker/headphone connected.	Increase the volume. Disconnect external speakers/headphones if sound is desired from internal speaker.
Keys are not responding.	Keyboard might be in a specific mode (e.g., demo mode). Internal malfunction.	Try turning the keyboard off and on again. If problem persists, contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Product Model	MLES-3738
Item Model Number	2725606329772
Dimensions (L x W x H)	120 x 30 x 20 cm
Weight	750 g
Material Type	Plastic
Color	Multi Color
Batteries Required	No (implies it can run on adapter, but usually means batteries are optional or not included for initial setup)
Suitable Age	3 years and above
Origin	Made in China

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This product is manufactured by GENERIC. For specific warranty terms and conditions, please refer to the

documentation provided with your purchase or contact the retailer. No explicit warranty period is provided in this manual.

## **8.2 Customer Support**

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact the retailer or the manufacturer's customer support. Keep your purchase receipt as proof of purchase.