



Manuals.plus /

- › Ziweo /
- › Ziweo External USB 3.0 Type-C DVD/CD Drive User Manual

Ziweo 5059648217276

Ziweo External USB 3.0 Type-C DVD/CD Drive User Manual

Model: 5059648217276

1. INTRODUCTION

This manual provides instructions for the Ziweo External USB 3.0 Type-C DVD/CD Drive. This portable optical drive is designed to offer CD and DVD read/write capabilities for computers lacking an internal drive. It connects via USB 3.0 or Type-C ports, ensuring high-speed data transfer for various media tasks.



Figure 1: Ziweo External DVD/CD Drive Overview

2. KEY FEATURES

- **Plug and Play:** No external drivers or power supply required. Connects directly to your computer's USB or Type-C port for automatic detection.
- **High-Speed Performance:** Supports Max 8x DVD Rewrite/Read Speed and Max 24x CD Write/Read Burner speed, offering up to 5Gbps data transmission.
- **Reliable Construction:** Made from high-quality, shockproof materials with low noise operation and high durability.
- **Wide Compatibility:** Compatible with Windows XP/2003/Vista/7/8/10, Linux OS, and all versions of Mac OS.
- **Slim and Portable Design:** Ultra-thin and lightweight, ideal for travel and business use.

USB-C & USB 3.0

High Performance



Low
noise



Shock
proof



Error
Correction



High
Speed



DVD

+/-RW
Rewrite
RDL



CD

+/-RW
Burner



VCD

ROM

Figure 2: USB-C and USB 3.0 Connectivity

3. SETUP INSTRUCTIONS

1. **Unpack the Drive:** Carefully remove the Ziweo External DVD/CD Drive from its packaging.
2. **Connect to Computer:** Locate an available USB 3.0 or Type-C port on your laptop or desktop PC. Plug the integrated USB cable from the drive into the chosen port. The drive is designed for plug-and-play functionality and does not require additional drivers or an external power adapter.
3. **System Recognition:** Your operating system should automatically detect and install the necessary components for the drive. This process may take a few moments.
4. **Ready for Use:** Once detected, the drive will be ready for reading or writing CDs and DVDs.

PLUG AND PLAY

HIGH SPEED TRANSMISSION

Quick Data Transfer Speed Up To 5gbps





| |  |  |
|------------|---|--|
| | MAX RW SPEED | |
| | <i>Read</i> | <i>Write</i> |
| CD | 24X | 24x |
| DVD | 8X | 8X |

Figure 3: Connecting the Drive to a Laptop

4. OPERATING THE DRIVE

4.1 Inserting and Ejecting Discs

- **To Insert:** Press the eject button on the front of the drive to open the disc tray. Place a CD or DVD onto the tray with the label side facing up. Gently push the tray back into the drive until it clicks shut.
- **To Eject:** Press the eject button again. Alternatively, you can eject the disc through your computer's operating system (e.g., right-click the drive icon and select "Eject"). In case of power failure or if the eject button does not respond, use a small, pointed object (like a paperclip) to gently press into the forced ejection hole on the front panel.

4.2 Playing Media

After inserting a media disc (CD or DVD), your computer's operating system may prompt you to choose an action (e.g., play with a media player). Select your preferred application to play music, movies, or view data from the disc.

4.3 Burning Discs

To burn data to a CD-R, CD-RW, DVD-R, or DVD-RW disc, you will need compatible burning software installed on your computer. Follow the instructions provided by your burning software to create data discs,

audio CDs, or video DVDs.

MULTI-FUNCTION APPLICATION

External CD/DVD Drives/Player

Install software

copy Files

Burn CD/DVD

Data Backup

watch Movie

Play Games

Figure 4: Multi-Function Application Examples

5. COMPATIBILITY

5.1 Supported Operating Systems

- Windows XP/2003/2000/Vista/7/8/10
- Linux OS
- All versions of Mac OS

5.2 Supported Hardware Platforms

- Laptops
- MacBooks
- Desktop PCs

5.3 Unsupported Devices

This drive is not compatible with:

- TVs

- Car Players
- Chromebooks
- Surface Pro
- Ubuntu



Figure 5: Compatibility Overview

6. SPECIFICATIONS

| Feature | Detail |
|-----------------------------|---|
| Model Number | 5059648217276 |
| Optical Drive Type | CD-ROM, CD-R, CD+/-RW, DVD-ROM, DVD+/-R, DVD+/-RW |
| Optical Storage Write Speed | Max 24x CD / 8x DVD |
| Optical Storage Read Speed | Max 24x CD / 8x DVD |
| Hardware Interface | USB 3.0, USB 3.0 Type C |
| Number of USB 2.0 Ports | 1 |
| Number of USB 3.0 Ports | 1 |
| Item Weight | 10.8 ounces |
| Product Dimensions (LxWxH) | 5.9 x 5.9 x 0.79 inches |
| Color | Upgrade White |



Figure 6: Product Dimensions and Design Features

7. TROUBLESHOOTING

- **Drive Not Recognized:** Ensure the USB cable is securely connected to both the drive and your computer. Try a different USB port or a different computer to rule out port issues. Restart your computer.
- **Disc Not Reading/Writing:** Check if the disc is clean and free of scratches or smudges. Ensure the disc is placed correctly in the tray (label side up). Verify that the disc type is supported by the drive (CD-R, DVD-R, etc.). For burning, ensure you have compatible software.
- **Slow Performance:** Ensure you are connected to a USB 3.0 port for optimal speed. Close unnecessary applications running in the background.
- **Disc Stuck:** If the eject button is unresponsive, use the forced ejection hole with a paperclip as described in Section 4.1.

8. CARE AND MAINTENANCE

- Keep the drive clean by wiping it with a soft, dry cloth.
- Avoid exposing the drive to extreme temperatures, humidity, or direct sunlight.
- Store the drive in a safe place when not in use to prevent physical damage. The compact design allows for easy storage in a bag.
- Do not attempt to disassemble the drive, as this will void the warranty.

COMPACT AND PORTABLE

Ideal For Business And Travel



Figure 7: Portable Design for Easy Transport

9. WARRANTY AND SUPPORT

Ziweo is committed to providing reliable quality and professional customer service. This product comes with a standard manufacturer's warranty. If any problem occurs after purchase, or for assistance with setup, operation, or troubleshooting, please feel free to contact our customer support team for assistance or a free replacement.

Contact information can typically be found on the product packaging or the official Ziweo website.