

[manuals.plus](#) /› [Curtis Stone](#) /› [Curtis Stone 6.9-Quart Dura-Pan Air Fryer and Steamer Combo Instruction Manual](#)

Curtis Stone 713-875

Curtis Stone 6.9-Quart Dura-Pan Air Fryer and Steamer Combo Instruction Manual

Model: 713-875

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Curtis Stone 6.9-Quart Dura-Pan Air Fryer and Steamer Combo. Please read all instructions thoroughly before first use and retain this manual for future reference.

The Curtis Stone Air Fryer and Steamer is a versatile appliance designed for air frying, steaming, and steam frying. It features a 6.9-quart capacity and Dura-Pan non-stick coating for easy cooking and cleaning.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance is for household use only.
- Ensure the water container is filled correctly for steaming functions.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Curtis Stone Air Fryer and Steamer Combo.



Image 1: Front view of the Curtis Stone 6.9-Quart Dura-Pan Air Fryer and Steamer Combo. The appliance is black with a silver handle for the cooking basket and a silver top lid. The brand name "CURTIS STONE" is visible on the front panel.

Components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Cooking Basket:** 6.9-quart capacity, non-stick Dura-Pan coating.
- **Steam Tray:** Non-stick Dura-Pan coated, used for steaming.
- **Water Container:** 1-liter capacity, for steaming functions.
- **LED Display with Touch Screen:** For selecting cooking modes and adjusting settings.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels.
2. **Initial Cleaning:** Before first use, wash the cooking basket and steam tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the appliance on a stable, heat-resistant, and level surface. Ensure there is adequate space around the unit for proper ventilation (at least 6 inches from walls or other appliances).
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Your appliance offers three primary cooking modes: Air Fry, Steam, and Steam Fry. Use the LED touch screen to select your desired mode and adjust settings.

1. Air Fry Mode

- Place food in the cooking basket. Do not overfill.
- Insert the cooking basket into the main unit.
- Select "Air Fry" mode on the touch screen.
- Adjust temperature and time as required for your recipe.
- Press start. The appliance will begin the air frying process.
- Shake the basket halfway through cooking for even results, if necessary.

2. Steam Mode

- Fill the 1-liter water container with clean water. Do not exceed the maximum fill line.
- Place food on the steam tray.
- Insert the steam tray into the main unit.
- Select "Steam" mode on the touch screen.
- Adjust cooking time as required for your recipe.
- Press start. The appliance will begin steaming.

3. Steam Fry Mode

This mode combines steaming and air frying for crispy exteriors and juicy interiors.

- Fill the water container as described for Steam Mode.
- Place food in the cooking basket or on the steam tray, depending on the recipe.
- Insert the basket/tray into the main unit.
- Select "Steam Fry" mode on the touch screen.
- Adjust temperature and time. The appliance will typically steam first, then air fry.
- Press start.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cooking Basket and Steam Tray:** These parts feature Dura-Pan non-stick coating. Wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely. *Note: These parts are not dishwasher safe.*
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Water Container:** Rinse the water container after each use. For thorough cleaning, use a bottle brush if necessary.
5. **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Ensure no food particles remain.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Basket overloaded; food not shaken.	Do not overload the basket. Shake or flip food halfway through cooking.
Steam function not working.	Water container empty or improperly inserted.	Ensure the water container is filled to the appropriate level and correctly seated.
White smoke from appliance.	Grease residue from previous use; fatty food being cooked.	Clean the cooking basket and interior thoroughly. For fatty foods, this is normal.

SPECIFICATIONS

Model: 713-875

Capacity: 6.9 Quarts

Material: Plastic (Outer), Dura-Pan Non-stick (Basket/Tray)

Control Method: Touch Screen

Recommended Uses: Bake, Dehydrate, Reheat, Roast, Steam

Item Weight: Approximately 14 Pounds

Package Dimensions: 15 x 15 x 13 inches

Non-stick Coating: Yes

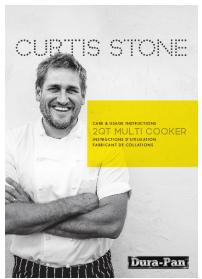
Dishwasher Safe Parts: No

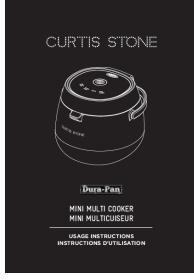
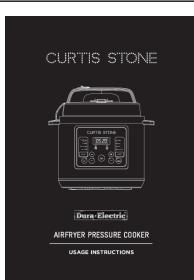
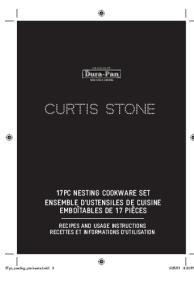
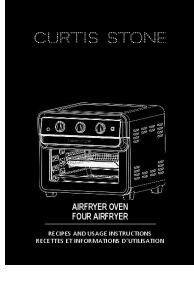
WARRANTY AND SUPPORT

This Curtis Stone 6.9-Quart Dura-Pan Air Fryer and Steamer Combo comes with a **1-Year Refurbished Warranty**.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided at the point of purchase or visit the official Curtis Stone support website.

Related Documents - 713-875

	<p><u>Curtis Stone 2Qt Multi Cooker: Care, Usage, and Recipes</u></p> <p>Comprehensive guide for the Curtis Stone 2Qt Multi Cooker, including important safety instructions, parts and accessories, operating guide, cooking function details, troubleshooting, warranty information, and delicious recipes.</p>
---	--

	<p><u>Curtis Stone Mini Multi Cooker User Manual and Recipes</u></p> <p>Comprehensive user guide for the Curtis Stone Mini Multi Cooker, including important safety instructions, operating procedures, function guides, cleaning and maintenance tips, warranty information, and a selection of recipes.</p>
	<p><u>Curtis Stone Airfryer Pressure Cooker: Usage Instructions and Safety Guide</u></p> <p>Comprehensive guide to using the Curtis Stone Airfryer Pressure Cooker, covering safety precautions, parts, operation modes, troubleshooting, and cleaning.</p>
	<p><u>Curtis Stone 17-Piece Dura-Pan Non-Stick Nesting Cookware Set: Recipes & Care</u></p> <p>Explore delicious recipes and essential usage and care instructions for the Curtis Stone 17-Piece Dura-Pan Non-Stick Nesting Cookware Set, designed for durability and ease of use.</p>
	<p><u>Curtis Stone Airfryer Oven Four Airfryer: Recipes and Usage Instructions</u></p> <p>Comprehensive guide for the Curtis Stone Airfryer Oven Four Airfryer, including safety precautions, operating instructions, cleaning tips, cooking charts, and a variety of recipes for everyday use.</p>
	<p><u>Curtis Stone Jumbo Lump Crab Cakes Preparation Instructions</u></p> <p>Detailed preparation instructions for Curtis Stone Jumbo Lump Crab Cakes, including oven, air fryer, and stovetop cooking methods.</p>