

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [De'Longhi](#) /

› [De'Longhi 10-in-1 Digital AirFryer, 24L, True Convection Toaster Oven with Internal Light, Grills, Broils, Bakes, Roasts, Reheats, Preset for Cookie & Pizza, 1800-Watts, Stainless Steel 24L Air Fry Oven Instruction Manual](#)

## De'Longhi EO241264M

# De'Longhi 10-in-1 Digital AirFryer, 24L

## INSTRUCTION MANUAL

Model: EO241264M

### Product Overview

The De'Longhi 10-in-1 Digital AirFryer, 24L, is a versatile countertop appliance designed for efficient cooking. It utilizes True European convection for faster preparation of various foods, from air frying to baking and roasting. Featuring exclusive Heat Lock Technology for consistent temperatures and an internal light for easy monitoring, this oven is also low-maintenance and easy to clean. It comes equipped with essential accessories, offering diverse cooking possibilities.



Front view of the De'Longhi 24L Digital Air Fry Oven, showcasing its sleek stainless steel design and digital display.

## Key Features & Functions:

- **10-in-1 Functionality:** Air Fry, Toast, Bake, Broil, Grill, Roast, Reheat, Defrost, Cookies, Pizza, Keep Warm, Preheat.
- **True Convection:** Ensures even and faster cooking results.
- **Heat Lock System:** Double-glass door and gasket maintain internal temperature for efficiency.
- **Internal Light:** Allows monitoring of cooking progress without opening the door.
- **Easy Cleanup:** Non-stick, scratch-resistant internal cavity.

## Setup

---

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the oven on a stable, heat-resistant, and flat surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the unit for proper ventilation. The dimensions are approximately 17.5"D x 19"W x 12"H.
3. **Initial Cleaning:** Before first use, wipe down the exterior with a damp cloth. Wash all accessories (air fry basket, wire rack, crumb tray, baking pan, pizza pan) with warm, soapy water, rinse thoroughly, and dry completely.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.

# EVERYTHING YOU NEED



## All accessories included

All accessories included with the De'Longhi Air Fry Oven: air fry basket, wire rack, crumb tray, baking pan, and pizza pan.

## Operating Instructions

---

### Control Panel Overview:

The oven features intuitive knob controls and a bright LCD display for easy operation. The top knob typically controls the cooking function, while the bottom knob adjusts temperature and time.

# USER-FRIENDLY CONTROLS



Easy-to-use electronic controls for fine-tuned cooking adjustments

Bright LCD display lets you keep an eye on your cook time from across the room

Detailed view of the digital display and control knobs, showing various cooking presets and settings.

## Cooking Functions:

- **Air Fry:** Ideal for crispy results with less oil. Place food in the air fry basket.
- **Toast:** For perfect toast, bagels, or waffles. Adjust toast color/time.
- **Bake:** For cakes, cookies, and casseroles. Use the baking pan or other oven-safe bakeware.
- **Broil/Grill:** For searing and browning. Position food closer to the top heating elements.
- **Roast:** For meats and vegetables.
- **Convection:** Activates the convection fan for faster, more even cooking across various functions.
- **Pizza:** Optimized setting for pizzas using the included pizza pan.
- **Cookies:** Preset for baking cookies.
- **Keep Warm:** Maintains food temperature after cooking.
- **Preheat:** Heats the oven to the desired temperature before adding food.
- **Defrost:** Gently thaws frozen items.
- **Reheat:** Warms up leftovers.

## Using the Convection Feature:

The True European Convection system circulates hot air evenly throughout the oven cavity, reducing cooking time by up to

40% compared to conventional ovens. This feature is particularly beneficial for achieving crispy textures in air frying and uniform baking/roasting.

## FASTER & HEALTHIER FRYING



Power convection system creates crispy, golden results every time with no oil



40% faster cooking using convection fan to evenly circulate heat for quick, precise cooking



60% faster preheating compared to full-size conventional oven

Illustration of hot air circulation within the oven, demonstrating the True Convection technology for even cooking.

### Internal Light:

The internal light allows you to monitor your food without opening the oven door, preventing heat loss and ensuring consistent cooking. This feature can be activated via a dedicated button on the control panel.

# EASY COOKING AND CLEANUP



Internal light to help you keep an eye on your food



Simple, fast cleanup with non-stick, scratch-resistant interior

View of the oven's interior, highlighting the internal light and the non-stick, scratch-resistant surface for easy cleaning.

## Maintenance

---

### Cleaning the Oven:

- Always unplug the oven and allow it to cool completely before cleaning.
- The non-stick, scratch-resistant internal cavity can be wiped clean with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- The crumb tray should be removed and emptied regularly to prevent buildup and ensure optimal performance. Wash with warm, soapy water.
- The exterior can be cleaned with a soft, damp cloth. Do not immerse the appliance in water.

### Care for Accessories:

All included accessories (air fry basket, wire rack, crumb tray, baking pan, pizza pan) are dishwasher safe for convenient cleaning. For stubborn food residue, soak in warm, soapy water before washing.

## Troubleshooting

---

Problem	Possible Cause	Solution
Oven does not turn on	Not plugged in; Power outage; Faulty outlet	Ensure power cord is securely plugged in; Check household circuit breaker; Try a different outlet
Food not cooking evenly	Overcrowding; Incorrect rack position; Convection fan issue	Do not overcrowd the basket/pan; Refer to recipe for recommended rack position; Ensure convection fan is not obstructed
Excessive smoke during cooking	Food residue; High-fat foods; Incorrect temperature	Clean the oven interior and crumb tray thoroughly; Use a drip tray for high-fat foods; Adjust temperature as per recipe
Digital display not working	Power issue; Internal malfunction	Unplug and re-plug the unit; If problem persists, contact customer support

## Specifications

Feature	Detail
Brand	De'Longhi
Model Name	Livenza
Model Number	EO241264M
Capacity	24 Liters
Color	Stainless Steel
Product Dimensions	17.5"D x 19"W x 12"H
Item Weight	24.9 pounds
Power Source	Electric (1800-Watts)
Control Type	Knob Control
Temperature Range	75-230 Degrees Celsius (167-446 Degrees Fahrenheit)
Included Components	De'Longhi 24L Air Fry Oven, Bake Pan, Pizza Pan, Air Frying Basket, 1 Wire Rack and Crumb Tray

## Warranty and Support

De'Longhi products are manufactured to the highest quality standards. For detailed warranty information, please refer to the official user manual or contact De'Longhi customer support.

### Additional Resources:

- Download the full User Manual (PDF): [De'Longhi 24L Air Fry Oven User Manual](#)
- For further assistance or technical support, please visit the official De'Longhi website or contact their customer service line.

