

ANESOK LPTurntableYUANMU2

ANESOK 3-Speed Bluetooth Turntable Instruction Manual

Model: LPTurntableYUANMU2

Introduction	Safety	Components	Setup	Operation	Maintenance
	Instructions			Warranty & Support	
	Troubleshooting	Specifications			

1. INTRODUCTION

Thank you for purchasing the ANESOK 3-Speed Bluetooth Turntable. This manual provides essential information for the safe and correct use of your new record player. Please read it thoroughly before use and retain it for future reference.

This turntable features a 3-speed belt drive system, built-in stereo speakers, Bluetooth connectivity for wireless audio streaming, and multiple output options including Aux-in, Headphone Jack, and RCA output. Enjoy your vinyl collection and digital music with this versatile device.

2. IMPORTANT SAFETY INSTRUCTIONS

- **Read Instructions:** Read all safety and operating instructions before using the product.
- **Retain Instructions:** Keep the safety and operating instructions for future reference.
- **Heed Warnings:** Adhere to all warnings on the product and in the operating instructions.
- **Follow Instructions:** Follow all operating and use instructions.
- **Water and Moisture:** Do not use this apparatus near water (e.g., bathtub, washbowl, kitchen sink, laundry tub, wet basement, or swimming pool).
- **Cleaning:** Clean only with a dry cloth.
- **Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Power Cord Protection:** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- **Attachments/Accessories:** Use only attachments/accessories specified by the manufacturer.

- **Lightning:** Unplug this apparatus during lightning storms or when unused for long periods.
- **Servicing:** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PRODUCT COMPONENTS AND CONTROLS

Familiarize yourself with the various parts of your ANESOK turntable.



Image: Detailed diagram of the ANESOK turntable highlighting the RCA Output, AUX IN Jack, DC IN, Headphone Jack, Power Button, Volume Control, 45RPM Fixtor, Tone Arm, Tone Arm Lifter, Auto Stop Switch, LP Speed Control Switch, Tone Arm Rest And Lock, and Cartridge.

1. **Dust Cover:** Protects the turntable from dust.
2. **Platter:** Where the record rests.
3. **Spindle:** Holds the record in place.
4. **Tone Arm:** Holds the cartridge and stylus.
5. **Tone Arm Lifter:** Raises and lowers the tone arm gently.
6. **Cartridge with Stylus:** Reads the grooves on the record.
7. **45 RPM Adapter:** Used for playing 7-inch records with large center holes.

8. **Speed Selector Switch:** Allows selection of 33, 45, or 78 RPM.
9. **Auto Stop Switch:** Enables or disables the auto-stop function.
10. **Power/Volume Knob:** Turns the unit on/off and adjusts the volume.
11. **Mode Indicator Light:** Shows current operating mode (e.g., Bluetooth, Phono).
12. **Headphone Jack:** For private listening with headphones.
13. **AUX IN Jack:** Connect external audio devices.
14. **RCA Output:** Connect to external amplifiers or powered speakers.
15. **DC IN Jack:** Connect the power adapter.
16. **Built-in Stereo Speakers:** For direct audio playback.



1.

Well-designed cartridge and Built-in round 2.0 stereo sound cavity assures **high quality** sound

2.

Pure Hand-made PVC & Leather finishing makes this unit **premium**



3.

High-Quality Metal Tone-arm makes this unit more **valuable**

Image: Close-up views highlighting the well-designed cartridge, the pure hand-made PVC/leather finishing, and the high-quality metal tone-arm, contributing to sound quality and product aesthetics.

4. SETUP GUIDE

4.1 Unpacking

- Carefully remove the turntable from its packaging.
- Remove all protective materials and packaging.
- Ensure all components listed in Section 3 are present.

4.2 Placement

- Place the turntable on a flat, stable surface away from direct sunlight, heat sources, and excessive vibration.
- Ensure adequate ventilation around the unit.

4.3 Power Connection

- Connect the DC power adapter to the DC IN jack on the back of the turntable.
- Plug the adapter into a suitable wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Playing a Vinyl Record

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the turntable. The mode indicator light will illuminate.
2. **Select Speed:** Set the speed selector switch to the appropriate speed (33, 45, or 78 RPM) for your record. Use the 45 RPM adapter if necessary for 7-inch records.
3. **Place Record:** Place a vinyl record on the platter.
4. **Remove Stylus Protector:** Gently remove the stylus protector from the cartridge.
5. **Unlock Tone Arm:** Release the tone arm lock.
6. **Position Tone Arm:** Use the tone arm lifter to raise the tone arm. Manually move the tone arm over the desired track on the record.
7. **Lower Tone Arm:** Gently lower the tone arm onto the record using the tone arm lifter. The record will begin to play.
8. **Adjust Volume:** Adjust the volume using the Power/Volume knob.
9. **Auto Stop Function:** If the Auto Stop switch is ON, the platter will stop spinning automatically when the record finishes. If OFF, the platter will continue to spin.
10. **After Playback:** When the record finishes, use the tone arm lifter to raise the tone arm, return it to the tone arm rest, and secure it with the lock. Turn off the unit by rotating the Power/Volume knob counter-clockwise.



Image: The ANESOK turntable playing a record, highlighting the dual built-in stereo speakers for full-range sound reproduction.

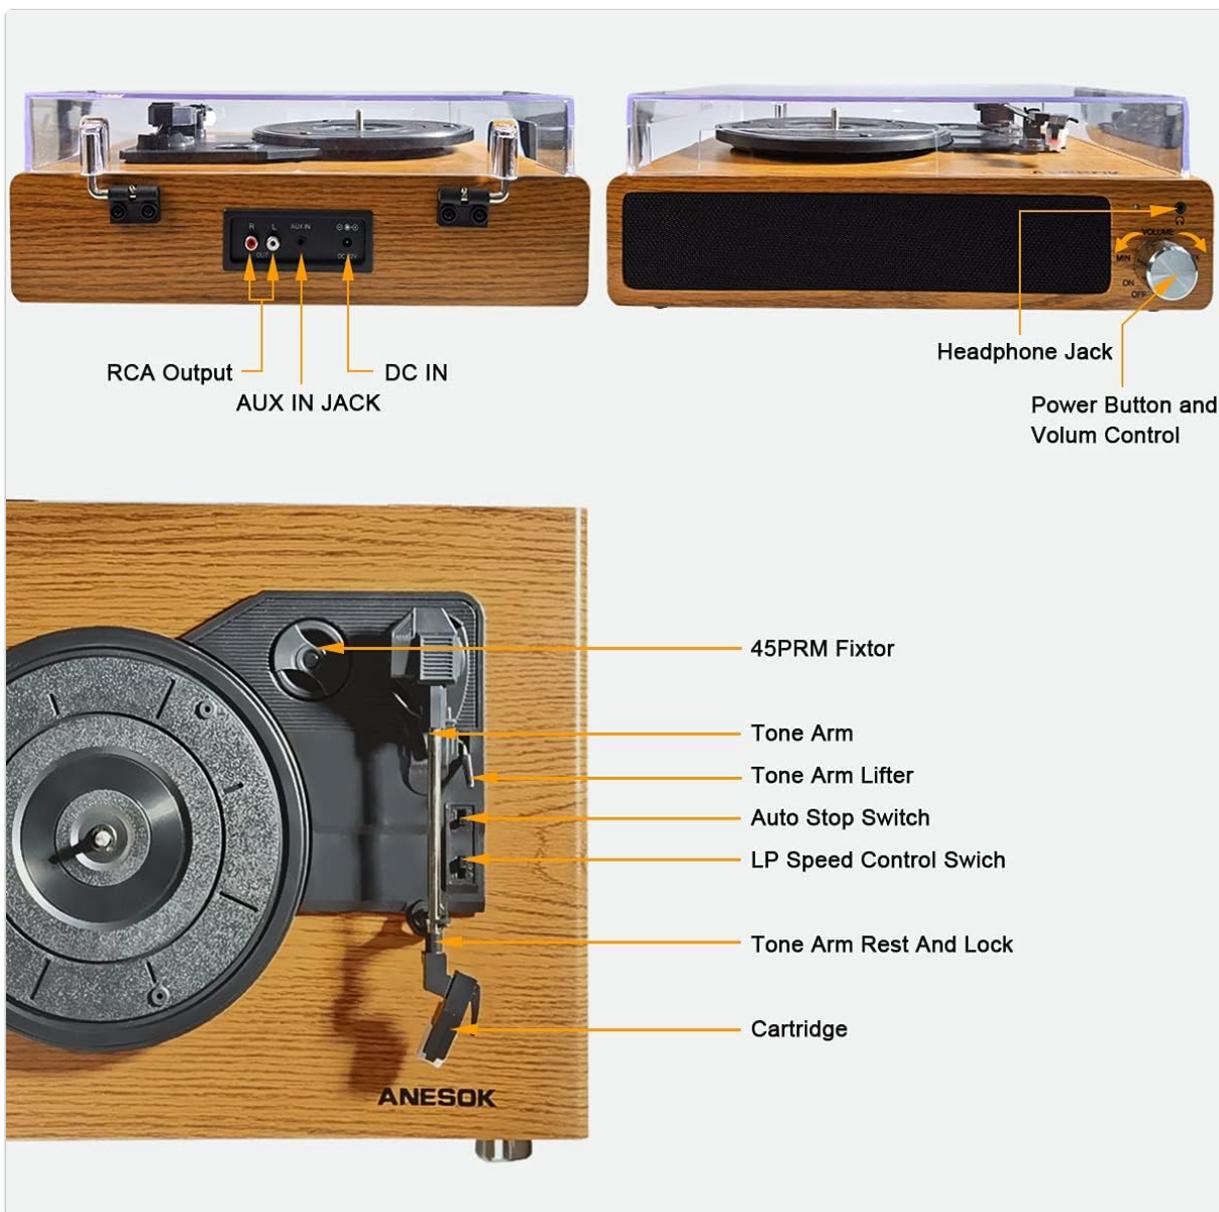


Image: Visual guide for selecting the correct playback speed (33, 45, or 78 RPM) for 7, 10, and 12-inch records.

5.2 Bluetooth Operation

The turntable can receive audio wirelessly from Bluetooth-enabled devices.

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the turntable.
2. **Bluetooth Mode:** The turntable will automatically enter Bluetooth pairing mode. The mode indicator light will flash blue.
3. **Pair Device:** On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for "ANESOK" in the list of available devices.
4. **Connect:** Select "ANESOK" to pair. Once connected, the mode indicator light will stop flashing and remain solid blue.
5. **Play Audio:** You can now play music from your device through the turntable's speakers. Adjust volume on both your device and the turntable.



7/10/12 INCHES RECORD

Selectable 33, 45 and 78 RPM speeds



7"78PRM



10"45PRM



12"33PRM

Image: Illustration of the wireless connection feature, demonstrating how to pair a smartphone or other digital audio player with the turntable via Bluetooth.

5.3 AUX IN Connection

Connect external audio sources using the AUX IN jack.

1. **Connect Cable:** Plug a 3.5mm audio cable (not included) into the AUX IN jack on the back of the turntable.
2. **Connect Device:** Connect the other end of the cable to the headphone output or line-out jack of your external audio device (e.g., MP3 player, CD player).
3. **Power On:** Turn on the turntable and your external audio device.
4. **Play Audio:** Play audio from your external device. The sound will be routed through the turntable's speakers. Adjust volume on both devices.

5.4 Headphone Output

For private listening, connect headphones to the dedicated jack.

- Plug your headphones into the Headphone Jack on the front of the turntable.
- The built-in speakers will automatically mute when headphones are connected.
- Adjust the volume using the Power/Volume knob.

5.5 RCA Output

Connect the turntable to an external amplifier or powered speakers for enhanced sound.

- Connect an RCA cable (not included) to the RCA Output jacks (Red for Right, White for Left) on the back of the turntable.
- Connect the other end of the RCA cable to the corresponding input jacks on your amplifier or powered speakers.
- Ensure your external audio system is set to the correct input.
- Adjust the volume using your external audio system's controls.

6. MAINTENANCE AND CARE

6.1 Cleaning the Turntable

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Keep the dust cover closed when not in use to prevent dust accumulation.

6.2 Stylus Care

- The stylus is delicate. Handle it with care.
- Clean the stylus periodically using a soft brush, brushing gently from back to front.
- Replace the stylus when you notice a degradation in sound quality or visible wear.



Image: Close-up views of the cartridge and tone arm, illustrating the delicate components that require careful handling and maintenance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure the power adapter is securely connected to the turntable and a live power outlet.
No sound from speakers	Volume too low; headphones connected; external amplifier not connected or set incorrectly.	Increase volume. Disconnect headphones. Check RCA connections and external amplifier settings.
Record skips	Record is dirty or scratched; stylus is worn or dirty; turntable not on a stable surface.	Clean the record. Clean or replace the stylus. Place the turntable on a stable, level surface.

Problem	Possible Cause	Solution
Bluetooth not connecting	Turntable not in Bluetooth mode; device too far; device already connected to another Bluetooth device.	Ensure the turntable is in Bluetooth pairing mode (flashing blue light). Move device closer. Disconnect from other Bluetooth devices.
Record plays too fast/slow	Incorrect speed selected.	Adjust the speed selector switch to 33, 45, or 78 RPM as appropriate for the record.

8. TECHNICAL SPECIFICATIONS

- **Model:** LPTurntableYUANMU2
- **Brand:** ANESOK
- **Speeds:** 33 1/3, 45, 78 RPM
- **Drive Type:** Belt Drive
- **Motor Type:** AC Motor
- **Connectivity:** Bluetooth, AUX-in, RCA Output, Headphone Jack
- **Speakers:** Built-in Stereo Speakers
- **Material:** Plastic, Wood
- **Color:** Brown
- **Special Feature:** Portable
- **Package Dimensions:** 16.61 x 13.54 x 7.64 inches
- **Item Weight:** 6.67 pounds
- **Signal Format:** Line-level
- **Date First Available:** August 16, 2021

9. WARRANTY AND SUPPORT

This ANESOK product is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, including warranty duration and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact ANESOK customer service. Contact information can typically be found on the product packaging, the official ANESOK website, or your purchase receipt.

Please note: Keep your proof of purchase for warranty validation.