

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY RC1900 Universal Replacement Remote Control User Manual](#)

ALLIMITY RC1900

ALLIMITY RC1900 Universal Replacement Remote Control User Manual

Model: RC1900

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ALLIMITY RC1900 Universal Replacement Remote Control. This remote is designed to function as a direct replacement for original remote controls of various TV models from brands such as Luxor, NordMende, Inno-Hit, AKAI, Bush, Technika, and AKURA. No programming is required for its use.

PRODUCT OVERVIEW

The ALLIMITY RC1900 remote control features a standard layout with dedicated buttons for power, channel navigation, volume control, menu access, and playback functions. It operates using infrared technology.



Image 1: Front view of the ALLIMITY RC1900 Universal Replacement Remote Control. It features a dark gray body with light gray and colored buttons, including a central navigation pad, number keys, and function buttons.



Image 2: Angled view of the ALLIMITY RC1900 remote control, highlighting the ergonomic design and button placement from a different perspective.

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for use with compatible devices.

OPERATING INSTRUCTIONS

Basic Operation

- **Power:** Press the **Power** button (usually located at the top) to turn your device on or off.
- **Channel Navigation:** Use the **Channel Up/Down** buttons to change channels.
- **Volume Control:** Use the **Volume Up/Down** buttons to adjust the sound level.
- **Number Keys:** Use the number pad (0-9) to directly input channel numbers.
- **Menu/Navigation:** Use the **Menu** button to access your device's on-screen menu. The directional arrow buttons and **OK>Select** button are used for navigation and selection within menus.
- **Source/Input:** Press the **Source** or **Input** button to switch between different video inputs (e.g., HDMI, AV).

Optimal Performance

- Ensure a clear line of sight between the remote control and the infrared sensor on your device.
- The maximum effective range for this remote control is approximately 10 meters (33 feet).

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type (AAA).

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the device's infrared sensor.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Some functions not working:**
 - This remote is a replacement and aims to cover all original functions. However, specific advanced features unique to your original device's remote might not be directly replicated if they are not standard.
 - Refer to your device's original manual for specific function details.

SPECIFICATIONS

Brand	ALLIMITY
Model Number	RC1900 (Manufacturer Reference: QYSY-RC1900-LU-QYSY)

Connectivity Technology	Infrared
Special Feature	Universal Replacement
Compatible Devices	Luxor, NordMende, Inno-Hit, AKAI, Bush, Technika, AKURA TVs (e.g., LED24970DVDFHDW, LCD26-229, LCD19-910, 19822WHDDVDDIG, 19875DVD, 22820DVVIDTVIPOD, 26883DVVIDTV, 26DVLDLCD, 32883DVD, HD22823DDVD, L19822COBXMAS, LCD-W-16822, LCD-W-19822, LUX-16822-COB, LUX16822WHDVD, LUX-19822-COB, LUX-22822-COB, LUX-22860-COB, LUX-24882-COB, LUX26883DDVD, LUXORHD19822DDVD, LUXORHD22822DDVD, LUXORHD26883DDVD, V16LCDDVDHD, V19LCDDVD875, V22LCDDVDHD, LUX-22-822-COB, CBX1909, L19V99-S, LC16M211, LC22M211, LC26R, LD19V211, LD32V211, IH26847T17BH, IH19875WD, IH22860TWD, IH32916T16BH, ALD1914H, ALD1979H, ALD1980HT, ALD2214FH, ALD2214H, ALD2280HT, UN32N2004, UN39N2504, IH16820TD9N, IH19855TD11B, IH22820TWX, IH22875WD, IH22910TD17BFLED, IH24884TD17BFLED, ALD2615H, ALD2620H, ALD3214H, ALED1905T)
Maximum Number of Supported Devices	10 (Universal compatibility)
Number of Buttons	19
Maximum Range	10 Meters (33 feet)
Battery Type	Alkaline (AAA, not included)
Country of Origin	China

WARRANTY AND SUPPORT

Warranty information for the ALLIMITY RC1900 Universal Replacement Remote Control is not provided in this document. For specific warranty details or technical support, please contact the manufacturer or your point of purchase directly.