

Farberware FFSGSW

Farberware FFSGSW Full Size Garment Steamer User Manual

Model: FFSGSW

INTRODUCTION AND PRODUCT OVERVIEW

The Farberware FFSGSW Full Size Garment Steamer is designed to efficiently remove wrinkles and refresh a wide variety of fabrics and household items. This powerful 1500-watt steamer offers a safe and effective alternative to traditional ironing, capable of handling delicate materials, sequins, beads, and screen-printed garments without damage. Key features include:

- **Versatile Application:** Suitable for clothing, curtains, carpets, rugs, pillows, upholstery, and even car interiors.
- **Large Water Capacity:** A 1-gallon water tank provides up to 70 minutes of continuous steam.
- **Rapid Heat-Up:** Ready to use in just 45 seconds for quick wrinkle removal.
- **Multiple Steam Options:** Four distinct steam settings for optimal fabric care.
- **Integrated Garment Stand:** Features a built-in hanger and collapsible arms for convenient steaming.
- **Enhanced Mobility:** Equipped with large, non-skid wheels for easy movement around your home.
- **Safety Features:** Includes a unique, heat-resistant steam hose cover for safe operation.





Figure 1: Fully assembled Farberware FFSGSW Garment Steamer, showcasing its upright design with the steam head and garment hanger.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list are present.

2. **Assemble Pole and Hanger:** Insert the telescopic pole into the base unit. Secure the garment hanger attachment to the top of the pole. Extend the collapsible arms of the hanger as needed.
3. **Connect Steam Hose:** Attach the steam hose to the designated port on the base unit. Ensure it is securely fastened to prevent steam leakage.
4. **Fill Water Tank:** Remove the water tank from the base unit. Unscrew the cap and fill the tank with distilled water. The tank has markings for minimum (MIN) and maximum (MAX) fill levels, indicating capacity up to 1 gallon (approximately 16 cups). Do not overfill.
5. **Reinsert Water Tank:** Place the filled water tank back into the base unit, ensuring it is properly seated.
6. **Position Steamer:** Place the steamer on a flat, stable surface away from walls or furniture, allowing adequate space for steam to dissipate. The non-skid wheels allow for easy repositioning.



Figure 2: Close-up view of the steamer's base, showing the water tank and the control dial for fabric settings.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the steamer into a standard electrical outlet.

2. **Select Fabric Setting:** Turn the control dial located on the front of the base unit to the desired fabric type (e.g., Silk, Wool, Cotton, Linen). This adjusts the steam output for optimal results.
3. **Heat Up:** Allow approximately 45 seconds for the steamer to heat up and produce continuous steam.
4. **Prepare Garment:** Hang the garment on the integrated hanger. For best results, gently pull the fabric taut with one hand while steaming with the other.
5. **Begin Steaming:** Hold the steam head a few inches from the fabric and move it in a downward motion. For stubborn wrinkles, use the optional steam brush attachment.
6. **Power Off:** Once steaming is complete, turn the control dial to the "OFF" position and unplug the unit from the outlet.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Farberware Garment Steamer.

- **Empty Water Tank:** After each use, or when storing the steamer, empty any remaining water from the tank. This prevents mineral buildup and keeps the water fresh. The tank can be easily lifted from the base for emptying.
- **Descaling:** Depending on water hardness in your area, periodic descaling may be necessary. Consult the full product manual for detailed descaling instructions.
- **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Store Properly:** Store the steamer in a cool, dry place. The collapsible pole and hanger allow for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or insufficient steam	Water tank empty; Unit not heated sufficiently; Mineral buildup.	Refill water tank; Allow 45 seconds for heat-up; Perform descaling.
Water leaking from steam head	Hose not properly connected; Overfilling water tank; Mineral buildup.	Ensure hose is secure; Do not exceed MAX fill line; Perform descaling.
Unit does not power on	Not plugged in; Power switch off; Electrical issue.	Check power connection; Ensure dial is on a fabric setting; Check circuit breaker.
Clothes still wrinkly after steaming	Incorrect fabric setting; Not pulling fabric taut; Steaming too quickly.	Adjust dial to appropriate setting; Gently pull fabric taut; Steam slowly and thoroughly.
Missing parts upon unboxing	Packaging error.	Contact Farberware customer support immediately with proof of purchase.

SPECIFICATIONS

Brand: Farberware

Model Number: FFSGSW

Color: White

Product Dimensions: 10.1"L x 6.8"W x 13.8"H

Item Weight: 11.4 Pounds

Wattage: 1580 watts

Voltage: 26.33 Volts (AC)

Heat Time: 45 seconds

Water Tank Capacity: 1 Gallon

UPC: 815658025981

Manufacturer: Farberware

Date First Available: June 8, 2021

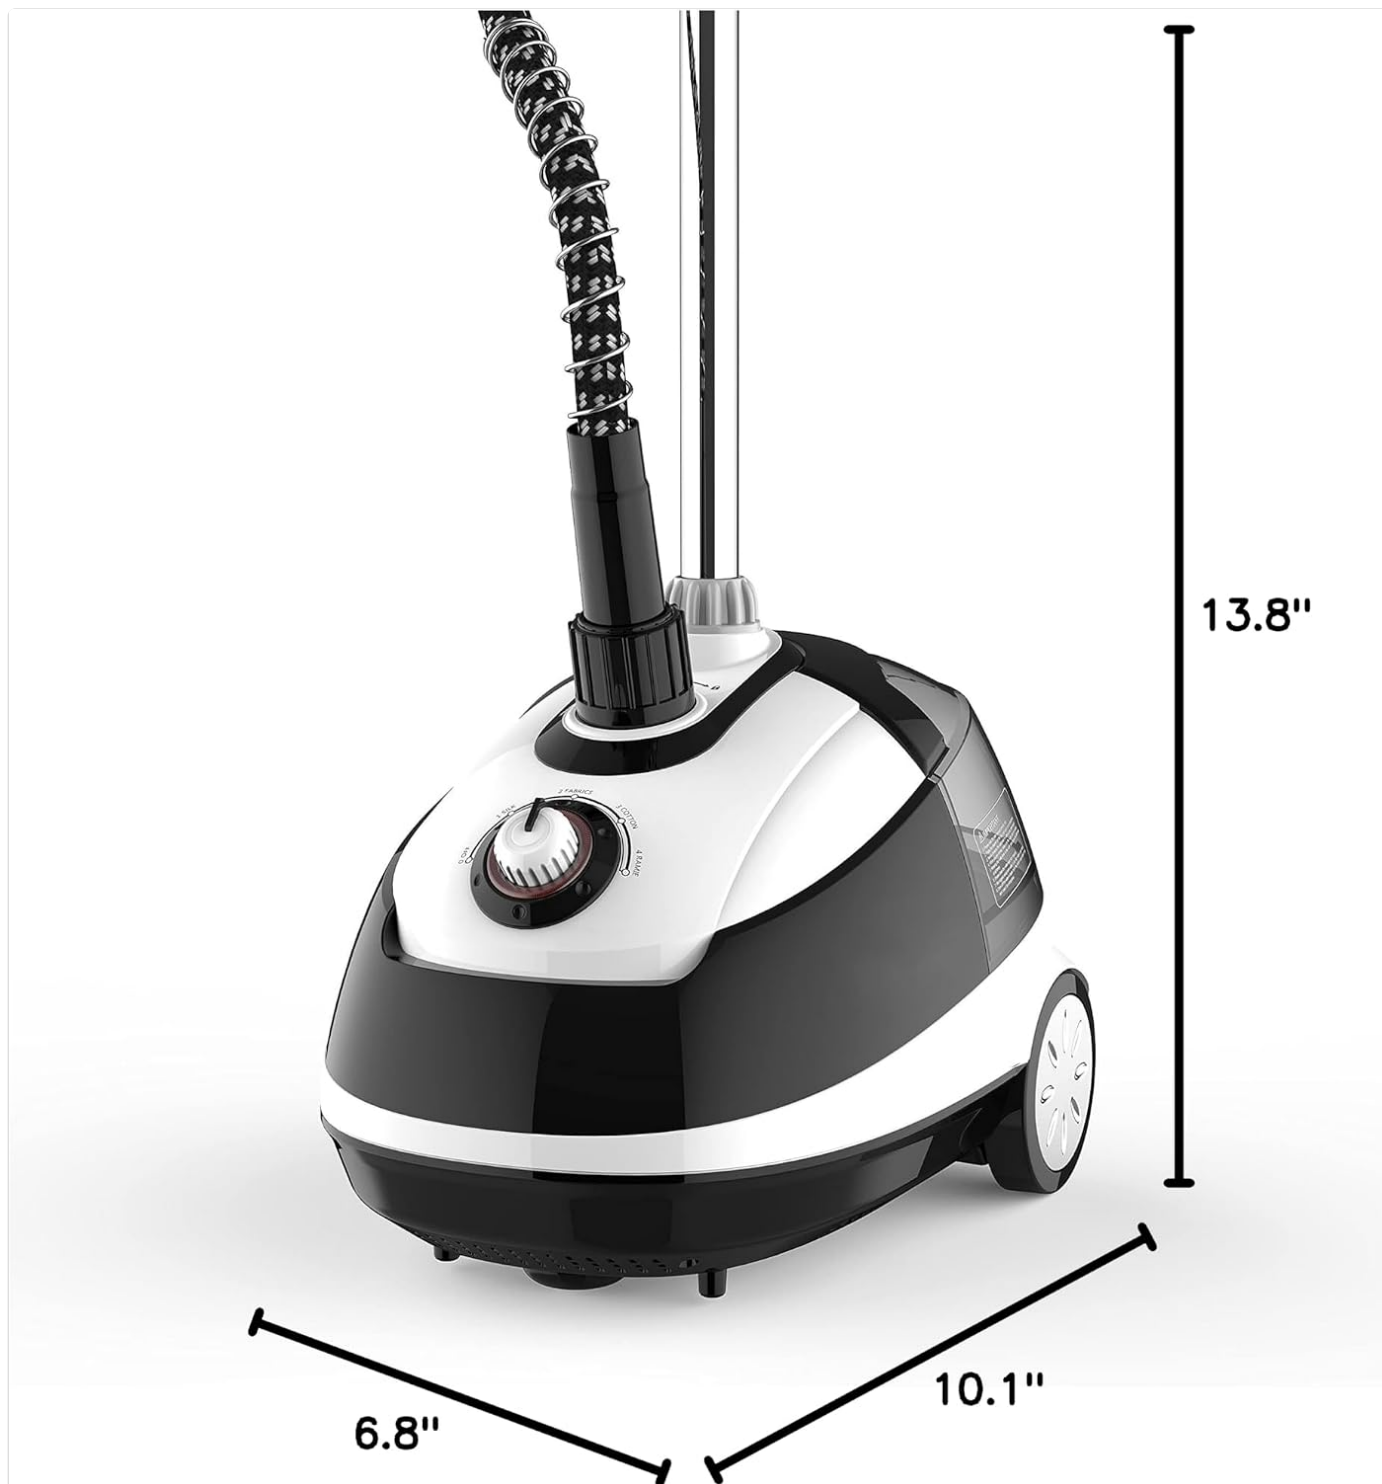


Figure 3: Product dimensions of the Farberware FFSGSW Garment Steamer.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the

official Farberware website. Protection plans may also be available for extended coverage.
For additional assistance, you may visit the [Farberware Store on Amazon](#).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question