

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [JSY](#) /

› [JSY 7-Lattice Food Storage Box User Manual](#)

JSY B096X47SWQ

JSY 7-Lattice Food Storage Box User Manual

Model: B096X47SWQ

1. PRODUCT OVERVIEW

The JSY 7-Lattice Food Storage Box is a versatile silicone container designed for preparing and storing baby complementary food, homemade ice cream, popsicles, and other small food portions. Its 7 individual compartments and secure lid ensure fresh-keeping and easy portion control. Made from food-grade silicone, it is reusable, durable, and safe for various food preparation methods.

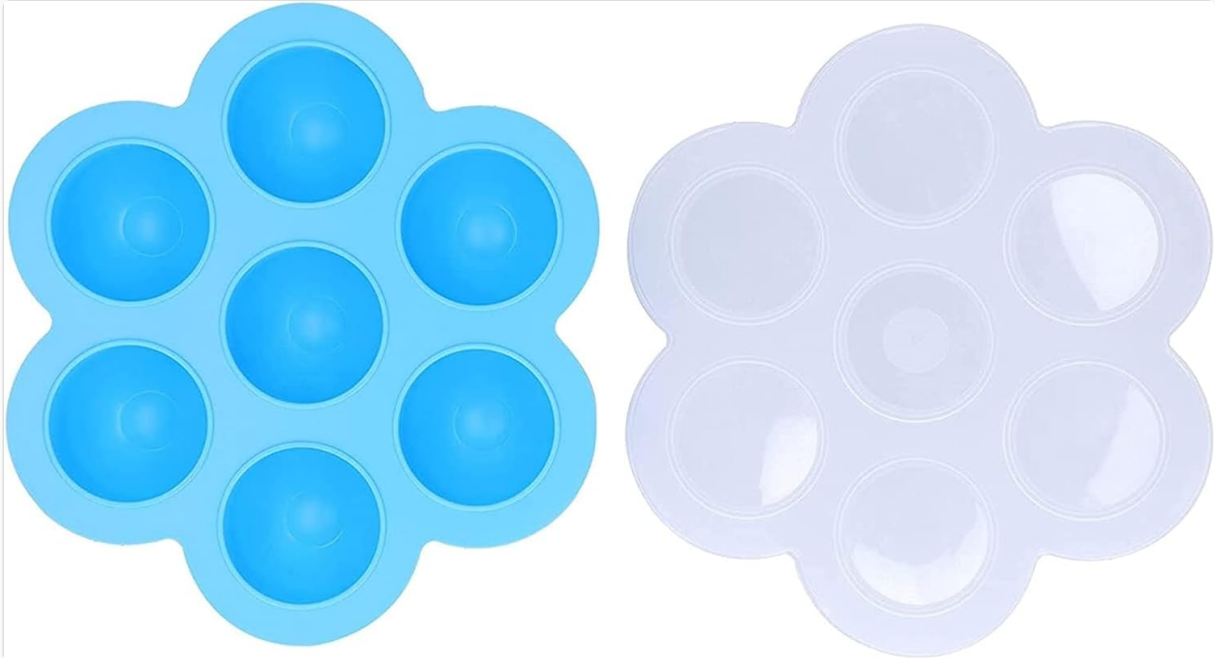


Image 1.1: The JSY 7-Lattice Food Storage Box, showing both the blue silicone mold and the clear silicone lid.

2. SAFETY INSTRUCTIONS

- Always wash the product thoroughly before first use and after each subsequent use.
- Ensure the product is clean and dry before storing food to prevent bacterial growth.
- Do not expose the silicone mold to direct flame or extreme heat sources.

- Keep out of reach of small children when not in use, especially if containing small food items.
- When using for freezing, do not overfill compartments to allow for expansion.

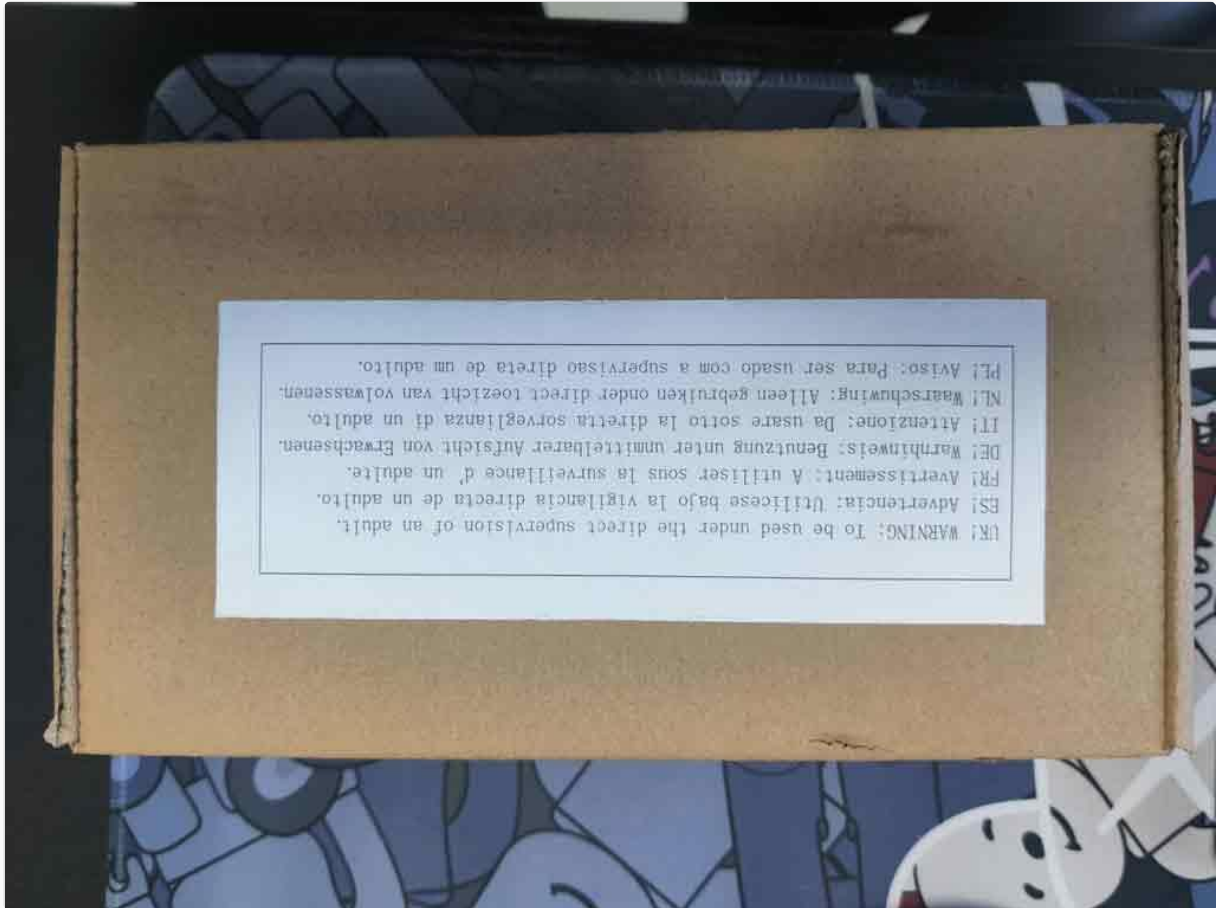


Image 2.1: Packaging with a warning label indicating the product should be used under direct supervision of an adult.

3. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the food storage box and lid from its packaging.
2. **Inspect:** Check for any signs of damage or defects. If any are found, do not use the product and contact customer support.
3. **Clean:** Wash both the silicone mold and the lid with warm soapy water. Rinse thoroughly and allow to air dry completely or dry with a clean cloth.



Image 3.1: The food storage box ready for use, shown with various food items in the background, illustrating its purpose for complementary food.

4. OPERATING INSTRUCTIONS

4.1. Filling the Mold

Fill each of the 7 compartments with your desired food item. This can include pureed baby food, fruit juice for popsicles, yogurt, or small portions of cooked vegetables. Ensure not to overfill, especially if freezing, to prevent spillage and allow for expansion.



Image 4.1: The food storage box positioned near ingredients for baby food, demonstrating its use in preparing complementary meals.

4.2. Sealing and Storage

Place the clear silicone lid securely over the filled mold. The lid is designed to create a tight seal, preserving freshness and preventing leaks. The sealed container can then be stored in the refrigerator or freezer, depending on the food item.



Food Container

Scope of application

It can be used for baking, steaming eggs, making cupcakes, etc.

Clean and safe

Food-grade silicone, BPA-free, no peculiar smell after use.

Good sealing

The lid that the mold is equipped with is very strong and protects the hygiene of the food.

Image 4.2: The food storage box with its lid, highlighting its versatility for baking, steaming eggs, and making cupcakes, in addition to food storage.

4.3. Removing Food Portions

Once the food is set or frozen, individual portions can be easily removed by gently pushing up from the bottom of each compartment. The flexible silicone material allows for effortless release without sticking.



Image 4.3: The blue silicone mold and the clear lid displayed separately, illustrating the two main components of the storage system.

5. MAINTENANCE AND CLEANING

The JSY 7-Lattice Food Storage Box is designed for easy cleaning. It is dishwasher safe, but hand washing with warm soapy water is recommended for extended product life. Ensure all food residues are removed from the compartments and lid. Dry thoroughly before storing.



Image 5.1: Various perspectives of the food storage box, including top, bottom, and with the lid, demonstrating its design and structure.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Food sticking to mold	Mold not completely dry; food type prone to sticking.	Ensure mold is dry before filling. For sticky foods, lightly grease compartments or allow to thaw slightly before removal.
Lid not sealing properly	Food overflow; lid or mold not aligned correctly.	Do not overfill compartments. Ensure lid is aligned with the mold's edges and pressed down firmly.
Odor retention	Strongly scented foods; improper cleaning.	Wash immediately after use. For persistent odors, soak in a baking soda and water solution for a few hours, then wash and rinse.

7. SPECIFICATIONS

Brand: JSY
Model: B096X47SWQ
Material: Food-Grade Silicone
Number of Compartments: 7
Dimensions: Approximately 21cm (8.3in) diameter, 5cm (2.0in) height (as per image 7.1)
Features: Reusable, Sealed, Fresh-keeping, BPA-free

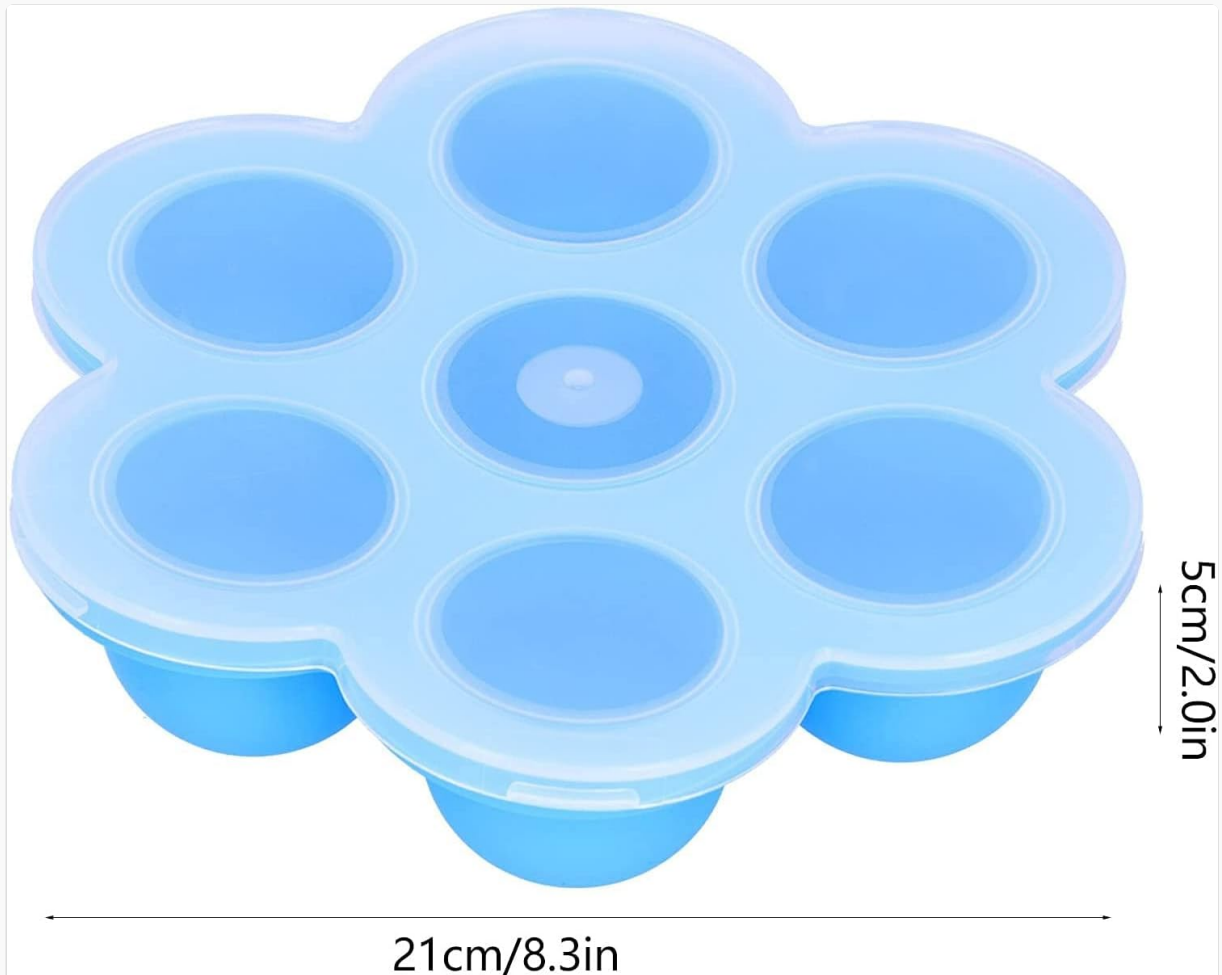


Image 7.1: The food storage box with its lid, displaying approximate dimensions of 21cm (8.3 inches) in diameter and 5cm (2.0 inches) in height.

8. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your JSY 7-Lattice Food Storage Box, please contact the seller or manufacturer directly through the platform where the purchase was made. Please refer to your purchase receipt for specific warranty details, as warranty terms may vary by retailer.

For general inquiries, you may visit the JSY brand page on Amazon: [JSY Brand Page](#)