

[Manuals.plus](#) /

› [EWO'S](#) /

› EWO'S Roku TV Remote Control Instruction Manual

EWO'S RCRUS-22

EWO'S Roku TV Remote Control Instruction Manual

Model: RCRUS-22

1. INTRODUCTION

Thank you for choosing the EWO'S Roku TV Remote Control. This manual provides essential information for setting up and operating your new remote, ensuring a seamless entertainment experience. This remote is designed for simplicity and ease of use, requiring no complex programming.

2. COMPATIBILITY

This remote control is compatible with a wide range of Roku TV models, including:

- Hisense Roku TV
- TCL Roku TV
- Sharp Roku TV
- Onn Roku TV
- Philips Roku TV
- Westinghouse Roku TV
- Element Roku TV
- Insignia Roku TV
- Jvc Roku TV
- RCA Roku TV
- Sanyo Roku TV

Important Note: This remote is *not* compatible with Roku Streaming Media Players, Roku Express, Express+, Roku Streaming Stick, Stick+, Roku Premiere, Premiere+, Roku Ultra, or Roku Box 1, 2, 3, 4.

Compatible with Hisense Roku TV

For TCL Roku TV / For Sharp Roku TV



Image: The EWO'S remote shown with a TV screen displaying Roku interface, emphasizing compatibility with Roku TVs and explicitly showing non-compatibility with Roku streaming sticks/boxes.


3. KEY FEATURES

The EWO'S Roku TV Remote Control offers several features designed for convenience and performance:

- **Dedicated Shortcut Buttons:** Features one-touch access buttons for popular streaming services including Netflix, Disney, Hulu, and VUDU.
- **Quick Response Time:** Experience ultra-fast command execution with a response time of just 0.3 seconds.
- **Durable Buttons:** Buttons are rigorously tested to withstand over 120,000 clicks, ensuring long-lasting reliability.
- **Extended Range & Stable Performance:** Enjoy a greater transmitting distance of over 35 feet and consistent, stable performance.
- **Dedicated TV Control:** Includes specific buttons for power, volume adjustment, and mute functions to control your TV directly.



Image: The remote control prominently displaying its four dedicated shortcut buttons for popular streaming applications.

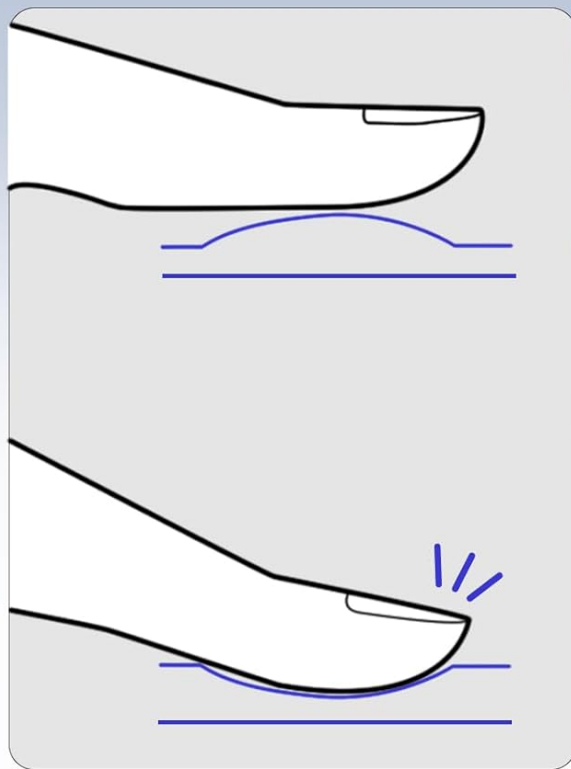

This remote control has a quick response time of 0.3 seconds, and you will feel press the buttons Obviously.



Image: An illustration demonstrating the remote's quick response time upon button press.

4. SETUP

4.1. Installing Batteries

The EWO'S Roku TV Remote Control is designed for immediate use without any programming. Simply install the batteries to begin operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA 1.5V batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Batteries and a detailed manual are not included with the remote.

Using our remote couldn't be easier since no programming or setup is required.



Image: A hand holding the remote control, with text indicating that no programming or setup is required.

5. OPERATING INSTRUCTIONS

The EWO'S Roku TV Remote Control is designed for intuitive use. Below is a guide to its main functions and button layout:



Image: A comprehensive diagram labeling each button on the remote and describing its specific function.

Button	Function
POWER	Turns your TV on or off.
BACK	Returns to the previous screen.
HOME	Displays your TV's Home screen / Stops playback if you are watching TV or streaming content.

Button	Function
OK	Selects an option from a menu.
DIRECTIONAL KEYPAD	The left arrow will bring up the antenna TV channel list or Smart Guide. The left and right arrows are used in Live TV Pause to select scenes.
VOLUME UP (Side view)	Increases the volume or un-mutes the sound.
VOLUME DOWN (Side view)	Decreases the volume.
MUTE (Side view)	Mutes or un-mutes the sound.
SLEEP	Sets the sleep timer.
VIEW MORE OPTIONS	Gives you easy access to picture settings, display options, and more / Press * on any screen to access options.
CHANNEL RECALL/JUMP BACK AND INSTANT REPLAY	Changes to the previous channel when viewing antenna or cable (no set-top box) programming. Jumps back one position in video when viewing streaming content. Backspaces one letter during menu entries, such as Search.
REWIND	Rewind streaming video jumps to the previous audio track or selection, jumps up one page in menus. This button is also used to rewind paused live TV using Live TV Pause.
FAST FORWARD	Fast forward streaming video jumps to the next audio track or selection, jumps down one page in menus. This button is also used to fast forward paused live TV using Live TV Pause.
PLAY/PAUSE	Pauses or resumes playback. This button is also used to activate and use the Live TV Pause feature when a 16GB USB drive is attached to the TV.
STREAMING CHANNELS SHORTCUTS (Netflix, Disney+, Hulu, VUDU)	When you press a button: If you have not added the channel, displays a sign up page. If you have added the channel, displays the channel's home page. If your TV is off, turns on your TV and displays the channel's home page.



Image: A user relaxing and operating their TV with the EWO'S remote control, illustrating its ease of integration into a home entertainment setup.

6. MAINTENANCE

To ensure the longevity and optimal performance of your EWO'S Roku TV Remote Control, follow these maintenance guidelines:

- **Cleaning:** Keep the remote control clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Environmental Conditions:** Avoid exposing the remote to extreme temperatures, high humidity, or direct sunlight, as these can damage the internal components.
- **Physical Care:** Do not drop the remote or subject it to strong impacts. Handle it with care to prevent damage to buttons or internal circuitry.
- **Battery Storage:** If the remote will not be used for an extended period (e.g., several weeks or months), remove the

batteries to prevent potential leakage and corrosion.

7. TROUBLESHOOTING

7.1. Remote Not Responding

If your remote control is not functioning as expected, consider the following:

- **Check Batteries:** Ensure batteries are inserted correctly with proper polarity (+/-). Replace old batteries with new AAA 1.5V batteries, even if they seem to have some charge left.
- **Line of Sight:** Make sure there are no physical obstructions (e.g., furniture, objects) between the remote control and the TV's infrared sensor. The remote requires a clear line of sight to the TV.
- **Operating Distance:** Confirm you are within the effective operating range of the remote (up to 35 feet). Moving closer to the TV may resolve the issue.
- **No Programming Needed:** This remote does not require any programming or pairing. If it's not working, it's typically a simple issue related to batteries or line-of-sight, not a programming error.

8. SPECIFICATIONS

Feature	Detail
Model Number	RCRUS-22
Brand	EWOS
Package Dimensions	7.09 x 2.13 x 1.14 inches
Item Weight	1.76 ounces
Batteries Required	2 AAA batteries
Special Feature	Ergonomic
Color	Black, Blue
Max Number of Supported Devices	1
Compatible Devices	Television
Manufacturer	EWOS
Date First Available	May 8, 2021



Image: The EWO'S Roku TV Remote Control, showcasing its sleek design and button layout.

9. WARRANTY & SUPPORT

EWO'S is committed to providing high-quality products and excellent customer service. We maintain a high standard of excellence and strive for 100% customer satisfaction.

If you have any questions or concerns about your order, please feel free to contact us before leaving feedback, and we will get back to you within 12 hours.

For further assistance and to explore more EWO'S products, please visit our official store on Amazon: [EWO'S Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B096XLHVS7>

More documents and user manuals: <https://manuals.plus/>