

- Manuals.plus /
- › Oourokhome /
- › Oourokhome Manual Food Processor Instruction Manual

Oourokhome OURAD008G

Oourokhome Manual Food Processor Instruction Manual

Model: OURAD008G

PRODUCT OVERVIEW

The Oourokhome Manual Food Processor is a versatile kitchen tool designed for efficient chopping, mincing, and grinding of various ingredients. Its compact, hand-pull design offers convenience and portability, making it suitable for both home use and outdoor activities.



Image: The Ourokhome Manual Food Processor, 500ml Grey model, shown with finely chopped red onions, demonstrating its primary function. Fresh vegetables are visible in the background.

Key Components

VISIBLE DETAILS



Image: A detailed diagram highlighting the key components of the food processor, including the comfortable pulling handle, extra-thick rope, easy fasten lock, 2-cup capacity bowl, three curved blades, and anti-slip base.

- **Pulling Handle:** Ergonomically designed for a comfortable grip during operation.
- **Extra-Thick Rope:** Durable and wear-resistant for long-lasting use.
- **Easy Fasten Lock:** Ensures the lid is securely attached to the bowl for stable operation.
- **Bowl:** Features a 500ml (16.9 fluid ounces) capacity, suitable for various ingredients.
- **Curved Blades:** Three ultra-sharp 420 stainless steel blades designed for quick and efficient chopping.
- **Anti-Slip Base:** Provides stability and prevents movement during use.

SETUP

Before first use, wash all removable parts (bowl, blades, lid) with warm soapy water. Rinse thoroughly and dry completely. The lid should not be submerged in water due to the pull mechanism.

1. **Assemble the Blades:** Carefully place the blade assembly onto the central post inside the transparent bowl. Ensure it sits firmly.
2. **Prepare Ingredients:** Cut ingredients into smaller, manageable pieces (approximately 1-2 inches) before placing them into the bowl. Do not overfill the bowl; ensure there is enough space for the blades to rotate freely.

3. **Secure the Lid:** Place the lid onto the bowl, aligning the tabs on the lid with the grooves on the bowl. Twist or press down firmly until the lid locks securely in place.

OPERATING INSTRUCTIONS

The Ourokhome Manual Food Processor allows you to control the texture of your ingredients by adjusting the number of pulls.



Image: A visual guide demonstrating the four steps of using the food processor: placing the blade, adding ingredients, securing the lid, and pulling the string to chop.

1. **Load Ingredients:** After assembly, place your prepared ingredients into the bowl.
2. **Hold Firmly:** Place one hand firmly on top of the lid to stabilize the unit on a flat surface.
3. **Pull the String:** With your other hand, grasp the pull handle and pull the string horizontally away from the unit. The blades will rotate inside the bowl.
4. **Control Texture:** Release the string, allowing it to retract. Repeat the pulling motion until the desired consistency is

achieved.

Achieving Desired Consistency

The number of pulls directly correlates with the fineness of the chop. Experiment to find your preferred texture for different foods.

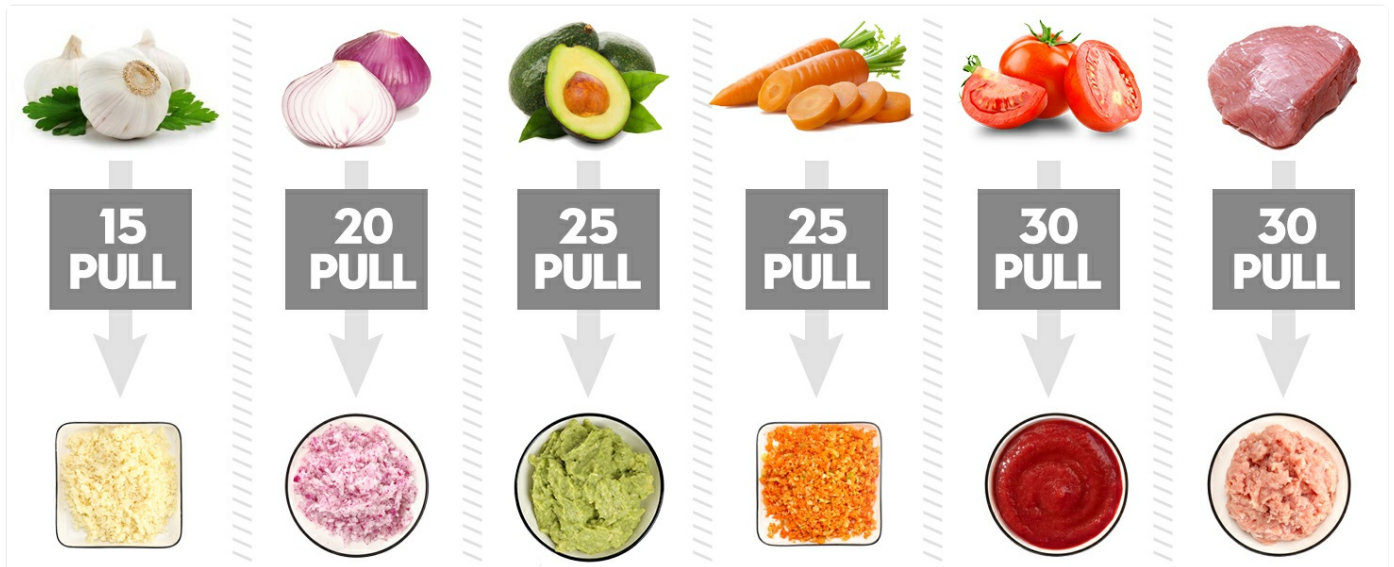


Image: A visual chart illustrating the recommended number of pulls for different ingredients to achieve specific consistencies, such as garlic (15 pulls for minced), onion (20 pulls for finely chopped), avocado (25 pulls for guacamole), carrots (25 pulls for coarse chop), tomatoes (30 pulls for puree), and meat (30 pulls for ground).

- **Coarse Chop:** Approximately 10-15 pulls. Ideal for chunky salsa or salads.
- **Medium Chop:** Approximately 15-20 pulls. Suitable for most vegetable preparations.
- **Fine Mince/Puree:** Approximately 20-30+ pulls. Excellent for garlic, ginger, baby food, or smooth sauces.

Note: For harder ingredients, pull with more force. For softer ingredients, fewer pulls may be needed. Always ensure the blades are not obstructed.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your food processor.

- **Disassembly:** After use, carefully remove the lid and then the blade assembly from the bowl.
- **Cleaning Blades:** The blades are very sharp. Use a brush or sponge to clean them under running water. Avoid direct hand contact with the blade edges.
- **Cleaning Bowl:** The bowl is dishwasher safe. For hand washing, use warm soapy water and rinse thoroughly.
- **Cleaning Lid:** The lid contains the pull mechanism and should **not** be submerged in water. Wipe the lid clean with a damp cloth. If water enters the lid, shake it gently to remove excess water and allow it to air dry completely before storage.
- **Drying:** Ensure all parts are completely dry before reassembling or storing to prevent rust and odor.
- **Storage:** Store the food processor in a clean, dry place. For safety, it is recommended to store the blade assembly inside the bowl with the lid secured.

ULTRA SHARP 420 SS BLADES



420 SS blades



BPA free



Fast and efficient



Blades dishwasher safe

Image: An illustration emphasizing the ultra-sharp 420 stainless steel blades and indicating that the blades are dishwasher safe, while also highlighting the BPA-free material.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blades not rotating or rotating slowly.	Bowl is overfilled. Ingredients are too large or too hard. Lid not securely locked.	Reduce the amount of ingredients. Cut ingredients into smaller pieces. Ensure the lid is properly fastened.
String is difficult to pull or stuck.	Mechanism is jammed. String is tangled.	Ensure no food particles are obstructing the string exit point. Gently pull and release the string to untangle. Do not force.

Problem	Possible Cause	Solution
Food is unevenly chopped.	Not enough pulls. Ingredients are not evenly distributed.	Continue pulling until desired consistency is reached. Shake the bowl gently between pulls to redistribute ingredients.
Water trapped in the lid.	Lid was submerged or rinsed improperly.	Shake the lid vigorously to expel water. Allow to air dry completely, possibly overnight, before next use.

SPECIFICATIONS

Feature	Detail
Brand	Ourokhome
Model Name	Food chopper
Model Number	OURAD008G
Color	Gray
Bowl Capacity	500 ml (16.9 Fluid Ounces)
Product Dimensions	4.9"D x 4.9"W x 3.3"H
Item Weight	9.1 ounces
Blade Material	420 Stainless Steel
Power Source	Manual Winding
Care Instructions	Dishwasher Safe (Bowl and Blades only)

SIZE

12.4CM/4.9In



8.3cm
/3.3In



8cm/3.15In

Image: A diagram illustrating the physical dimensions of the Ourokhome Manual Food Processor, showing its height, width, and depth.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Ourokhome customer service directly. Details are typically available on the manufacturer's official website or through the retailer where the product was purchased.

Ourokhome aims to provide high-quality products and customer satisfaction. If you encounter any issues or have questions regarding your manual food processor, please reach out to their support team for assistance.

You can visit the official Ourokhome store on Amazon for more information and product offerings: [Ourokhome Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B096Z5C4LK>

More documents and user manuals: <https://manuals.plus/>