

Glory Star GAD101

Glory Star GAD101 10-inch Advertising Displayer Media Player User Manual

Model: GAD101

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Glory Star GAD101 10-inch Advertising Displayer Media Player. Please read this manual thoroughly before using the device to ensure proper functionality and safety.

Product Overview

The Glory Star GAD101 is a 10-inch media player designed for advertising display applications. It features a 1024x600 resolution screen, supports auto-start and auto-play functions, and can be updated via SD card or USB stick. Key features include a motion sensor for activation and various mounting options.

Package Contents

- Glory Star GAD101 10-inch Advertising Displayer
- Power Adapter (AC)
- Remote Control
- Mounting Bracket (FIX014)
- SD Card (pre-installed or included separately)
- User Manual (this document)

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the device or injury to yourself.

- Do not expose the device to water or excessive moisture.
- Avoid placing the device near heat sources or in direct sunlight for extended periods.
- Use only the provided power adapter.

- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the device during operation.

3. SETUP

3.1 Physical Installation

The GAD101 displayer can be wall-mounted, tablet-mounted, or shelf-mounted using the included FIX014 bracket.



Image 3.1: The FIX014 mounting bracket, designed for versatile installation of the displayer.

1. **Choose a Location:** Select a suitable location for your displayer, considering visibility, power access, and environmental conditions.
2. **Attach Mounting Bracket:** Secure the FIX014 mounting bracket to the desired surface (wall, shelf, or table) using appropriate hardware (not included). Ensure it is stable and level.
3. **Mount the Displayer:** Align the VESA mounting holes on the back of the GAD101 with the bracket and secure it using screws.



Image 3.2: Rear view of the GAD101 displayer, highlighting the power input, USB port, SD card slot, and VESA mounting holes.

3.2 Connecting Power

1. Locate the AC power input port on the back of the displayer.
2. Connect the provided AC power adapter to the displayer.
3. Plug the power adapter into a standard electrical outlet. The device will automatically power on.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

The GAD101 is designed for auto-start functionality. Once connected to power, it will automatically turn on and begin playing content.

- **Power On:** Connect the AC power adapter. The device will power on automatically.
- **Power Off:** Disconnect the AC power adapter from the device or the wall outlet.

4.2 Content Playback (SD Card)

The displayer plays content directly from an inserted SD card. Ensure your content is properly formatted and placed in the root directory of the SD card.

1. Prepare your media files (images, videos) on an SD card.
2. Locate the SD card slot on the back of the displayer.
3. Insert the SD card into the slot until it clicks into place.
4. The displayer will automatically detect the SD card and begin looping the content.



Image 4.1: Front view of the GAD101 displayer showing a typical advertising content screen.

4.3 Updating Content (USB Stick)

Content on the SD card can be updated automatically using a USB stick. A password may be required for this operation if enabled.

1. Prepare your new media files on a USB stick.
2. Insert the USB stick into the USB port on the back of the displayer.
3. The displayer will detect the USB stick and automatically transfer the new content to the SD card, overwriting existing files if configured to do so.
4. Once the update is complete, remove the USB stick. The displayer will then play the updated content.

4.4 Motion Sensor Functionality

The GAD101 features a motion sensor that can activate the display when a person passes by, conserving power and enhancing engagement.

- When motion is detected within the sensor's range, the display will activate and begin playing content.
- After a period of no detected motion, the display may enter a low-power state or turn off, depending on settings.

4.5 Using the Remote Control

The included remote control allows for basic navigation and settings adjustments. Refer to the remote control's specific instructions for detailed button functions.

5. MAINTENANCE

5.1 Cleaning the Displayer

- Ensure the device is powered off and unplugged before cleaning.

- Use a soft, dry, lint-free cloth to gently wipe the screen and exterior surfaces.
- For stubborn marks, lightly dampen the cloth with water or a screen-safe cleaning solution. Do not spray liquids directly onto the device.
- Avoid using abrasive cleaners, solvents, or alcohol-based solutions, as these can damage the finish.

5.2 Storage

If storing the device for an extended period, ensure it is clean, dry, and stored in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to use the original packaging for protection.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Display is off	Power adapter not connected; Power outlet issue	Ensure power adapter is securely connected to the device and a working power outlet.
Content not playing	SD card not inserted; Corrupt files; Incorrect file format	Insert SD card correctly. Ensure media files are compatible and not corrupted. Try reformatting the SD card and reloading content.
USB update not working	USB stick not detected; Password required; Incorrect file structure on USB	Ensure USB stick is properly inserted. Enter password if prompted. Verify content is in the correct directory on the USB stick.
Motion sensor not responding	Sensor blocked; Incorrect settings	Ensure the motion sensor is clear of obstructions. Check device settings via remote control if available.

7. SPECIFICATIONS

Feature	Detail
Model	GAD101
Screen Size	10.1 Inches
Screen Resolution	1024x600
Color	Black
Product Dimensions (LxWxH)	9.84 x 1.1 x 4.69 inches
Power Source	AC
Memory Storage Capacity	8 GB (SD Card)
Hardware Interface	Secure Digital Card, USB
Special Features	Auto-start, Auto-play, Motion Sensor, Kensington Lock compatible

8. WARRANTY AND SUPPORT

8.1 Legal Disclaimer

Glory Star reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Glory Star, the Glory Star logo, STAR CONTROL and STAROS are either trademarks or registered trademarks of Glory Star Group Limited. All other trademarks are the property of their respective owners.

8.2 Customer Support

For technical support or warranty inquiries, please visit the official Glory Star website or contact their customer service department. Contact information can typically be found on the product packaging or the official brand website.