

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [artfone](#) /

› [artfone C10 Flip Phone User Manual](#)

artfone C10

artfone C10 Flip Phone User Manual

Model: C10

INTRODUCTION

The artfone C10 is a user-friendly flip phone designed with simplicity and essential features in mind, making it ideal for seniors. It combines ease of use with practical functionalities such as dual screens, large backlit keys, dual SIM support, and a dedicated emergency SOS button. This manual provides comprehensive instructions for setting up, operating, and maintaining your artfone C10 phone.

Please read this manual carefully to ensure proper use and to maximize the benefits of your device.

SETUP

1. Package Contents

Before you begin, please check the package for the following items:

- 1 x artfone C10 Mobile Phone
- 1 x Battery
- 1 x Charger (Power Adapter)
- 1 x USB Cable
- 1 x Desktop Charging Station
- 1 x User Manual

2. Battery Installation

1. Open the back cover of the phone by gently prying it from the notch.
2. Align the battery's gold contacts with the terminals inside the battery compartment.
3. Press the battery down gently until it clicks into place.
4. Replace the back cover, ensuring it is securely closed.

3. SIM Card and MicroSD Card Installation

The artfone C10 supports Dual SIM cards and one MicroSD card for expanded storage (up to 32GB).

1. With the back cover and battery removed, locate the SIM card slots and MicroSD card slot.

2. Insert your SIM card(s) into the designated slots with the gold contacts facing down, following the orientation indicated on the phone.
3. If using a MicroSD card, insert it into its slot until it clicks.
4. Reinstall the battery and back cover.

4. Charging the Phone

It is recommended to fully charge the battery before first use.



Image: The artfone C10 phone placed in its desktop charging station, illustrating the convenient charging method.

- **Using the Charging Station:** Connect the charger to a power outlet and then to the desktop charging station. Place the phone into the charging station, ensuring it is properly seated. The phone will indicate charging.
- **Using the USB Cable:** Connect the USB cable to the phone's charging port (USB Type C) and the other end to the charger. Plug the charger into a power outlet.

The phone features automatic power-off protection when fully charged.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the Power/End Call button (red button) until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button until the power-off options appear, then select "Power off".

2. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the large keypad. Press the Call button (green button) to dial.
- **Receiving a Call:** When the phone rings, press the Call button (green button) to answer. To end a call, press the Power/End Call button (red button).

AAC-Empfänger wie iphone

Stellen Sie sicher, dass jeder Anruf laut und deutlich ist.



Image: The artfone C10 phone with its AAC receiver highlighted, ensuring loud and clear call quality.

3. Sending and Receiving SMS

- Navigate to the "Messages" menu.
- Select "Write message" to compose a new SMS. Enter the recipient's number and your message.

- To read messages, select "Inbox" from the Messages menu.

4. Dual Screen Functionality

The artfone C10 features two independent screens for your convenience.

- **Main LCD Screen (2.4 inches):** Provides a clear and bright display for all phone operations, including menus, contacts, and messages.
- **Secondary External Screen (1.77 inches):** Displays essential information such as missed calls, new SMS messages, and the current time without needing to open the flip.

Externer 1,8 "Bildschirm und Empfänger

Nachricht / Anrufe / Aufgaben / Alarm Erinnerung



Image: The artfone C10's external 1.8-inch screen, showing the time and date, providing quick access to important information without opening the phone.

5. SOS Emergency Function

The SOS button allows you to quickly call or send an SMS to pre-programmed emergency contacts.

Im Notfall mit einem Klickanruf.



Die Pflege älterer Menschen
beginnt mit der Sicherheit



Image: The artfone C10's dedicated SOS button on the back, designed for quick access to emergency contacts.

- Setting up SOS Contacts:** Go to "Settings" > "SOS Settings" to add up to 5 emergency numbers. These numbers will be called in sequence until one answers.
- Using the SOS Button:** In an emergency, press and hold the SOS button on the back of the phone for a few seconds. The phone will automatically dial the pre-set emergency numbers and send an emergency SMS.

6. Other Useful Functions

- Camera:** Access the camera from the main menu to take photos.
- Flashlight:** Activate the built-in flashlight for illumination.
- FM Radio:** Listen to your favorite FM radio stations.
- Bluetooth:** Connect to Bluetooth headsets or other devices.
- Alarm Clock:** Set multiple alarms for reminders.
- Calculator:** Perform basic calculations.

Einfach klar zu sehen

Große Ikone, Große Schrift, Große Taste, 2.4 Zoll großer LCD-Bildschirm.



Image: The artfone C10's main screen displaying large, easy-to-read icons for various functions like Camera, SOS, Calendar, and Phonebook, enhancing user accessibility.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** Do not expose the battery to extreme temperatures. If the phone will not be used for an extended period, charge it periodically to maintain battery health.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and moisture.
- **Avoid Drops:** Handle the phone with care to prevent damage from drops or impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Phone does not turn on.	Battery is low or not installed correctly.	Charge the battery. Ensure the battery is correctly installed.
No network signal.	Out of network coverage area; SIM card not installed correctly.	Move to an area with better signal. Reinstall the SIM card.
Cannot hear caller or caller cannot hear me.	Volume too low; microphone/speaker blocked.	Adjust call volume. Ensure microphone and speaker are not covered.
Phone freezes or becomes unresponsive.	Temporary software glitch.	Remove and reinsert the battery to restart the phone.
Battery drains quickly.	Frequent use; old battery.	Reduce usage. Consider replacing the battery if it's old.

SPECIFICATIONS

Feature	Detail
Brand	artfone
Model Number	C10
Operating System	Nucleus OS
Main Display Size	2.4 inches
External Display Size	1.77 inches
Battery Capacity	1000 mAh Lithium-ion
Standby Time	Up to 7 days
SIM Support	Dual SIM
Network Bands	2G GSM: 850/900/1800/1900 MHz
MicroSD Card Support	Max 32 GB
Connectivity	Bluetooth, USB Type C
Headphone Jack	3.5mm
Special Features	SOS Button, Large Backlit Keys, Charging Station, FM Radio, Camera, Flashlight
Supported Languages	German, English, French, Italian, Spanish

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where you purchased the artfone C10. Keep your proof of purchase for warranty claims.

For further assistance, you may also visit the official artfone website or contact their customer service directly.

Related Documents - C10

 <p>CS188</p> <p>h P1-9 Deutsch P10-19 Français P20-36 Italiano P37-45 Español P46-54</p>	<p>Artfone CS188 User Manual: Features, Operation, and FAQs</p> <p>Comprehensive user manual for the Artfone CS188 mobile phone, detailing its features, how to use it, SOS function, call making, settings, and troubleshooting. Designed for ease of use, especially for elderly users.</p>
 <p>Artfone C1+</p>	<p>Artfone C1+ Senior Mobile Phone User Manual and Features</p> <p>Detailed user manual for the Artfone C1+ senior mobile phone, covering features, operation, SOS function, FAQ, and specifications. Learn how to make calls, adjust volume, and restore factory settings.</p>
 <p>Artfone G3 Flip</p>	<p>Artfone G3 Flip Phone User Manual</p> <p>Comprehensive user manual for the Artfone G3 Flip phone, detailing features, operation, and FAQs. Learn how to make calls, use the flashlight, SOS function, and manage settings.</p>
 <p>artfone® c1+</p> <p>English P1-8 Deutsch P9-17 Français P18-34 Italiano P35-42 Español P43-50</p>	<p>Artfone C1+ User Manual and Guide</p> <p>User manual for the Artfone C1+ mobile phone, detailing features, operation, SOS function, settings, and frequently asked questions in multiple languages.</p>
 <p>artfone® cs181</p> <p>English P1-8 Deutsch P9-18 Français P19-36 Italiano P36-45 Español P46-54</p>	<p>Artfone CS181 User Manual: Features and Operation Guide</p> <p>Comprehensive guide to the Artfone CS181 mobile phone, covering setup, features like SOS, calling, volume control, and frequently asked questions for easy operation.</p>



[Artfone CS181 Senior Phone - Dual SIM, SOS User Guide](#)

Comprehensive user guide for the Artfone CS181 Senior Phone, detailing its features, operation, SOS function, call making, settings, and frequently asked questions. This dual SIM feature phone is designed for ease of use.

Documents - artfone – C10

