

## Cherry JD-8560US-2

# CHERRY Stream Desktop Recharge Keyboard and Mouse Wireless Combo

Model: JD-8560US-2

## INTRODUCTION

The CHERRY STREAM DESKTOP RECHARGE is a premium wireless keyboard and mouse set designed for enhanced functionality and comfortable use. This combo features rechargeable and replaceable batteries, along with AES encryption for secure wireless communication. This manual provides essential information for setting up, operating, and maintaining your CHERRY Stream Desktop Recharge combo.

## SETUP

### Package Contents

- CHERRY Stream Desktop Recharge Keyboard
- CHERRY Stream Desktop Recharge Mouse
- USB-C Charging Cable
- USB Receiver
- 2 AAA NiMH Rechargeable Batteries (pre-installed)

### Initial Setup and Connection

1. **Insert USB Receiver:** Locate the USB receiver, typically stored within the mouse or keyboard battery compartment. Plug the USB receiver into an available USB port on your computer.
2. **Power On Devices:** Ensure the keyboard and mouse are powered on. There is usually a power switch on the underside of each device.
3. **Battery Installation/Charging:** The combo comes with pre-installed NiMH rechargeable batteries. For initial use, or if the devices are not responding, connect the keyboard and mouse to your computer using the provided USB-C cable to charge them. You can continue to work while charging.
4. **Automatic Connection:** The keyboard and mouse should automatically connect to your computer via the USB receiver. No additional drivers are typically required for basic functionality.



Figure 1: The CHERRY Stream Desktop Recharge Keyboard and Mouse Combo.

## OPERATING INSTRUCTIONS

---

### Keyboard Usage

The CHERRY Stream Desktop Recharge keyboard offers a comfortable and quiet typing experience. It features a full-size layout with a numeric keypad and dedicated media control keys for convenient access to volume, playback, and other functions. The keys provide a satisfying tactile feedback for efficient typing.

- **Function Keys (F1-F12):** These keys often have secondary functions (e.g., media controls, brightness adjustment) accessible by pressing the **Fn** key simultaneously. Refer to your operating system's documentation for specific key assignments.
- **Numeric Keypad:** Use the dedicated numeric keypad for quick data entry. Ensure **Num Lock** is enabled if needed.

### Mouse Usage

The accompanying mouse is designed for precision and comfort. It features standard left and right-click buttons, a scroll wheel, and side buttons for navigation. The mouse utilizes AES encryption for secure wireless communication.

- **Left/Right Click:** Standard mouse button functions.
- **Scroll Wheel:** Scroll through documents and web pages. The scroll wheel provides tactile feedback.
- **Side Buttons:** Often configured for "back" and "forward" navigation in web browsers. These can typically be customized via software (if available from Cherry).



Figure 2: User interacting with the CHERRY Stream Desktop Recharge Combo.

## MAINTENANCE

### Cleaning

To maintain optimal performance and appearance, regularly clean your keyboard and mouse. Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid excessive moisture. Note that the keyboard keycaps are not designed to be easily removed for cleaning underneath.

### Battery Care

The CHERRY Stream Desktop Recharge utilizes NiMH rechargeable batteries. These batteries are designed to last for months on a single charge. When the battery indicator (if present) signals low power, connect the devices via the USB-C cable to recharge. The batteries are replaceable, extending the lifespan of your combo.

- Use only specified NiMH rechargeable batteries.
- Do not expose batteries to extreme temperatures.
- Recycle old batteries according to local regulations.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low battery; USB receiver disconnected; Device not powered on; Interference.	Charge devices via USB-C; Re-insert USB receiver; Ensure power switch is ON; Move devices closer to receiver or away from other wireless devices.

Problem	Possible Cause	Solution
Mouse scroll wheel is jerky or inconsistent	Dust/debris in scroll mechanism; Software issue.	Gently blow compressed air into the scroll wheel area; Check for updated drivers or customization software from Cherry's official website.
Keys are sticky or unresponsive	Spillage; Debris under keycap.	Clean the surface of the keyboard with a damp cloth. As keycaps are not easily removable, avoid attempting to force them off. If spillage occurs, disconnect immediately and allow to dry thoroughly.

If problems persist, visit the official Cherry support website for further assistance or contact customer service.

## SPECIFICATIONS

**Brand:** Cherry

**Model Number:** JD-8560US-2

**Product Dimensions:** 18.2 x 6.53 x 1.34 inches

**Item Weight:** 2.99 pounds

**Batteries:** 2 AAA NiMH rechargeable batteries (included)

**Connectivity Technology:** Radio Frequency, USB

**Special Feature:** Rechargeable

**Compatible Devices:** Laptop, Personal Computer

**Color:** Black

**Manufacturer:** CHERRY

**First Available Date:** June 10, 2021

## WARRANTY AND SUPPORT

For warranty information, technical support, or to download additional software (such as Cherry Keys), please visit the official Cherry website or contact Cherry customer service. You can also find more information on the [Cherry Brand Store on Amazon](#).

This product is sold by CHERRY AMERICAS.

## Related Documents - JD-8560US-2



### [CHERRY STREAM DESKTOP RECHARGE Wireless Keyboard and Mouse Combo User Manual](#)

Comprehensive user manual for the CHERRY STREAM DESKTOP RECHARGE wireless keyboard and mouse combo, covering setup, usage, safety, troubleshooting, and technical specifications.

	<p><a href="#"><u>CHERRY STREAM DESKTOP Wireless Keyboard and Mouse - User Manual</u></a></p> <p>User manual for the CHERRY STREAM DESKTOP wireless keyboard and mouse. Provides setup instructions, operating guidelines, troubleshooting tips, technical specifications, and safety information.</p>
	<p><a href="#"><u>CHERRY STREAM MOUSE ULTIMATE User Manual</u></a></p> <p>Comprehensive user guide for the CHERRY STREAM MOUSE ULTIMATE wireless mouse, covering setup, features, troubleshooting, and technical specifications.</p>
	<p><a href="#"><u>CHERRY DW 8000 Wireless Desktop - User Manual and Setup Guide</u></a></p> <p>Comprehensive user manual for the CHERRY DW 8000 wireless keyboard and mouse set. Includes setup instructions, troubleshooting tips, technical specifications, and safety information.</p>
	<p><a href="#"><u>CHERRY DW 9100 SLIM Wireless Keyboard and Mouse Combo - User Manual</u></a></p> <p>Comprehensive user manual for the CHERRY DW 9100 SLIM wireless keyboard and mouse, covering setup, operation, troubleshooting, and technical specifications. Supports Bluetooth and RF connections.</p>
	<p><a href="#"><u>CHERRY STREAM KEYBOARD ULTIMATE - Wireless Keyboard User Manual</u></a></p> <p>Comprehensive user manual for the CHERRY STREAM KEYBOARD ULTIMATE, detailing setup, connection methods (Bluetooth, 2.4 GHz wireless, cable), features, maintenance, and troubleshooting for this wireless keyboard.</p>