

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Schneider](#) /

› [SCHNEIDER LED39SC410K 39-inch LED TV User Manual](#)

Schneider LED39SC410K

SCHNEIDER LED39SC410K 39-inch LED TV User Manual

Model: **LED39SC410K** | Brand: **Schneider**

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating the television and retain them for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

2. PRODUCT OVERVIEW

The SCHNEIDER LED39SC410K is a 39-inch LED HD television designed for versatile home entertainment. It features a high-definition display, multiple connectivity options, and advanced functions like PVR and Hotel Mode.



Figure 2.1: Front view of the SCHNEIDER LED39SC410K television. This image shows the sleek design of the 39-inch LED TV with its display and minimal bezels.



Figure 2.2: The SCHNEIDER LED39SC410K TV highlighting key features such as HD resolution, HDMI connectivity, USB support, Dolby Audio, and DVB-T/T2/C tuner compatibility.

3. SETUP GUIDE

3.1. Unboxing and Stand Installation

Carefully remove the television from its packaging. Place the TV face down on a soft, clean surface to prevent screen damage. Attach the included stands to the designated slots at the bottom of the TV using the provided screws. Ensure the stands are securely fastened.

3.2. Connecting Peripherals

The LED39SC410K offers a variety of connection ports on its rear panel. Refer to the image below for port locations and connect your devices accordingly.



Figure 3.1: Rear view of the SCHNEIDER LED39SC410K, illustrating the various input and output ports available for connecting external devices.



Figure 3.2: Common connection cables. Use the appropriate cables for your devices, such as HDMI for high-definition video and audio, or USB for media playback.

- **HDMI (1.4):** Connect Blu-ray players, game consoles, or set-top boxes. The TV has multiple HDMI ports.
- **USB (2.0):** Insert USB drives for media playback (movies, music, photos) or for PVR recording. Two USB ports are available.
- **VGA:** Connect a computer or laptop.
- **Digital Audio Out:** For connecting to external audio systems.
- **CI Port:** For Conditional Access Modules (CAM) to decrypt pay-TV channels.
- **Headphone Output:** For private listening.
- **Composite Video Input (AV):** For older devices using RCA cables.
- **Component Input (YPbPr):** For higher quality analog video connections.

3.3. Powering On and Initial Setup

1. Connect the power cord to the TV and then to a wall outlet.
2. Press the power button on the TV or the remote control to turn on the TV.
3. Upon first use, the TV will guide you through the initial setup process, including language selection, country, and channel scanning.
4. Select your region and perform an automatic channel scan for DVB-T2/C/S2 signals to receive digital broadcasts.

4. OPERATING INSTRUCTIONS

4.1. Basic TV Functions

- **Power On/Off:** Use the **POWER** button on the remote control or TV.
- **Volume Control:** Use the **VOL +/-** buttons to adjust the volume.
- **Channel Selection:** Use the **CH +/-** buttons or number pad to change channels.
- **Input Source:** Press the **SOURCE** or **INPUT** button to select between HDMI, USB, VGA, AV, or Component inputs.
- **Menu Navigation:** Use the arrow keys and **OK/ENTER** button to navigate through the on-screen menu.

4.2. PVR Function with Time Shift

The PVR (Personal Video Recorder) function allows you to record digital TV programs to a connected USB storage device. Time Shift enables you to pause live TV and resume watching later.

1. Connect a USB drive (minimum 8GB, formatted to FAT32 or NTFS) to one of the TV's USB 2.0 ports.
2. Access the PVR menu from the main menu to set up recordings or activate Time Shift.
3. Follow the on-screen prompts to schedule recordings or use the Time Shift feature during live broadcasts.

4.3. USB Media Playback

Enjoy your movies, music, and photos directly on the TV by connecting a USB storage device.

1. Insert your USB drive into a USB port on the TV.
2. The TV may automatically prompt you to open the media browser, or you can select the USB input from the **SOURCE** menu.
3. Navigate through your files and select the media you wish to play.

4.4. Hotel Mode

Hotel Mode provides advanced control over TV settings, ideal for hospitality environments. This mode allows administrators to restrict certain functions, set default channels, and manage volume limits.

- Accessing Hotel Mode typically requires a specific sequence of remote control buttons or a password. Refer to the detailed service manual for specific instructions on enabling and configuring Hotel Mode.
- Features include power-on channel, maximum volume limit, input source lock, and menu lock.

4.5. Parental Control

The parental control feature allows you to restrict access to certain channels or programs based on rating or age. This feature requires setting up a PIN code.

1. Navigate to the Parental Control section within the TV's main menu.
2. Set a new PIN code (default is usually 0000 or 1234, check your specific manual).
3. Enable channel lock or program rating restrictions as desired.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your television.

5.1. Cleaning the Screen

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a specialized screen cleaner.
- Do not spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

5.2. Cleaning the Cabinet

- Wipe the cabinet with a soft, dry cloth.
- Do not use any liquid or spray cleaners on the cabinet.

5.3. General Care

- Ensure adequate ventilation around the TV. Do not cover ventilation openings.
- Avoid placing the TV in direct sunlight or near heat sources.
- Protect the TV from extreme temperatures and humidity.
- When moving the TV, always lift it carefully and avoid putting pressure on the screen.

6. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your television. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working; TV in standby mode.	Ensure power cord is securely plugged in. Test the outlet with another device. Press the power button on the remote or TV.
No picture, but sound is present	Incorrect input source selected; Loose video cable connection.	Press the SOURCE button to select the correct input. Check video cable connections (HDMI, AV, VGA).
No sound, but picture is present	Volume is muted or too low; Audio cable loose; External audio system issues.	Press the MUTE button or increase volume. Check audio cable connections. Ensure external audio system is on and configured correctly.
"No Signal" message	Incorrect input source; Antenna/cable not connected; External device not powered on.	Verify the correct input source. Check antenna/cable connection. Ensure connected devices (e.g., set-top box) are powered on.
Remote control not working	Batteries are dead or incorrectly inserted; Obstruction between remote and TV.	Replace batteries, ensuring correct polarity. Remove any obstructions. Point remote directly at the TV's IR sensor.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for the SCHNEIDER LED39SC410K television.



Figure 7.1: Approximate dimensions of the SCHNEIDER LED39SC410K TV, showing height, width, and depth measurements.

Feature	Description
Model Name	LED39SC410K
Screen Size	39 inches
Display Technology	LED LCD
Resolution	1366 x 768 pixels (HD)
Refresh Rate	60 Hz
Tuner Type	DVB-T2/C/S2 (Digital Terrestrial/Cable/Satellite)
HDMI Ports	Multiple (HDMI 1.4)
USB Ports	2 x USB 2.0
Other Connections	1x VGA, Digital Audio Out, CI Port, Headphone Output, Composite Video (AV), Component (YPbPr)
Special Features	PVR with Time Shift, Parental Control, Hotel Mode, USB Media Playback
Color	Black
Power Source	AC Power
Included Components	1 x 39" LED TV, 1 User Manual, 1 Remote Control

8. WARRANTY AND SUPPORT

Schneider products are designed for reliability and performance. For warranty information and customer support, please refer to the official Schneider website or contact their authorized service centers.

- Spare Parts Availability:** Information regarding spare parts availability is not provided in this document. Please contact Schneider customer service for details.
- Software Updates:** Information regarding guaranteed software updates is not provided in this document. Please check the manufacturer's website for the latest software and firmware updates.
- Contact Support:** For technical assistance, troubleshooting beyond this manual, or warranty claims, please visit the official Schneider support portal or contact their customer service hotline.