



Manuals.plus /

› SAMSUNG /

› Samsung ecobubble WF70F5E0W2W Washing Machine User Manual

SAMSUNG WF70F5E0W2W

Samsung ecobubble WF70F5E0W2W Washing Machine User Manual

Model: WF70F5E0W2W

[Introduction](#)

[Safety Information](#)
[Troubleshooting](#)

[Product Overview](#)
[Specifications](#)

[Setup](#) [Operation](#)
[Warranty & Support](#)

[Maintenance](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Samsung ecobubble WF70F5E0W2W Washing Machine. Please read these instructions thoroughly before operating the appliance and retain them for future reference. Proper installation, operation, and maintenance will ensure optimal performance and extend the lifespan of your washing machine.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before attempting any service.

3. PRODUCT OVERVIEW

The Samsung ecobubble WF70F5E0W2W is a 7 kg capacity front-load washing machine designed for efficient and thorough laundry care. It features ecobubble technology for effective cleaning and an A+++ energy efficiency rating.



Figure 3.1: Front view of the Samsung ecobubble WF70F5E0W2W Washing Machine, showing the control panel, detergent drawer, and main door.

Key Features:

- **ecobubble Technology:** Froths detergent with air and water before the cycle starts, generating small bubbles that penetrate fabrics more rapidly for effective cleaning even at lower temperatures.
- **7 kg Capacity:** Accommodates a substantial amount of laundry, suitable for family use.
- **1200 rpm Max Spin Speed:** Ensures efficient water extraction, reducing drying time.
- **A+++ Energy Efficiency:** Designed for low energy consumption, contributing to reduced household bills.
- **Stain Away Feature:** Helps tackle stubborn stains like blood, chocolate, and grass.
- **Front Load Design:** Offers convenient loading and unloading of laundry.
- **Push Button Control Console:** Intuitive interface for program selection and settings adjustment.



Figure 3.2: Angled view of the washing machine, highlighting its compact design and side panel details.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine. This appliance is designed for freestanding installation.

4.1 Unpacking

- Remove all packaging materials, including the base packaging and any protective films.
- Locate and remove the transit bolts from the rear of the machine. These bolts secure the drum during transport and must be removed before use. Keep them for future transport if needed.

4.2 Location

- Place the washing machine on a firm, level surface.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or locations where temperatures may drop below freezing.

4.3 Leveling

- Adjust the leveling feet at the bottom of the machine to ensure it is perfectly stable and level. Use a spirit level to verify.
- Tighten the lock nuts on the leveling feet to prevent movement during operation.

4.4 Water and Drain Connections

- Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

4.5 Power Connection

- Plug the power cord into a grounded electrical outlet.

- Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

This section guides you through the basic steps of operating your washing machine.



Figure 5.1: The washing machine door open, revealing the stainless steel drum where laundry is loaded.

5.1 Loading Laundry

- Open the front door.
- Load laundry into the drum, ensuring not to overload the machine. A 7 kg capacity means approximately 7 kg of dry clothes.
- Close the door firmly until it clicks.

5.2 Adding Detergent and Additives

- Pull out the detergent drawer located on the top left of the control panel.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener or other additives to their designated compartments if desired.
- Push the detergent drawer back in completely.

5.3 Selecting a Wash Cycle

- Turn the program selector dial on the control panel to choose your desired wash cycle (e.g., Cotton, Synthetics, Delicates, Wool).
- The display will show the default settings for the selected cycle.

5.4 Adjusting Options (Push Button Control)

- Use the push buttons on the control console to adjust specific options such as temperature, spin speed, or to activate special features like "Stain Away" or "Rinse+".
- The available cycle options include **Drain**, **Rinse**, and **Spin**, which can be selected independently or as part of a full wash program.

5.5 Starting the Wash

- Press the Start/Pause button to begin the wash cycle.
- The machine will automatically lock the door and begin filling with water.

5.6 After the Wash Cycle

- Once the cycle is complete, the machine will signal with an audible alert and/or a message on the display.
- The door will unlock automatically after a short delay.
- Remove laundry promptly to prevent wrinkles and odors.
- Leave the door slightly ajar to allow the drum to air dry and prevent mildew.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and efficient operation of your washing machine.

6.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6.2 Cleaning the Detergent Drawer

- Periodically remove the detergent drawer and rinse it under running water to remove any detergent residue.
- Clean the drawer housing with a small brush if necessary.

6.3 Cleaning the Door Seal

- Wipe the rubber door seal after each wash to remove lint, dirt, or moisture.
- This helps prevent mold and unpleasant odors.

6.4 Cleaning the Drain Filter

- Locate the drain filter, usually at the bottom front of the machine (refer to Figure 3.1 for general location).
- Place a shallow tray underneath to catch any residual water.
- Carefully unscrew and remove the filter.
- Clean any lint, debris, or foreign objects from the filter and its housing.
- Screw the filter back in securely.



Figure 6.1: Top-down angled view of the washing machine with the door open, showing the drum and control panel. This perspective can be useful for understanding access points for maintenance.

7. TROUBLESHOOTING

Before contacting service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Start/Pause button not pressed; Power outage.	Check power connection; Ensure door is securely latched; Press Start/Pause; Check household circuit breaker.
No water filling	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open water tap; Straighten hose; Check water supply pressure.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Straighten drain hose; Clean the drain filter (refer to Section 6.4).
Excessive vibration/noise	Machine not level; Transit bolts not removed; Uneven load.	Adjust leveling feet (refer to Section 4.3); Remove transit bolts (refer to Section 4.1); Redistribute laundry evenly in the drum.
Error code displayed	Specific malfunction.	Refer to the full user manual or contact customer support with the specific error code.

8. SPECIFICATIONS

The following are the technical specifications for the Samsung ecobubble WF70F5E0W2W Washing Machine:

Feature	Detail
Brand	SAMSUNG
Model	WF70F5E0W2W
Capacity	7 kg (15.43 Pounds)
Max Spin Speed	1200 RPM
Energy Efficiency	A+++
Installation Type	Freestanding
Special Features	High Efficiency, ecobubble Technology, Stain Away
Color	White
Control Console	Push Button
Access Location	Front Load
Material (Drum)	Stainless Steel
Item Weight	45 Kilograms
Package Dimensions	85 x 62 x 59 cm
Cycle Options	Drain, Rinse, Spin (and various wash programs)

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Samsung website for your region. For technical support, service requests, or to purchase genuine spare parts, please contact Samsung customer service. Ensure you have your model number (WF70F5E0W2W) and serial number ready when contacting support.