

Manuals.plus /

> Fol /

> Fol DVB-1416 Digital HD TV Receiver User Manual

Fol DVB-1416

Fol DVB-1416 Digital HD TV Receiver
USER MANUAL

Brand: Fol | Model: DVB-1416

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Fol DVB-1416 Digital HD TV Receiver. This device is designed to convert digital television signals for display on your television, offering features such as real-time program recording, automatic and manual channel search, an Electronic Program Guide (EPG), a favorite channel list, and parental controls. Please read this manual thoroughly before using the product to ensure proper functionality and safety.

PACKAGE CONTENTS

Please check the box for the following items:

- Fol DVB-1416 Digital HD TV Receiver
- Remote Control
- RCA Cable (Red, White, Yellow)
- AAA Batteries for Remote Control (2x)
- User Manual



Image: The product box for the Fol DVB-1416 Digital HD TV Receiver, showing the device and its accessories.

PRODUCT OVERVIEW

Front Panel



Image: Front view of the Fol DVB-1416 receiver, showing the digital display, front USB port, and control buttons.

- **Digital Display:** Shows channel number or time.

- **USB Port (Front):** For connecting USB storage devices for media playback or recording.
- **Control Buttons:** Power, Channel Up/Down, Volume Up/Down (may vary by model).

Rear Panel



Image: Rear view of the Fol DVB-1416 receiver, displaying various input and output ports.

- **ANT IN:** Connect your digital TV antenna here.
- **ANT OUT:** For connecting to another TV or device.
- **HDMI Output:** Connect to your TV for high-definition video and audio.
- **USB 2.0 Port (Rear):** Additional USB port for storage devices.
- **Coaxial Output:** Digital audio output.
- **RCA (Video/L/R Audio) Output:** Connect to older TVs using the provided RCA cable.
- **Power Input:** Connect the power adapter.

Remote Control





Image: The remote control for the Fol DVB-1416 receiver, showing various function buttons.

The remote control allows you to access all functions of the receiver. Insert the two AAA batteries into the remote control before use. Key functions include Power, TV/Radio mode, Audio, Mute, Channel Up/Down, Volume Up/Down, Menu, EPG, Info, Zoom, FAV (Favorites), Timer, Record, and numeric buttons for direct channel input.

SETUP INSTRUCTIONS

1. **Connect the Antenna:** Connect your digital TV antenna (indoor or outdoor) to the "ANT IN" port on the rear panel of the receiver. For optimal signal reception, outdoor antennas generally perform better and should be positioned as high as possible.
2. **Connect to TV:**
 - **HDMI Connection (Recommended):** Use an HDMI cable (not included) to connect the "HDMI Output" port on the receiver to an HDMI input port on your television.
 - **RCA Connection:** Use the provided RCA cable to connect the "VIDEO", "L", and "R" audio output ports on the receiver to the corresponding input ports on your television.
3. **Power On:** Connect the power adapter to the receiver's power input and then plug it into an electrical outlet. The receiver will power on.

4. **Select TV Input:** On your television, select the correct input source (e.g., HDMI 1, AV) that corresponds to the connection you made in step 2.

OPERATING INSTRUCTIONS

Initial Setup and Channel Scan

1. Upon first power-on, the receiver will guide you through an initial setup process. Follow the on-screen prompts to select your language and country.
2. The receiver will then prompt you to perform an **Automatic Channel Search**. Confirm to start scanning for available digital channels. This process may take several minutes.
3. Once the scan is complete, the receiver will save the found channels and display the first available channel. The number of channels received depends on your geographical location and antenna quality.
4. To perform a **Manual Channel Search**, navigate to the "Channel Search" menu in the main settings.

Real-time Program Recording

To record a live program, connect a USB storage device (e.g., USB flash drive or external hard drive) to one of the USB ports on the receiver. Press the **REC** button on the remote control to start recording the current program. Press it again to stop recording. Recorded programs can be accessed and played back from the "Media" menu.

Electronic Program Guide (EPG)

Press the **EPG** button on the remote control to view the Electronic Program Guide. This guide provides information about current and upcoming programs for all available channels. You can navigate through channels and times to see program details and set recording timers.

Favorite Channels

You can create a list of your favorite channels for quick access. Go to the "Channel" menu, select "Favorite Channel List", and add your preferred channels. Press the **FAV** button on the remote to switch between your favorite lists.

Parental Controls

The receiver includes parental control features to restrict access to certain channels or programs based on age ratings. Access the "Parental Control" settings in the main menu to set up a password and configure restrictions.

Media Playback

Insert a USB storage device containing media files (videos, photos, music) into a USB port. Press the **Media** button on the remote control to access the media player. You can browse and play your files directly on your TV.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No signal / No channels found	Antenna not connected or positioned correctly; weak signal.	Check antenna connection. Adjust antenna position. Perform an automatic channel scan. Consider a stronger outdoor antenna.
No picture or sound	Incorrect TV input selected; loose HDMI/RCA cables.	Ensure your TV is on the correct input source (e.g., HDMI 1, AV). Check all cable connections between the receiver and TV.

Problem	Possible Cause	Solution
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and receiver.	Replace batteries. Ensure batteries are inserted with correct polarity. Remove any obstructions. Point the remote directly at the receiver.
Cannot record programs	USB storage device not connected or full; device not formatted correctly.	Connect a USB storage device. Ensure it has sufficient free space. Format the USB device to FAT32 or NTFS if necessary (this will erase all data).

SPECIFICATIONS

- **Brand:** Fol
- **Model:** DVB-1416 (Note: Some packaging may refer to DVB-1685 for similar models)
- **Connectivity Technology:** HDMI, USB
- **Compatible Devices:** Television
- **Connector Type:** HDMI, USB
- **Video Encoding:** H.264, MPEG-2, MPEG-1, MPEG-4AAC
- **Audio Output Types:** Stereo, Speakers
- **Control Method:** Tactile (buttons on device), Remote Control
- **Special Features:** Real-time program recorder with 1080p HDMI output, automatic and manual search, EPG for enhanced program information, favorite channel list, parental control.
- **Color:** Black
- **Global Trade Item Number (GTIN):** 07502300921441
- **ASIN:** B0973KDYWK

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official Fol website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0973KDYWK>

More documents and user manuals: <https://manuals.plus/>