

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Glacier Bay](#) /
- › [Glacier Bay Oswell 4-inch Centerset 2-Handle High-Arc Bathroom Faucet Instruction Manual](#)

Glacier Bay Oswell HD67083W-6010H

Glacier Bay Oswell 4-inch Centerset 2-Handle High-Arc Bathroom Faucet

Model: Oswell HD67083W-6010H

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Glacier Bay Oswell 4-inch Centerset 2-Handle High-Arc Bathroom Faucet. Please read all instructions carefully before beginning installation and retain this manual for future reference.



Image 1.1: The Glacier Bay Oswell 4-inch Centerset 2-Handle High-Arc Bathroom Faucet in Matte Black.

IMPORTANT SAFETY INFORMATION

- Always turn off the main water supply before installing or performing any maintenance on the faucet.
- Wear safety glasses and gloves during installation to prevent injury.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Do not overtighten connections, as this may cause damage to the faucet or plumbing.
- Ensure all local plumbing codes are met during installation.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact customer support.

- Faucet Body Assembly (1)
- Hot and Cold Handles (2)
- Mounting Hardware (Washers, Nuts)
- Press Pop-Up Drain Assembly (1)
- Supply Lines (Pre-attached or separate, check packaging)



Image 2.1: Front view of the faucet body assembly, illustrating the high-arc spout and two lever handles.



Image 2.2: The included press pop-up drain assembly.

TOOLS REQUIRED

The following tools are typically required for installation:

- Adjustable Wrench
- Phillips Head Screwdriver
- Plumber's Putty or Silicone Sealant
- Flashlight (optional)
- Safety Glasses
- Gloves

SETUP AND INSTALLATION

This faucet is designed for a 4-inch centerset, 3-hole deck-mount installation.

1. **Prepare the Sink:** Ensure the sink surface is clean and free of debris around the faucet holes. If replacing an old faucet, remove it and clean the area thoroughly.
2. **Install Faucet Body:** Place the faucet body assembly onto the sink deck, aligning the hot and cold water inlets with the outer holes and the spout with the center hole. Apply a thin bead of plumber's putty or silicone sealant around the base of the faucet if a gasket is not pre-installed.
3. **Secure Faucet:** From underneath the sink, slide the rubber washer, then the metal washer, and finally thread the mounting nuts onto the faucet shanks. Hand-tighten, then use an adjustable wrench to secure firmly, ensuring the faucet is straight on the deck. Do not overtighten.
4. **Connect Water Supply Lines:** Connect the hot and cold water supply lines to the corresponding hot (left) and cold (right) water valves. Use an adjustable wrench to tighten connections, but do not overtighten.
5. **Install Drain Assembly:** Follow the instructions provided with the press pop-up drain assembly. Typically, this involves applying sealant to the drain flange, inserting it into the sink drain hole, and securing it from underneath with a washer and nut. Connect the drain tailpiece to the P-trap.
6. **Test for Leaks:** Once all connections are secure, turn on the main water supply slowly. Check all connections for leaks. If leaks are detected, tighten the connection slightly until the leak stops.



Image 3.1: The Glacier Bay Oswell faucet after successful installation in a bathroom environment.

OPERATING INSTRUCTIONS

The Glacier Bay Oswell faucet features a two-handle design for precise control over water temperature and flow.

- **Cold Water:** Turn the right handle counter-clockwise to activate cold water.

- **Hot Water:** Turn the left handle counter-clockwise to activate hot water.
- **Temperature Control:** Adjust the hot and cold handles simultaneously to achieve the desired water temperature.
- **Flow Control:** The further the handles are turned, the greater the water flow.
- **Shut Off:** Turn both handles clockwise until they stop to turn off the water flow completely.



Image 4.1: A close-up view of one of the lever handles, demonstrating its design for operation.

MAINTENANCE

Regular maintenance will help preserve the finish and functionality of your faucet.

- **Cleaning the Finish:** Clean the matte black finish with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or polishes, as these can damage the finish.
- **Aerator Maintenance:** If water flow decreases or becomes irregular, the aerator may be clogged. Unscrew the aerator from the end of the spout, clean any debris or mineral deposits, and rinse thoroughly before reattaching.
- **Ceramic Disc Cartridges:** The faucet is equipped with durable ceramic disc cartridges designed for drip-

free performance. If a drip occurs, the cartridge may need to be replaced. Contact customer support for replacement parts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water flow	Clogged aerator; partially closed supply stop valves.	Clean the aerator (see Maintenance); ensure supply stop valves are fully open.
Faucet leaks from spout	Worn ceramic disc cartridge.	Replace the ceramic disc cartridge. Contact customer support for parts.
Leak at base of faucet	Loose mounting nuts; improper sealant application.	Tighten mounting nuts from underneath the sink; reapply plumber's putty or silicone sealant if necessary.
Water temperature issues	Incorrect hot/cold supply line connection; issues with water heater.	Verify hot and cold supply lines are connected correctly; check water heater settings.

SPECIFICATIONS

Feature	Detail
Brand	Glacier Bay
Model Name	Oswell
Part Number	HD67083W-6010H
Finish	Matte Black
Material	Metal (Body), Ceramic (Handle)
Mounting Type	4-inch Centerset, Deck Mount
Number of Handles	2
Hole Count	3
Spout Type	High-Arc
Spout Reach	4.92 inches
Faucet Height	7.9 inches
Spout Height	4.87 inches
Flow Rate	1.2 GPM (Gallons Per Minute)

Feature	Detail
Connection Size	1/2 inch
Item Weight	2.9 pounds
Certifications	WaterSense Certified, IAPMO Certified

WARRANTY AND SUPPORT

This Glacier Bay Oswell faucet is backed by a **Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal use for the lifetime of the original purchaser.

For warranty claims, replacement parts, or technical assistance, please contact Glacier Bay customer support. Keep your proof of purchase for warranty validation.

Customer Support: Refer to the contact information provided with your product packaging or visit the official Glacier Bay website for current support options.