



[Manuals.plus](#) /

> [Ontel](#) /

> [Ontel Handy Heater Turbo 800 Wall Outlet Small Space Heater Instruction Manual](#)

Ontel HEATTB-MC12/4

Ontel Handy Heater Turbo 800

INSTRUCTION MANUAL

Product Overview

The Ontel Handy Heater Turbo 800 is a compact and powerful wall-outlet space heater designed to provide efficient warmth in small areas. Featuring advanced ceramic heating technology, it offers adjustable temperature control, a programmable timer, and built-in safety features for reliable operation.



Image: The Handy Heater Turbo 800, a compact wall-outlet heater, shown alongside its product packaging, highlighting its features and design.

Key Features:

- **Wall Outlet Design:** Plugs directly into any standard wall outlet, saving floor space.
- **Adjustable Thermostat:** Allows precise temperature control between 60°F and 90°F.
- **Programmable Timer:** Features a 12-hour programmable timer for automatic on/off operation.
- **Ceramic Heating:** Utilizes ceramic heating elements for efficient warmth while maintaining air moisture.
- **Safety Features:** Includes stay-cool housing and auto shut-off to prevent overheating.
- **Quiet Operation:** Designed for minimal noise, suitable for bedrooms and offices.
- **Compact & Portable:** Lightweight and small, making it easy to move and store.

Important Safety Information

Please read all safety warnings and instructions before using this product to prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Always plug the heater directly into a 120V AC wall outlet. Do not use with extension cords,

power strips, or surge protectors.

- **Clearance:** Maintain a minimum distance of 3 feet (0.9 meters) from combustible materials such as furniture, curtains, bedding, paper, clothes, and pets. Ensure air intake and exhaust vents are not blocked.
- **Location:** This heater is for **indoor use only**. Do not use in bathrooms, laundry rooms, or any areas where water may be present or where the heater could come into contact with water.
- **Overheating Protection:** The heater is equipped with an automatic shut-off feature that activates if the unit overheats. If this occurs, unplug the unit and allow it to cool before attempting to use it again.
- **Cool-Touch Housing:** While the housing is designed to stay cool, the front grille will become hot during operation. Avoid touching the front grille when the heater is on. Keep children and pets away from the unit.
- **Power Interruption:** In case of a power loss, the heater's temperature control may default to 90°F upon power restoration. Always verify and reset your desired temperature setting after any power interruption.

Setup

The Handy Heater Turbo 800 is designed for quick and easy setup.

1. **Unpack:** Carefully remove the heater from its packaging.
2. **Choose Location:** Select a suitable indoor wall outlet in the desired room. Ensure the area is clear of obstructions and combustible materials.
3. **Adjust Plug (if necessary):** The heater features a 180° rotatable wall plug. To adjust the plug orientation, press the small button on the back of the unit near the plug prongs and gently rotate the plug until the heater is upright and securely plugged into the outlet. Release the button to lock the plug in place.
4. **Plug In:** Insert the heater directly into a standard 120V AC wall outlet. Ensure it is firmly seated.

Versatile Wall Plug Design



180° Rotatable Wall Plug



Image: A detailed view of the Handy Heater's versatile wall plug, illustrating its 180-degree rotatable design and the press-and-rotate mechanism for easy adjustment.

Operating Instructions

The digital display and controls allow for easy adjustment of settings.



Image: A close-up of the Handy Heater's control panel, clearly labeling the ON/OFF button, Timer button, Increase Temperature button (up to 90°F), and Decrease Temperature button (down to 60°F).

1. **Power On/Off:** Press the **ON/OFF** button (power symbol) to turn the heater on or off. The digital display will illuminate when the unit is on.
2. **Set Temperature:** Use the **Increase Temp.** (+) and **Decrease Temp.** (-) buttons to set your desired temperature between 60°F and 90°F. The heater will automatically cycle on and off to maintain the set temperature.
3. **Set Timer:** Press the **Timer** button (clock symbol) to activate the programmable timer. Each press will increase the timer setting by one hour, from 1 to 12 hours. The heater will automatically shut off after the set time has elapsed. To cancel the timer, cycle through the hours until the timer display is off, or turn the unit off.
4. **Fan Speed:** The heater operates with a single fan speed optimized for its heating capacity. There are no adjustable fan speed settings.

Maintenance

Proper maintenance ensures the longevity and safe operation of your Handy Heater Turbo 800.

- **Cleaning:** Before cleaning, always unplug the heater from the wall outlet and allow it to cool completely. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. Do not immerse the heater in water.
- **Storage:** When not in use, store the heater in a cool, dry place, away from direct sunlight and moisture. It is recommended to store it in its original packaging to protect it from dust and damage.

- **Air Vents:** Periodically check the air intake and exhaust vents for dust or lint buildup. Use a vacuum cleaner with a brush attachment to gently remove any debris. Do not insert any objects into the vents.

Troubleshooting

If you encounter issues with your Handy Heater Turbo 800, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely; no power to outlet; unit overheated.	Ensure heater is firmly plugged into a working outlet. Check household circuit breaker. Unplug and allow unit to cool for 30 minutes if auto shut-off activated.
Heater turns off unexpectedly.	Room reached set temperature; timer expired; unit overheated; tip-over safety activated.	This is normal operation if the room is warm enough or timer is set. If due to overheating, allow to cool. Ensure unit is upright and stable.
Heater is not producing enough heat.	Room size too large; temperature setting too low; air vents blocked.	This heater is designed for small spaces (up to 250 sq ft). Increase temperature setting. Clear any obstructions from air vents.
Heater is noisy.	Normal fan operation.	A certain level of fan noise is normal for compact heaters. If noise is excessive or unusual, ensure vents are clear.
Temperature defaults to 90°F after power interruption.	Designed behavior after power cycle.	Manually reset the desired temperature using the (+) or (-) buttons after any power outage or interruption.

Specifications

Detailed technical specifications for the Ontel Handy Heater Turbo 800.



Image: A diagram illustrating the dimensions of the Handy Heater Turbo 800, showing its height (5.53"), width (4.93"), and depth (3.51").

Attribute	Detail
Brand	Ontel
Model Number	HEATTB-MC12/4
Product Dimensions	4.7"D x 5.6"W x 3.9"H
Item Weight	1.2 pounds
Voltage	120 Volts (AC)
Amperage	6.67 Amps
Heating Coverage	Up to 250 sq ft
Min Temperature Setting	60 Degrees Fahrenheit
Max Temperature Setting	90 Degrees Fahrenheit

Attribute	Detail
Number of Speeds	1 (Fan)
Form Factor	Plug In
Indoor/Outdoor Usage	Indoor

Warranty and Support

The Ontel Handy Heater Turbo 800 comes with a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact Ontel customer support.

For further assistance, troubleshooting, or to inquire about replacement parts, please visit the official Ontel website or contact their customer service department. You may also refer to the official User Manual PDF for more detailed information: [Download User Manual \(PDF\)](#)