



[Manuals.plus](#) /

> [XLTTY](#) /

> XLTTY 16-inch Pedestal Fan Instruction Manual

## XLTTY 9496837067087

# XLTTY 16-inch Pedestal Fan Instruction Manual

Model: 9496837067087

## 1. INTRODUCTION

---

Thank you for purchasing the XLTTY 16-inch Pedestal Fan. This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your fan. Please read these instructions thoroughly before use and retain them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Always ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or any objects through the fan grille when the fan is operating.
- Unplug the fan from the power outlet before cleaning, assembling, or disassembling parts.
- Keep the fan away from water or other liquids. Do not operate in wet environments.
- Do not operate the fan with a damaged cord or plug. Contact customer support for assistance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure the voltage and frequency of your power supply match the specifications listed on the fan's rating label.

## 3. PACKAGE CONTENTS

---

Verify that all components are present in the package:

- 1 x Stand Fan Unit (includes motor, fan blades, grilles, stand pole, and base)


- 1 x Instruction Manual

## 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your XLTTY 16-inch Pedestal Fan:

1. **Assemble the Base:** Place the heavy fan base on a flat surface. Insert the lower stand pole into the base and secure it firmly.
2. **Attach the Upper Pole:** Insert the adjustable upper stand pole into the lower pole.
3. **Mount the Motor Unit:** Carefully attach the motor unit to the top of the upper stand pole. Ensure it is securely fastened.
4. **Install the Rear Grille:** Place the rear grille onto the motor unit, aligning the notches.
5. **Attach the Fan Blades:** Slide the five fan blades onto the motor shaft. Secure them with the blade cap.
6. **Install the Front Grille:** Place the front grille over the fan blades and secure it to the rear grille using the provided clips or screws. Ensure the grilles are properly aligned and locked.

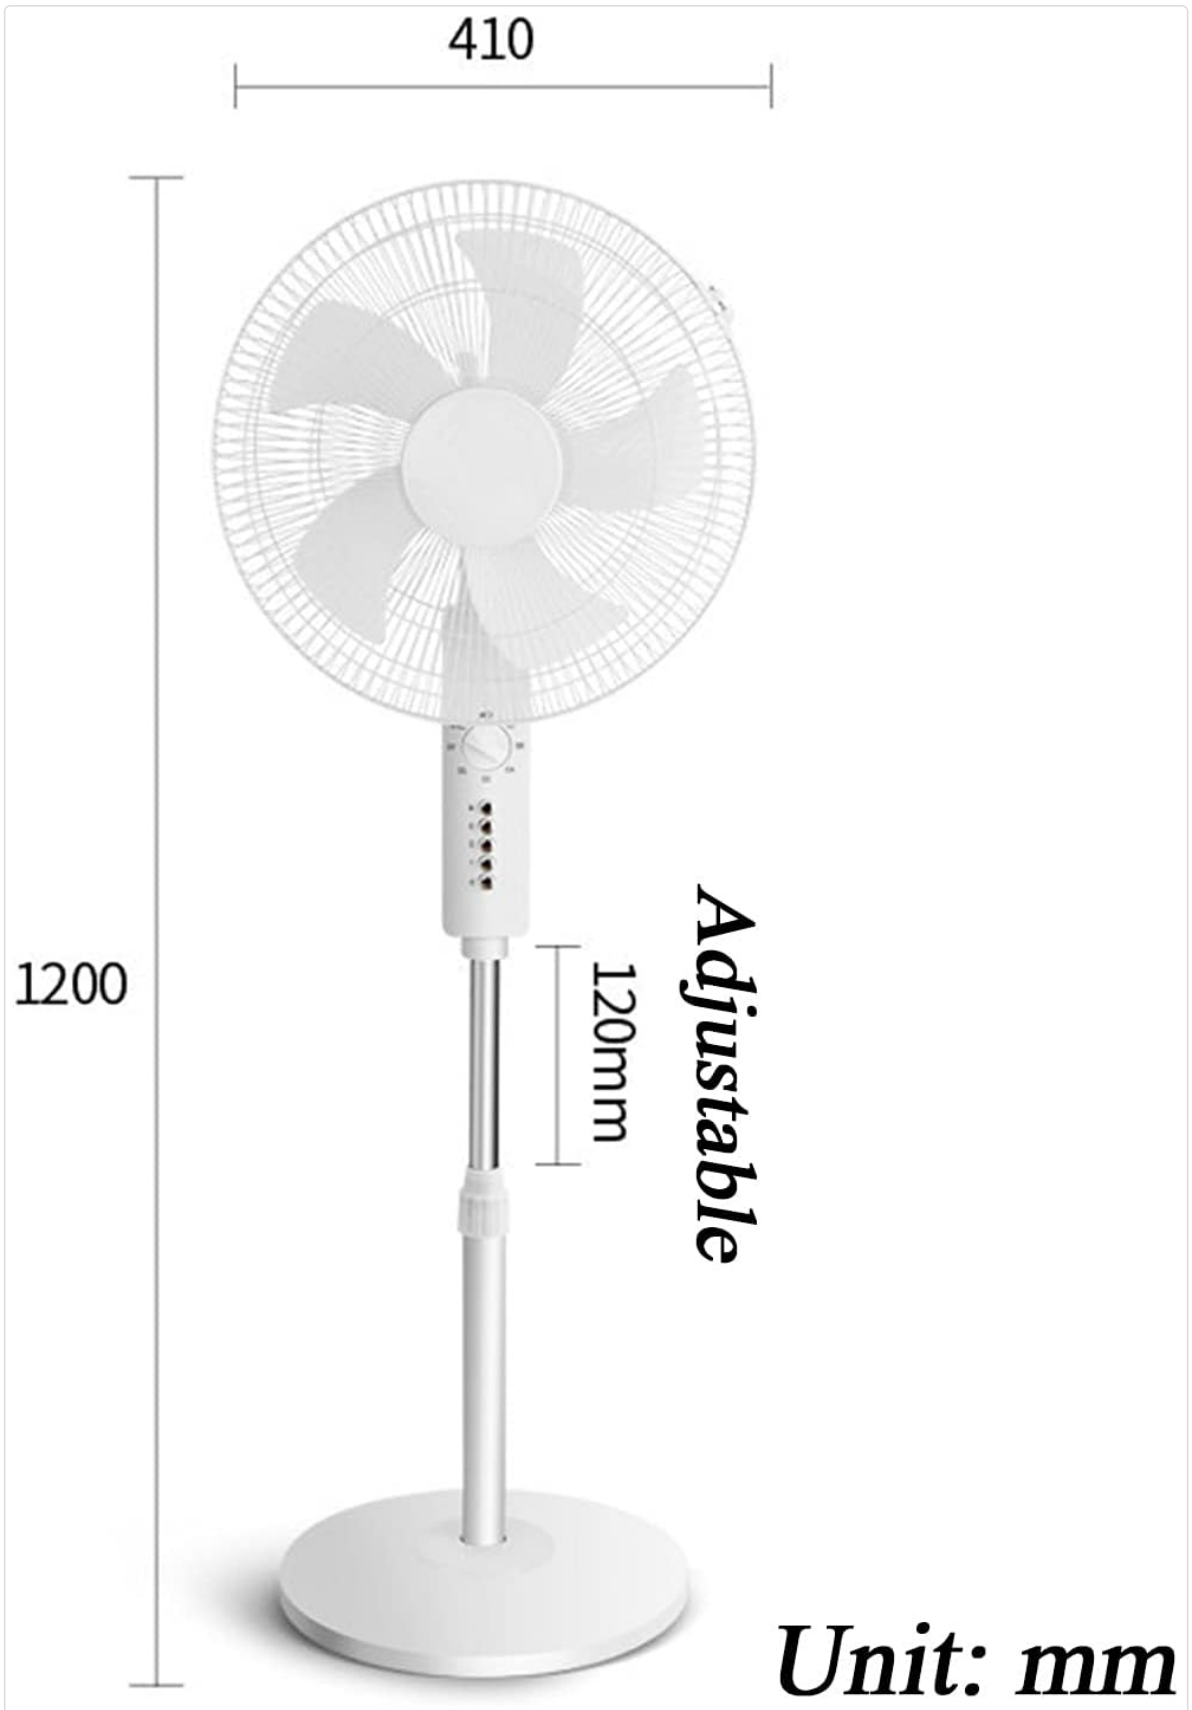 


**Image:** Diagram showing the dimensions of the XLTTY 16-inch Pedestal Fan, including height (1200mm) and fan diameter (410mm). The adjustable height range is also indicated.

## 01 *Stable base*


 
## 02 *Shaped ring net cover*

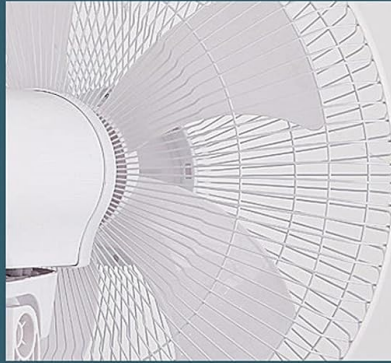

## 03 *easy to use*



**Image:** Detailed view of the fan's stable base, shaped ring net cover, and easy-to-use control panel with speed and timer settings.

### Adjusting Height and Tilt

- **Height Adjustment:** Loosen the height adjustment knob on the stand pole, extend or retract the upper pole to the desired height (between 108 cm and 120 cm), and then tighten the knob securely.
- **Tilt Adjustment:** The fan head can be tilted up or down by 20 degrees. Gently push or pull the fan head to achieve the desired angle.

## 5. OPERATING INSTRUCTIONS

Once assembled, plug the fan into a suitable 220V/50Hz power outlet.

### Powering On/Off

- To turn the fan **ON**, rotate the control knob to any speed setting (1, 2, or 3).
- To turn the fan **OFF**, rotate the control knob to the '0' position.

### Speed and Mode Selection

The fan offers three speed settings and various modes:

 
- **Speed Settings:** Rotate the control knob to select between **1 (Low)**, **2 (Medium)**, and **3 (High)**.
- **Modes:** The fan supports Natural, Normal, and Sleep modes. These are typically selected via a remote control (if included) or dedicated buttons on the control panel. Refer to the specific button labels for mode selection.

## *Three gears wind speed/adjust as you like suitable for different scenes*


### *First gear*



### *Secnd gear*

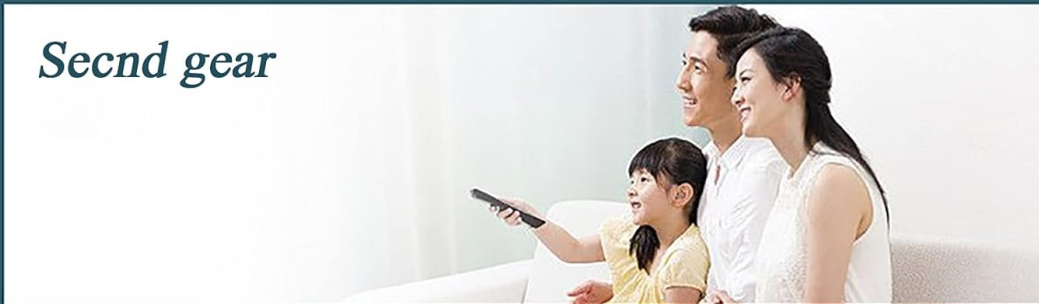

### *Third gear*

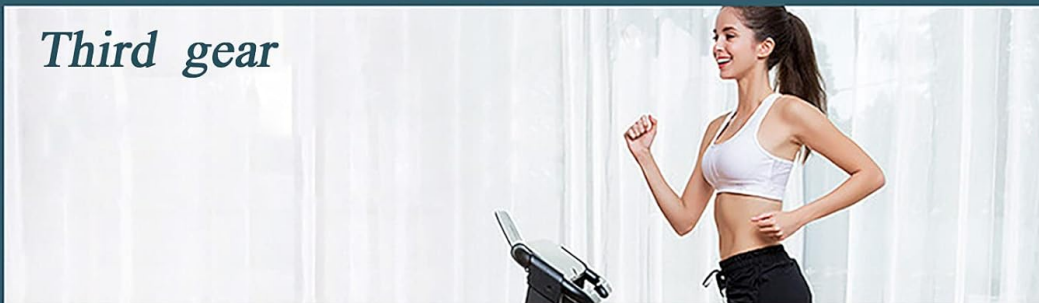 

**Image:** Visual representation of the three wind speed settings (First, Second, Third gear) suitable for various scenarios, from sleeping to active use.

### **Oscillation Function**

The fan features a 120-degree oscillation function to distribute air across a wider area.

- To activate oscillation, press the oscillation button (if available) or pull up the oscillation knob located on top of the motor housing.
- To stop oscillation and direct airflow in a fixed direction, press down the oscillation knob.



**Image:** Image illustrating the 120-degree left-right oscillation and 20-degree up-down tilt capabilities of the fan head, enhancing air distribution.

### **Timer Function**

The fan includes a 2-hour timer for scheduled operation.

- To set the timer, rotate the timer knob to the desired duration (e.g., 1 hour, 2 hours). The fan will automatically turn off after the set time has elapsed.
- This feature is particularly useful for energy saving during sleep.

## *2H scheduled shutdown avoid catching cold*



**Image:** Image depicting the fan operating with its 2-hour timer function, suitable for use during sleep to prevent overcooling.

## **6. MAINTENANCE AND CARE**

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. For the grilles and blades, use a soft brush or vacuum cleaner to remove dust.
- **Storage:** If storing the fan for an extended period, disassemble it if necessary, clean all parts, and store it in its original packaging or a dust-free environment.
- **Motor:** The motor is permanently lubricated and requires no additional oiling.

## **7. TROUBLESHOOTING**

Refer to the table below for common issues and their solutions.


Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on	No power supply Fan not plugged in correctly Timer activated	Check power outlet Ensure plug is fully inserted Check timer setting and reset if needed
Weak airflow	Low speed setting Dust accumulation on blades/grilles	Increase speed setting Clean fan blades and grilles
Fan is noisy	Loose parts Fan not on a level surface	Check for loose screws or grilles Place fan on a stable, level surface
Oscillation not working	Oscillation knob not engaged	Ensure oscillation knob is pulled up to activate

## 8. PRODUCT SPECIFICATIONS


Feature	Specification
Model Name	XLTTY 16-inch
Item Model Number	9496837067087
Voltage/Frequency	220V/50HZ
Product Power	45W
Fan Diameter	41 cm (16 inch)
Adjustable Height	108 cm - 120 cm
Motor Type	4S motor (Brushless DC)
Fan Blade Material	Plastic (5 bionic blades)
Rotating Speed	1350r/min - 1430r/min
Speed Settings	3 (Low, Medium, High)
Oscillation Angle	Left-right: 120°
Tilt Angle	Up-down: 20°
Timer Setting	2 Hours
Noise Level	As low as 40 dB
Control Method	Manual knob (Remote control if included with specific model variant)
Indoor/Outdoor Usage	Indoor

✓ *Five bionic fan blades*

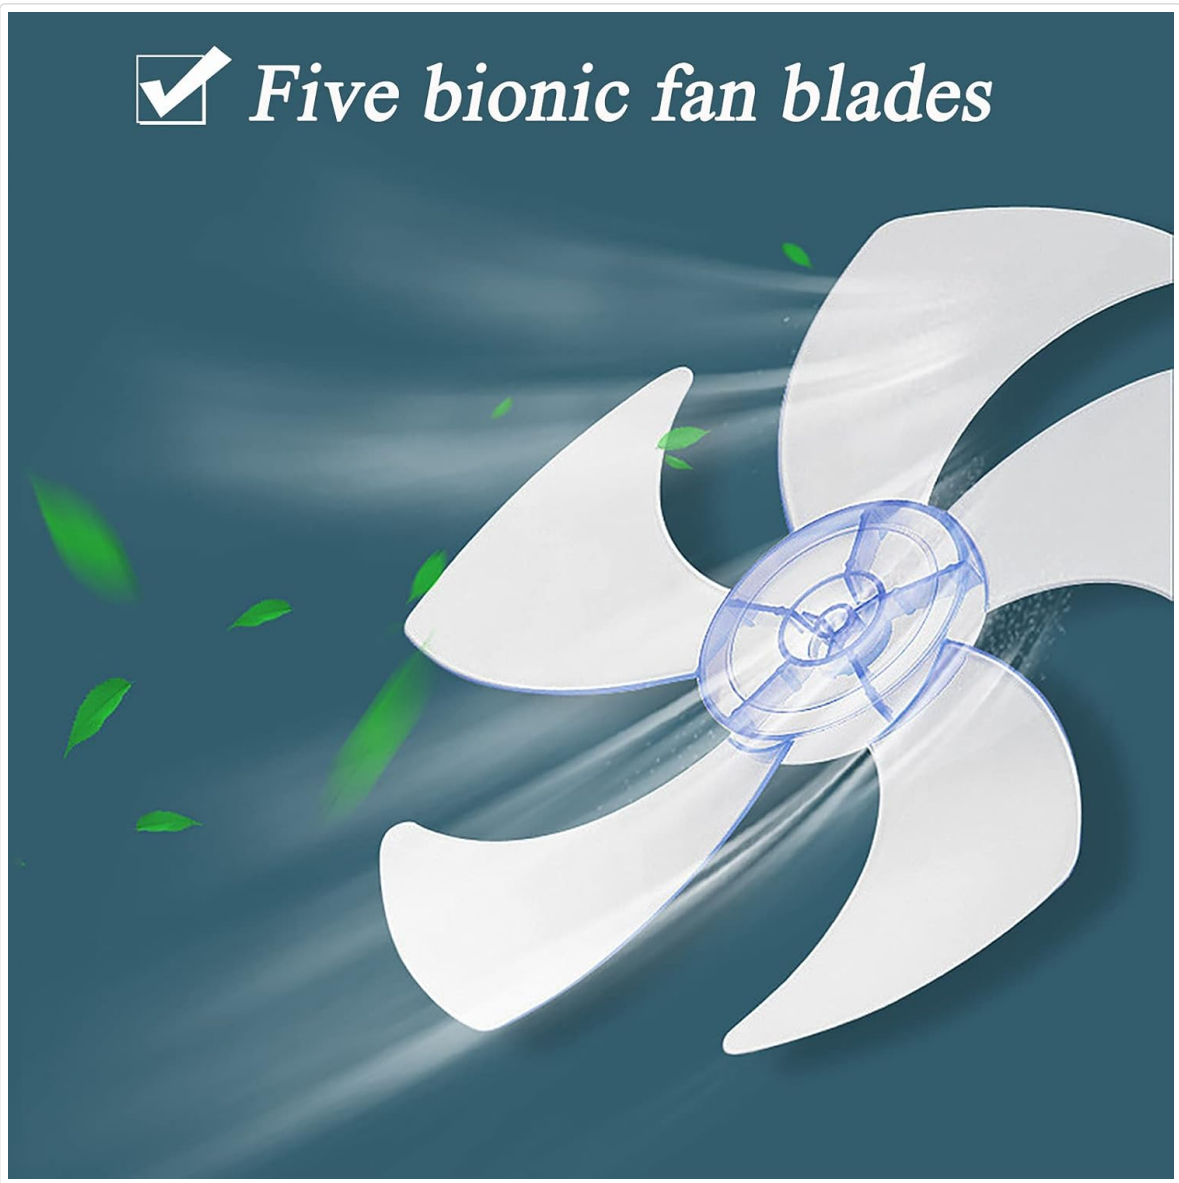 

**Image:** Close-up view of the five bionic fan blades designed for efficient and soft airflow.

# *4S motor quiet and powerful*

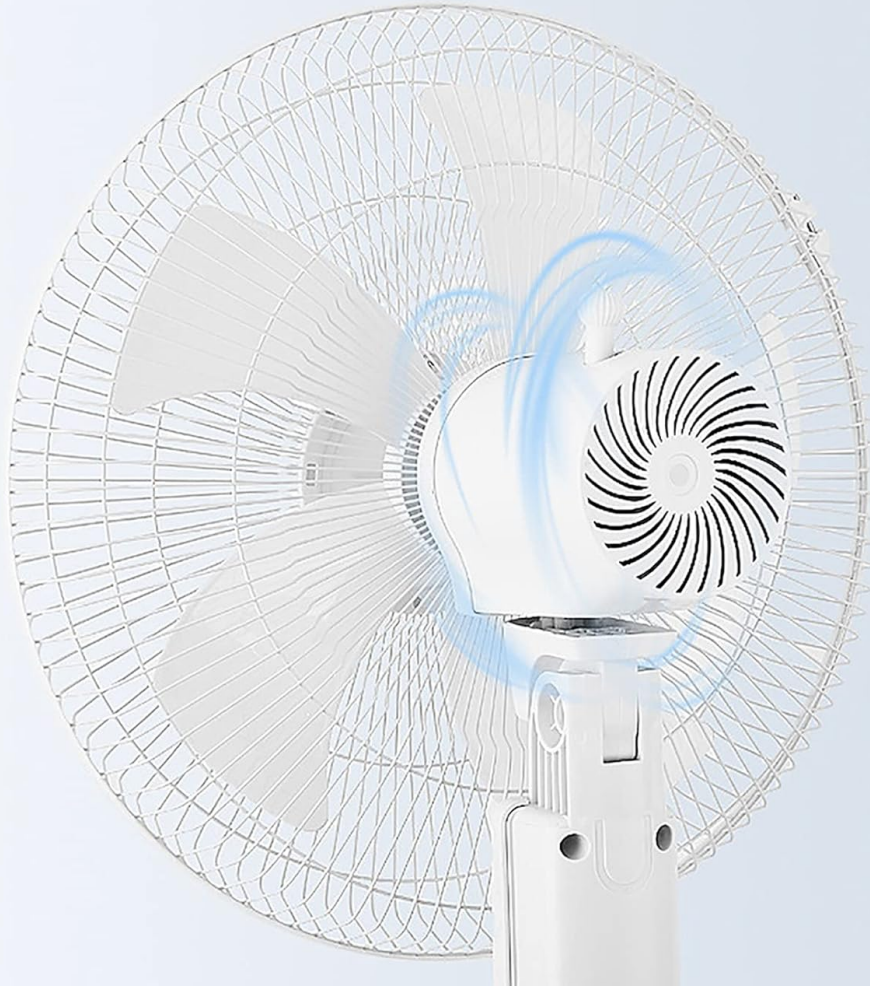 

**Image:** Illustration highlighting the 4S motor, indicating quiet and powerful operation for consistent air movement.

## **9. WARRANTY AND SUPPORT**

---

For warranty information or technical support, please refer to the retailer where the product was purchased or contact XLTTY customer service directly. Keep your purchase receipt as proof of purchase.