

[Manuals.plus](#) /

› [T-Fal](#) /

› Tefal Dynamix Cook BL967 High Speed Blender User Manual

T-Fal BL967

Tefal Dynamix Cook BL967 High Speed Blender User Manual

Model: BL967

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Tefal Dynamix Cook BL967 High Speed Blender. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit in water or any other liquid.
- **Blade Safety:** Blades are sharp. Handle with extreme care, especially when assembling, disassembling, or cleaning.
- **Lid Safety:** The blender will not operate if the lid is not properly locked. Always ensure the lid is securely in place before starting the appliance.
- **Hot Liquids:** When blending hot liquids, use caution as steam can escape and cause burns. Do not fill the jar beyond the maximum hot liquid level indicator.
- **Supervision:** This appliance should not be used by children. Close supervision is necessary when any appliance is used near children.
- **Damage:** Do not operate the appliance if the cord, plug, or any other part is damaged. Contact authorized service personnel for repair.
- **Stability:** Always place the blender on a stable, flat, and dry surface during operation.

2. PRODUCT OVERVIEW

The Tefal Dynamix Cook BL967 is a high-speed blender designed for both hot and cold preparations. It features a powerful motor, durable Powelix blades, and a robust glass jar.



Image: The Tefal Dynamix Cook BL967 High Speed Blender on a wooden countertop, surrounded by fresh ingredients like parsley, tomatoes, soybeans, and prepared items such as soup, soy milk, and a chocolate milkshake.

Key Components:

- **Motor Unit:** The base containing the 1300W motor and control panel.
- **Glass Jar:** A 2.0L capacity, high-temperature resistant glass jar for blending and cooking.
- **Powelix Blades:** Six robust, razor-sharp stainless steel blades designed for optimal cutting and vortex action.
- **Lid:** Secure lid system with a removable measuring cup.
- **Pusher:** Accessory for mixing hard ingredients like nuts or ice cubes.
- **Digital Screen:** Integrated intuitive digital display for program selection and status.

3. SETUP AND ASSEMBLY

Before first use, wash all removable parts (jar, lid, measuring cup, pusher) in warm soapy water, rinse, and dry thoroughly. The motor unit should only be wiped with a damp cloth.

Assembly Steps:

1. Place the motor unit on a clean, stable, and dry surface.
2. Ensure the Powelix blades are securely attached to the bottom of the glass jar.
3. Carefully place the glass jar onto the motor unit. Ensure it is seated correctly and locked into position.
4. Add your ingredients to the jar. Do not exceed the maximum fill lines indicated on the jar.
5. Place the lid securely onto the glass jar. The blender will not start if the lid is not properly locked.
6. Insert the measuring cup into the lid opening if needed.
7. Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The Tefal Dynamix Cook BL967 offers 10 automatic programs and manual control for versatile blending and cooking.

Control Panel:

The integrated digital screen allows for easy selection of programs and settings. Use the '+' and '-' buttons to navigate and adjust.

Automatic Programs (10 Hot & Cold):

These programs are pre-set with optimal blending and heating times for specific recipes. Simply select the desired program and press Start/Stop.

- **Hot Programs:** Soups, Grain Porridges, Desserts, Soy Milks, Healthy Teas. These programs utilize the fast heating technology up to 100°C for perfectly cooked results.
- **Cold Programs:** Juices, Smoothies, Milkshakes, Ice Crush.

Manual Mode:

For custom blending, select the Manual program. You can then adjust the speed settings (6 available) and blending duration as required. Use the Pulse function for short bursts of high-speed blending.

Using the Pusher:

The pusher can be used to guide ingredients towards the blades, especially for thicker mixtures or hard ingredients like ice cubes, while the blender is operating. Always use the pusher through the lid opening and never insert hands or other utensils into the jar during operation.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your blender.

Automatic Cleaning Functions:

The blender features two auto-clean functions for convenience:

- **Deep Clean:** Select this program to kill up to 99.99% of bacteria. Follow the instructions on the digital screen for proper use.
- **Quick Clean:** Use this function to rinse the jar in less than 1 minute. Ideal for quick clean-ups between uses or after light blending.

Manual Cleaning:

- **Glass Jar and Lid:** The glass jar and lid are dishwasher safe. Alternatively, wash them by hand with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
- **Motor Unit:** Unplug the appliance before cleaning. Wipe the motor unit with a damp cloth. Do not immerse it in water.
- **Blades:** Exercise extreme caution when cleaning the blades due to their sharpness. Use a brush if necessary to remove food residue.

6. TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

- **Blender does not start:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Verify that the glass jar is correctly seated and locked onto the motor unit.
 - Check that the lid is properly closed and locked. The safety system prevents operation if the lid is not secure.
- **Ingredients are not blending smoothly:**
 - Ensure you have added enough liquid to facilitate blending.
 - Cut larger ingredients into smaller pieces before adding them to the jar.
 - Use the Pulse function for short bursts to break down stubborn ingredients.
 - For thick mixtures, use the pusher to guide ingredients towards the blades.
- **Cleaning mode does not fully clean the jar:**
 - For stubborn residue, especially around the waterproof seal, manual cleaning may be required.
 - Ensure sufficient water and a small amount of dish soap are used during the auto-clean cycle.
 - Consider running the Deep Clean cycle for more thorough cleaning.
- **Blender emits unusual noise or odor:**
 - Immediately turn off and unplug the blender.
 - Check for any obstructions around the blades or motor unit.
 - Allow the motor to cool down if it has been running for an extended period.
 - If the issue persists, contact customer support.

7. SPECIFICATIONS

Brand	T-Fal
Model Number	BL967
Power	1300 Watts
Capacity	1.75 Liters (useful capacity) / 2.0 Liters (total)
Material	Glass (Container), Stainless Steel (Blade)
Dimensions (D x W x H)	3.9D x 5.9W x 11.8H centimetres
Number of Speed Settings	6 (Manual) / 10 (Auto Programs)

Controls Type	Touch, Full User Control
Special Features	Portable, Powelix Blades, Fast Heating Technology (up to 100°C), Digital Screen, Auto Clean Functions
Dishwasher Safe	Yes (Jar and Lid)
Recommended Uses	Blending, Juicing, Ice Crush, Grinding, Hot Beverages

8. WARRANTY AND SUPPORT

This Tefal Dynamix Cook BL967 High Speed Blender comes with a**2-Year Limited Warranty** from the date of purchase.

The warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, negligence, accident, alteration, or unauthorized repair.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official T-Fal website for your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0974VG8NF>

More documents and user manuals: <https://manuals.plus/>