

UrbanX AKB75095305

UrbanX AKB75095305 Universal TV Remote Control Instruction Manual

Model: AKB75095305

[Introduction](#) [Setup](#) [Operating Instructions](#) [Maintenance Support](#) [Troubleshooting](#) [Specifications](#) [Warranty &](#)

1. INTRODUCTION

This manual provides instructions for the UrbanX AKB75095305 Universal TV Remote Control. This remote is designed to replace original LG TV remotes, offering direct control over various LG Smart TV models, including LCD, LED, and 3D HDTVs. It is compatible with models such as 43UN6950ZUA and replaces original remotes like AKB75375604, AKB75095307, AKB75675304, and AKB74915305. No programming is required; simply insert batteries for immediate use.



Figure 1: UrbanX AKB75095305 Universal TV Remote Control. This image shows the front view of the remote control, highlighting its buttons and ergonomic design.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible LG TVs without any additional programming.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your UrbanX AKB75095305 remote control.



Figure 2: Button layout of the UrbanX AKB75095305 remote control. This image provides a clear view of all buttons and their labels for easy identification.

3.1 Basic TV Controls

- **Power (●):** Turns the TV on or off.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Mute (⏸):** Mutes or unmutes the TV sound.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Input (INPUT):** Selects the input source (HDMI, AV, etc.).

3.2 Number Pad and Navigation

- **Number Buttons (0-9):** Directly enter channel numbers.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK (Center Button):** Confirms selections.

- **Back (BACK):** Returns to the previous screen or menu.
- **Exit (EXIT):** Exits the current menu or application.

3.3 Media Playback Controls

- **Play/Pause (▶ ||):** Plays or pauses media content.
- **Stop (■):** Stops media playback.
- **Fast Forward (▶ ▶):** Fast forwards through media.
- **Fast Rewind (◀ ◀):** Rewinds through media.
- **Skip Forward (▶ ▶|):** Skips to the next track or chapter.
- **Skip Back (|◀ ◀):** Skips to the previous track or chapter.
- **Record (REC):** Initiates recording if supported by the TV.

3.4 Special Functions

- **GUIDE:** Displays the electronic program guide.
- **Q.VIEW:** Quick View for previously watched channels.
- **INFO:** Displays information about the current program.
- **TEXT:** Accesses teletext services.
- **P.PAGE:** Page up/down for teletext or other functions.
- **LIVE ZOOM:** Activates live zoom feature.
- **SETTINGS (⚙):** Accesses TV settings menu.
- **QUICK ACCESS / FAV:** Provides quick access to favorite channels or functions.
- **AD/*:** Audio Description / Asterisk button.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons perform various functions depending on the TV menu or application.

Note: This remote does not include a dedicated Netflix button.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Refer to section 2.1 for battery installation instructions. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries or different types of batteries.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control is not working.	<ul style="list-style-type: none"> Batteries are dead or incorrectly inserted. Obstruction between remote and TV. Remote control sensor on TV is blocked. 	<ul style="list-style-type: none"> Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the line of sight between the remote and the TV. Ensure the TV's remote sensor is not covered.
Some buttons do not respond.	<ul style="list-style-type: none"> Low battery power. Button malfunction. TV model incompatibility for specific advanced functions. 	<ul style="list-style-type: none"> Replace batteries. Ensure the button is pressed firmly. Verify your TV model's compatibility with all remote functions.
Remote works intermittently.	<ul style="list-style-type: none"> Weak batteries. Interference from other electronic devices. 	<ul style="list-style-type: none"> Replace batteries. Move other electronic devices away from the TV or remote.

6. SPECIFICATIONS

- **Model Number:** AKB75095305
- **Brand:** UrbanX
- **Compatible TV Brands:** LG
- **Compatible LG TV Models:** 43UN6950ZUA, and various LG Smart TV LCD LED 3D HDTV models. Replaces AKB75375604, AKB75095307, AKB75675304, AKB74915305.
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 1 x 1 x 4 inches (approximately)
- **Item Weight:** 1 ounce (approximately)
- **Special Features:** Ergonomic design, Universal compatibility with specified LG models.

7. WARRANTY & SUPPORT

For warranty information or technical support regarding your UrbanX AKB75095305 Universal TV Remote Control, please refer to the retailer's return policy or contact the manufacturer directly. The product is typically covered by a standard return policy as per the point of purchase.

For further assistance, you may visit the [UrbanX Store on Amazon](#).

