

- Manuals.plus /
- › BAYSIDE /
- › BAYSIDE FURNISHINGS BURKDALE TV Console User Manual

BAYSIDE BURKDALE

BAYSIDE FURNISHINGS BURKDALE TV Console User Manual

Comprehensive instructions for assembly, operation, and maintenance.

IMPORTANT SAFETY INFORMATION

Warning: This product contains sharp edges. Always use caution when handling. Assembly is required; follow the instructions carefully to prevent tip-over risks. Do not exceed the weight limit of 135 pounds for the TV.

Ensure all components are securely fastened during assembly. Regularly check for loose connections. Keep small parts away from children. Place the console on a level, stable surface.

PRODUCT OVERVIEW

The BAYSIDE FURNISHINGS BURKDALE TV Console is designed to accommodate flat-screen televisions up to 70 inches and weighing up to 135 pounds. It offers three distinct TV mounting options: floating swivel mount, desktop placement, and wall mount. The console is constructed from MDF with birch veneer and features tempered glass shelves.



Image: The BURKDALE TV Console displayed in a living room, showcasing its design and functionality with a television mounted above it and media devices on its shelves.

SETUP AND ASSEMBLY

Assembly of the BURKDALE TV Console is required. Please ensure you have all components and tools before beginning. Refer to the separate assembly guide provided with your purchase for detailed, step-by-step instructions.

Key Assembly Considerations:

- **Unpacking:** Carefully unpack all parts and hardware. Lay them out on a soft, clean surface to prevent scratches.
- **Tools:** Ensure you have the necessary tools as specified in the assembly guide.
- **Weight Limit:** Do not exceed the maximum TV weight of 135 pounds.
- **TV Size:** Designed for flat screens up to 70 inches.
- **Mounting Options:**
 - **Floating Swivel Mount:** Attach your TV directly to the integrated swivel mount for adjustable viewing angles.
 - **Desktop Placement:** Place your TV directly on the console's top surface.
 - **Wall Mount:** Utilize the console's design to complement a wall-mounted TV (separate wall mount hardware not included).
- **Level Surface:** Always assemble and place the console on a level and stable floor to prevent instability.

OPERATING INSTRUCTIONS

Once assembled, the BURKDALE TV Console provides a stable and organized platform for your entertainment system.

Using Your Console:

1. **TV Placement:** Choose one of the three mounting options (floating swivel, desktop, or wall mount) based on your preference and TV specifications. Ensure the TV is securely attached or placed.
2. **Media Device Storage:** Utilize the tempered glass shelves to store media players, gaming consoles, soundbars, and other accessories. Ensure proper ventilation for electronic devices.
3. **Cable Management:** The console is designed to help manage cables. Route power and signal cables neatly to prevent tangles and maintain a clean appearance.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your BAYSIDE FURNISHINGS BURKDALE TV Console.

- **Cleaning:** Wipe with a dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish or tempered glass.
- **Spills:** Immediately wipe any spills with a soft, dry cloth to prevent staining or damage to the wood veneer.
- **Temperature and Humidity:** Avoid placing the console in direct sunlight or near heat sources, and maintain a stable room temperature and humidity level to prevent warping or cracking.
- **Regular Checks:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.

TROUBLESHOOTING

This section addresses common issues you might encounter with your TV console.

Common Issues and Solutions:

- **Instability/Wobbling:**
Ensure the console is placed on a completely level surface. Check all assembly hardware to confirm they are securely tightened. Adjust any leveling feet if present.
- **Scratches/Dents:**
Minor scratches on the wood veneer may be touched up with a furniture repair marker. For deeper damage, consult a professional furniture repair service.
- **Glass Shelf Damage:**
Tempered glass is designed to be durable, but can break under extreme impact. If a glass shelf is damaged, contact the manufacturer for replacement options. Do not use a damaged shelf.
- **TV Mounting Issues:**
If your TV is not securely mounted, re-check the assembly instructions for the chosen mounting method. Ensure the TV's weight and size are within the console's specified limits (up to 70 inches, 135 pounds).

SPECIFICATIONS

Feature	Detail
Brand	BAYSIDE
Model	BURKDALE
Material	MDF with Birch Veneer, Tempered Glass
Color	Black

Maximum TV Size	70 inches
Maximum TV Weight	135 pounds
TV Mounting Options	Floating Swivel Mount, Desktop, Wall Mount
Product Care Instructions	Wipe with Dry Cloth
Manufacturer	BAYSIDE
UPC	764053535871
ASIN	B0975KZQT1
Date First Available	June 27, 2021
Shape	Rectangular
Item Depth	10.16 centimeters

WARRANTY INFORMATION

Specific warranty details for the BAYSIDE FURNISHINGS BURKDALE TV Console are typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the documentation included with your product or contact BAYSIDE FURNISHINGS directly through their official website or customer service channels.

CUSTOMER SUPPORT

If you require assistance with assembly, have questions about product functionality, or need to report a missing or damaged part, please contact the retailer where you purchased the console or the manufacturer, BAYSIDE FURNISHINGS.

When contacting support, please have your model number (BURKDALE) and ASIN (B0975KZQT1) readily available to expedite service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0975KZQT1>

More documents and user manuals: <https://manuals.plus/>