

manuals.plus /

> [VINABTY](#) /

> [VINABTY RC802V FUR6 Replacement Voice Remote Control User Manual](#)

VINABTY RC802V FUR6

VINABTY RC802V FUR6 Replacement Voice Remote Control User Manual

INTRODUCTION

This manual provides detailed instructions for the VINABTY RC802V FUR6 replacement voice remote control. It is designed to help you set up, operate, and maintain your remote for optimal performance with compatible TV models. Please read this manual thoroughly before use.

This remote control is compatible with a wide range of TV models, including but not limited to: 50A527, 32A325, 32S334, 55A527, 43A423, 32S6500, 32S6500S, 32S6800, 32S6800S, 32S6510S, 32S615, 32S60A, 32S65A, 40S6500, 40S6500FS, 40S6800FS, 40S6510FS, 40S6800, 40S615, 40S65A, 43P8M, 43S6500, 50C717, 55C717, 55P717, 65C717, 65P717, 32S5200, 42S6500, 43S65A, 43S6500FS, 43S6800FS, 43S6510FS, 43P8, 43P65US, 43P715, 43P717, 49S6500, 49S6500FS, 49S6800FS, 49S6510FS, 49S6800, 50P8M, 50P8S, 50T8S, 50P8, 50P65US, 50C715, 50C716, 50P715, 50P717, 55C815, 55P8M, 55P8S, 55T8S, 55P8, 55T8, 55C716, 55C715, 55C8, 55P715, 60P8M, 65C815, 65P8M, 65P8S, 65T8S, 65P8, 65T8, 65C716, 65C715, 65C8, 65P715, 75C815, 75P8M, 75P8MR, 75P715, 85P715, 85P8M, 100P715.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

2. Pairing the Remote Control (for Voice Functionality)

For voice control and full functionality, the remote may need to be paired with your TV. The pairing process can vary

slightly depending on your TV model. Refer to your TV's user manual for specific pairing instructions. General steps often include:

1. Ensure your TV is powered on.
2. Go to your TV's settings menu. Look for options like "Remotes & Accessories", "Bluetooth", or "System".
3. Select "Add Device" or "Pair Remote Control".
4. On the VINABTY RC802V FUR6 remote, press and hold the **OK** button and the **Home** button simultaneously for a few seconds until a pairing indicator (e.g., an LED light) on the remote starts to flash.
5. Once the remote appears in the TV's device list, select it to complete the pairing process.

If the remote does not pair, ensure it is within range of the TV and that there are no obstructions. You may need to repeat the pairing steps.

OPERATING INSTRUCTIONS

The VINABTY RC802V FUR6 remote control provides intuitive access to your TV's functions. Familiarize yourself with the common buttons and their uses:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Volume Up/Down:** Adjusts the TV's volume level.
- **Channel Up/Down:** Changes TV channels sequentially.
- **Mute Button:** Mutes or unmutes the TV's audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen or smart TV interface.
- **Voice Button (Microphone Icon):** Activates voice control. Press and hold to speak commands.
- **App Shortcut Buttons:** Dedicated buttons for popular streaming services (if present on your remote model).

Using Voice Control

Once paired, the voice control feature allows you to operate your TV using spoken commands:

1. Press and hold the **Voice Button** (microphone icon) on the remote.
2. Speak clearly into the microphone located on the remote control.
3. Release the **Voice Button** after speaking your command.

Examples of commands: "Open Netflix", "Search for action movies", "Switch to HDMI 1", "Volume up", "What's the weather?".







Illustration of the remote control in use, demonstrating typical viewing scenarios.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Remote is not responding:

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote and the TV's IR receiver.
- If it's a voice remote, ensure it is properly paired with the TV (refer to "Pairing the Remote Control" section).

Voice control is not working:

- Confirm the remote is successfully paired with your TV.
- Ensure you are pressing and holding the Voice Button while speaking.
- Speak clearly and directly into the remote's microphone.
- Check your TV's network connection, as voice commands often require internet access.

Buttons are sticky or unresponsive:

- Clean the remote control surface with a soft, dry cloth. Avoid liquids.
- If the issue persists, the remote may require replacement.

SPECIFICATIONS

Model Number:	RC802V FUR6
Brand:	VINABTY
Product Dimensions:	6 x 1.6 x 0.75 inches (15.24 x 4.06 x 1.91 cm)
Item Weight:	1.44 ounces (40.82 grams)
Power Source:	2 x AAA Batteries (not included)

Compatible Devices:	Television (various models as listed in Introduction)
Color:	Black

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the VINABTY customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the manufacturer's website or the retailer's support page where the product was purchased.

