

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fossil](#) /

› [Fossil Men's Bronson Quartz Stainless Steel Chronograph Watch FS5852 User Manual](#)

Fossil FS5852

Fossil Men's Bronson Quartz Stainless Steel Chronograph Watch FS5852 User Manual

INTRODUCTION

Welcome to the user manual for your new Fossil Men's Bronson Quartz Stainless Steel Chronograph Watch, Model FS5852. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your timepiece to ensure optimal performance and longevity. Please read these instructions carefully before using your watch.

COMPONENTS OVERVIEW

Familiarize yourself with the main components of your Fossil Bronson watch:

- **Crown:** Used for setting the time and date.
- **Pushers:** Buttons located on either side of the crown, primarily used for chronograph functions.
- **Dial:** The watch face displaying time, sub-dials, and date window.
- **Hands:** Hour, minute, and second hands, often with luminescent accents.
- **Sub-dials:** Smaller dials on the main face for chronograph minutes, seconds, and 24-hour time.
- **Case:** The main body of the watch, made of smoke gray stainless steel.
- **Band:** Smoke gray stainless steel bracelet with a fold-over clasp.



Figure 1: Front view of the Fossil Men's Bronson Chronograph Watch FS5852, showcasing the black sunray dial, three sub-dials, date window, and smoke stainless steel case and bracelet.





Figure 2: Side view of the watch, highlighting the crown and pushers on the right side of the case.





Figure 3: Back view of the watch, displaying the stainless steel bracelet and the secure fold-over clasp with the Fossil logo.

SETUP

1. Setting the Time

1. Pull the crown out to position 2.
2. Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. Push the crown back into position 0 to start the watch.

2. Setting the Date

1. Pull the crown out to position 1.
2. Rotate the crown to adjust the date.
3. Once the correct date is displayed, push the crown back into position 0.

3. Adjusting the Chronograph

The chronograph features three sub-dials for tracking minutes, seconds, and 24-hour time.

1. Press the top pusher to start the chronograph.
2. Press the top pusher again to stop the chronograph.
3. Press the bottom pusher to reset the chronograph hands to zero.

4. Adjusting the Band

The stainless steel bracelet links can be removed for a customized fit. It is recommended to have this adjustment performed by a professional jeweler or watch repair service to prevent damage to the band or clasp.

OPERATING THE WATCH

Timekeeping

Your watch is powered by a precise Quartz movement, ensuring accurate timekeeping. The main hands display the current hour, minute, and second.

Chronograph Function

The chronograph allows for precise timing of events. The sub-dials indicate elapsed time in seconds, minutes, and a 24-hour format. Refer to the 'Adjusting the Chronograph' section for operation.

Water Resistance

This watch is water-resistant up to 50 meters (165 feet) or 5 ATM. This rating means it is suitable for short periods of recreational swimming and showering. It is **not** suitable for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet or submerged to prevent water ingress.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, wipe the case and crystal with a soft, damp cloth. For the stainless steel band, a soft brush with mild soap and water can be used, ensuring to rinse thoroughly and dry completely. Avoid harsh chemicals or abrasive materials.

Battery Replacement

The watch uses one product-specific battery. When the watch stops running or the time becomes inaccurate, it may be time for a battery replacement. It is highly recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original Fossil watch tin (see Figure 4) provides excellent protection.



Figure 4: Example of Fossil watch tin packaging, suitable for storage.

TROUBLESHOOTING

- Watch not running:** Check if the crown is fully pushed in (position 0). If it is, the battery may need replacement.
- Time inaccuracy:** If the watch is consistently running slow or fast, the battery may be low, or the movement may require servicing.
- Chronograph hands not resetting to zero:** This may indicate a need for calibration or servicing.

For persistent issues, please contact Fossil customer support or an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	FS5852
Case Size	44mm
Band Width	22mm
Movement	Quartz Chronograph
Dial Color	Black Sunray with Gray/White Accents

Case Material	Smoke Gray Stainless Steel
Band Material	Smoke Gray Stainless Steel Bracelet
Crystal	Hardened Mineral Crystal
Water Resistance	5 ATM (50m / 165ft) - Suitable for recreational swimming and showering. Not for diving or snorkeling.
Functions	Chronograph, Date Window, 24-hour time, Luminous Accents
Battery	1 Product Specific battery (included)

Case Size Guide

To ensure a comfortable fit, refer to the general case size guide below. The 44mm case of your Bronson watch is considered a large size.

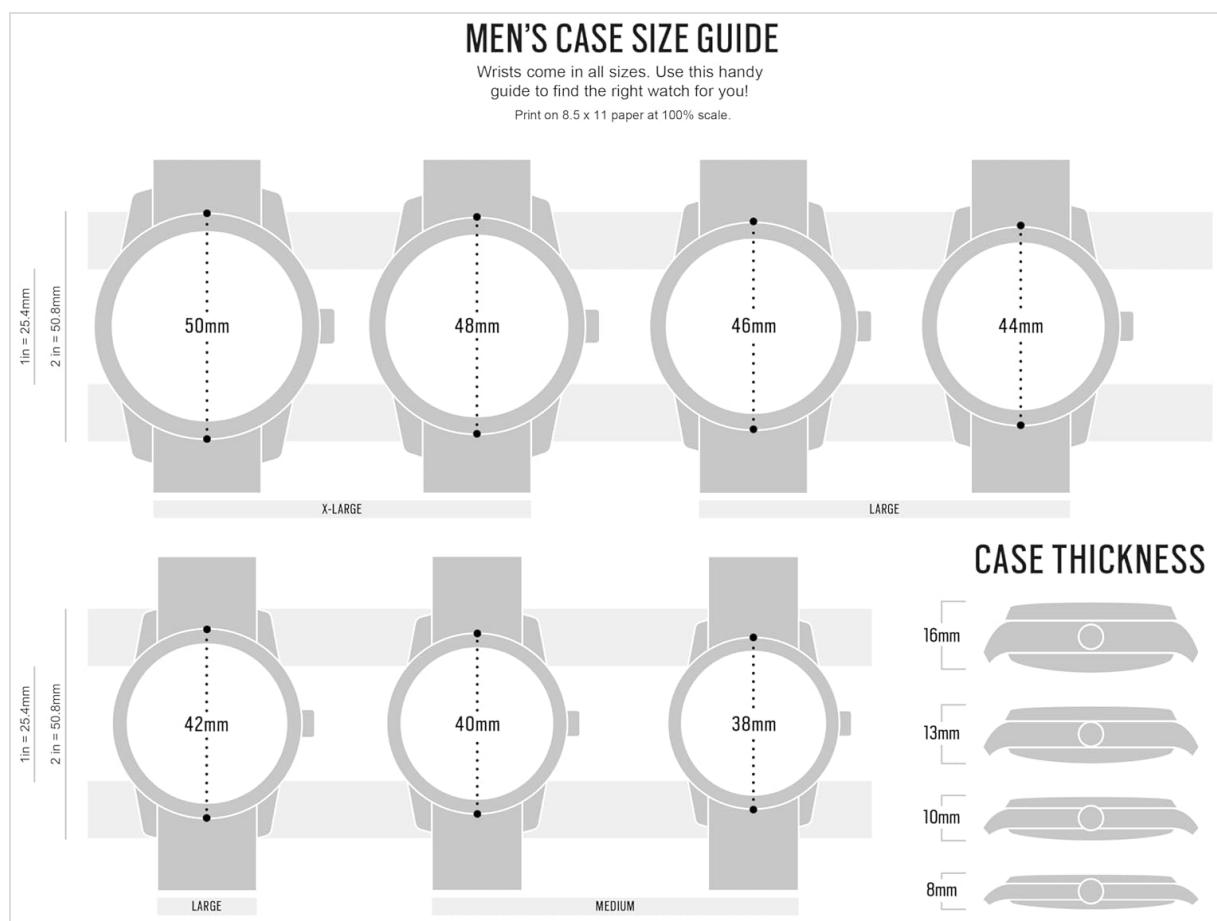


Figure 5: Men's watch case size guide, illustrating different watch diameters and case thicknesses for reference.


WARRANTY AND SUPPORT

Your Fossil watch is covered by a manufacturer's warranty. Details regarding the warranty period and coverage are typically included with your purchase documentation. Battery changes are often included under warranty for a specified period.

For warranty claims, service, or additional support, please visit the official Fossil website or contact their customer service department. Ensure you retain your proof of purchase.

For more information, you can visit the [Fossil Store on Amazon](#).

Related Documents - FS5852

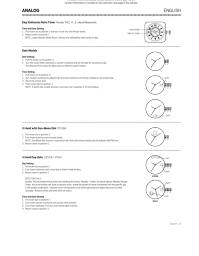	<p>Fossil World Timer Solar Watch Warranty Information and User Manual</p> <p>Comprehensive warranty information and user guide for the Fossil World Timer Solar Watch, covering time and date settings, chronograph, countdown timer, alarm, world time, compass, solar power, and water resistance.</p>
	<p>Fossil Smartwatch Quick Start Guide</p> <p>Get started with your Fossil smartwatch. This guide covers initial setup, charging, and connecting to your phone using the Android Wear app. It also includes essential health, safety, and regulatory information.</p>
	<p>Fossil Q Smartwatch Quick-Start Guide</p> <p>A quick-start guide for the Fossil Q Smartwatch, covering navigation, charging, notifications, apps, and staying connected.</p>
	<p>Fossil Watch Instruction Manuals: Analog, Digital, Automatic, and Multifunction Models</p> <p>Comprehensive guide to operating and setting various Fossil watch models, including analog, digital, analog-digital, automatic, mechanical, multifunction, chronograph, and stopwatch types. Covers time, date, alarm, and other functions.</p>
	<p>Fossil Q Hybrid Smartwatch Quick-Start Guide</p> <p>Get started with your Fossil Q Hybrid Smartwatch. This guide covers setup, notifications, battery replacement, strap changes, activity tracking, and staying connected. Learn to customize buttons and troubleshoot connectivity issues.</p>
	<p>Fossil DW13F3 Smartwatch Warranty and Information</p> <p>Comprehensive warranty, safety, and regulatory information for the Fossil DW13F3 Smartwatch, provided by Fossil Group, Inc. Learn about product coverage, safe usage, and compliance.</p>