

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Rowenta](#) /

› [Rowenta X-Trem Power Vacuum Cleaner Dust Bin RO6943 RO6963 RO6993 Instruction Manual](#)

Rowenta RO6943 RO6963 RO6993

Rowenta X-Trem Power Vacuum Cleaner Dust Bin Instruction Manual

Models: RO6943, RO6963, RO6993

INTRODUCTION

This manual provides essential instructions for the proper use, installation, and maintenance of your Rowenta X-Trem Power vacuum cleaner dust bin. This is an original Rowenta replacement part designed for specific X-Trem Power Cyclonic vacuum cleaner models.

Please read these instructions carefully before installing or using the dust bin to ensure optimal performance and longevity of your appliance.

PRODUCT OVERVIEW

The dust bin is a crucial component of your cyclonic vacuum cleaner, designed to collect dust and debris during operation. It is a bagless system, providing convenience and efficiency.



Image 1: The transparent red dust bin for Rowenta X-Trem Power Cyclonic vacuum cleaners. It features a "NO BAG" inscription, indicating its bagless design, and has attachment points on the side for secure fitting into the vacuum cleaner unit.

SETUP AND INSTALLATION

1. **Preparation:** Ensure your vacuum cleaner is unplugged from the power outlet before attempting any installation or removal of parts.
2. **Remove Old Dust Bin (if applicable):** Locate the release mechanism for the existing dust bin on your Rowenta X-Trem Power vacuum cleaner. Typically, this involves pressing a button or lever and pulling the bin away from the main unit.
3. **Inspect New Dust Bin:** Carefully unpackage the new dust bin and inspect it for any damage.
4. **Install New Dust Bin:** Align the new dust bin with the corresponding slot on your vacuum cleaner. Gently push it into place until you hear a click, indicating it is securely fastened. Ensure there are no

gaps and the bin is firmly attached.

5. **Verification:** Lightly tug on the dust bin to confirm it is properly locked into position before plugging in and operating the vacuum cleaner.

Note: Refer to your specific vacuum cleaner model's main instruction manual for detailed diagrams and precise release mechanisms.

OPERATING THE DUST BIN (EMPTYING)

The dust bin should be emptied regularly to maintain optimal suction power and prevent blockages.

1. **Disconnect Power:** Always unplug the vacuum cleaner from the power outlet before emptying the dust bin.
2. **Remove Dust Bin:** Press the release button or lever to detach the dust bin from the vacuum cleaner unit.
3. **Open Dust Bin:** Locate the lid or bottom flap release mechanism on the dust bin. Open it over a waste bin to dispose of the collected dust and debris.
4. **Close and Reattach:** Close the dust bin lid/flap securely. Reattach the dust bin to the vacuum cleaner unit, ensuring it clicks into place.

Warning: Do not overfill the dust bin. Empty it when the debris reaches the "MAX" fill line indicated on the bin.

MAINTENANCE AND CLEANING

Regular cleaning of the dust bin is essential for hygiene and to ensure efficient operation of your vacuum cleaner.

- **Frequency:** Clean the dust bin thoroughly after every few uses, or more frequently if you vacuum large amounts of fine dust.
- **Disassembly:** After emptying, you may need to separate the internal components (e.g., cyclone cone, filter holder) from the main bin for a more thorough clean. Refer to your vacuum cleaner's main manual for specific disassembly instructions.
- **Washing:** Wash the dust bin and its washable components (if applicable) with lukewarm water and a mild detergent. Rinse thoroughly to remove all soap residue.
- **Drying:** Allow all parts to air dry completely for at least 24 hours before reassembling and reattaching to the vacuum cleaner. Do not use heat to dry, as this may deform the plastic.
- **Filters:** Check and clean or replace your vacuum cleaner's filters as recommended in your main vacuum cleaner manual. A clogged filter can reduce suction even with a clean dust bin.

Caution: Ensure all parts are completely dry before reassembly to prevent damage to the vacuum cleaner.

TROUBLESHOOTING

If you encounter issues related to the dust bin, consider the following:

- **Dust Bin Not Attaching Securely:**
 - Ensure the dust bin is correctly aligned with the vacuum cleaner's housing.
 - Check for any obstructions preventing the bin from clicking into place.
 - Verify that the release mechanism is not stuck.

- **Reduced Suction Power:**

- Empty the dust bin if it is full.
- Clean the dust bin and its internal components thoroughly.
- Check and clean or replace the vacuum cleaner's filters (not part of the dust bin, but crucial for suction).
- Inspect the vacuum cleaner's hose and attachments for blockages.

- **Dust Leaking from Bin:**

- Ensure the dust bin lid/flap is securely closed after emptying.
- Check for cracks or damage to the dust bin itself. If damaged, replacement may be necessary.
- Verify the dust bin is correctly seated and locked into the vacuum cleaner unit.

For persistent issues, consult the main instruction manual for your Rowenta X-Trem Power vacuum cleaner or contact Rowenta customer support.

SPECIFICATIONS

- **Brand:** Rowenta
- **Product Type:** Replacement Dust Bin
- **Compatibility:** Rowenta X-Trem Power Cyclonic Vacuum Cleaners (Models: RO6943, RO6963, RO6993)
- **Features:** Cyclonic, Bagless
- **Part Number (ASIN):** B0977MLWFB

WARRANTY AND SUPPORT

This dust bin is an original Rowenta replacement part. For information regarding warranty coverage, please refer to the warranty documentation provided with your original Rowenta X-Trem Power vacuum cleaner or visit the official Rowenta website.

For technical support, spare parts, or service inquiries, please contact Rowenta customer service. You can usually find contact information on the Rowenta official website or in your vacuum cleaner's main instruction manual.

When contacting support, please have your vacuum cleaner's model number (e.g., RO6943, RO6963, RO6993) and the ASIN of this replacement part (B0977MLWFB) readily available.