

Dreo DR-KAF001

Dreo Air Fryer Pro Max User Manual

Model: DR-KAF001

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Dreo Air Fryer Pro Max is a versatile kitchen appliance designed for healthier cooking with its 360° hot air circulation technology. It features a 6.8-quart capacity, a wide temperature range, and an intuitive LED touchscreen with multiple presets.



The Dreo Air Fryer Pro Max, showcasing its sleek black design and visible cooking window.

Cut Cooking Time by 30%

Advanced HeatWrap technology and higher heat crisp your food in less time.



The transparent viewing window allows you to monitor cooking progress without opening the basket.

360° Hot Air Circulation

Dreo HeatWrap technology ensures an even crispness and golden browning.



Illustration of the 360° hot air circulation for even cooking and crisp results.

100+ Free Recipes

Get inspiration from our chef-curated recipes.



The control panel features 11 smart presets for quick and convenient cooking.

SETUP

1. **Unpack:** Carefully remove all packaging materials and any promotional labels or stickers from your air fryer.
2. **Initial Cleaning:** Before first use, wash the air fryer basket and crisper plate with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of space behind and above the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet. The control panel will illuminate briefly.
5. **First Use (Odor Removal):** It is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) before cooking food for the first time. This helps to eliminate any manufacturing odors. Ensure the area is well-ventilated during this process.

Basic Operation

1. **Power On:** Plug in the air fryer. Press the power button on the LED touchscreen to turn on the unit.
2. **Preheat (Optional but Recommended):** For best results, preheat the air fryer. Select a preset or manually set the temperature and time, then press the Start/Pause button.
3. **Load Food:** Carefully place food into the air fryer basket. Do not overfill the basket to ensure even cooking.
4. **Select Cooking Mode:** Choose from the 11 smart presets (e.g., Fries, Poultry, Steak, Seafood, Bacon, Vegetable, Air Fry, Bake, Roast, Broil, Dehydrate) or manually adjust the temperature (100°F to 450°F) and time using the dedicated buttons.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Shake Reminder:** For certain recipes, the air fryer may prompt a 'Shake' reminder during the cooking cycle. Remove the basket, shake the contents, and reinsert the basket to resume cooking.
7. **Monitor Progress:** Use the visible window to check on your food without interrupting the cooking process.
8. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer the food.
9. **Power Off:** Press the power button to turn off the unit, or it will automatically shut off after a period of inactivity.

Industry-Leading Temperature

Aluminized steel chamber cooks at **450°F** for a **crispier and juicier** taste.



Achieve crispier and juicier results with the industry-leading temperature of 450°F.




See-Through Window

Check your food status anytime **without pulling out the basket.**

Advanced HeatWrap technology and higher heat reduce cooking time by up to 30%.

Cleaning, Easier Than Ever!

Nonstick basket and plate are
grease-proof & dishwasher-safe.

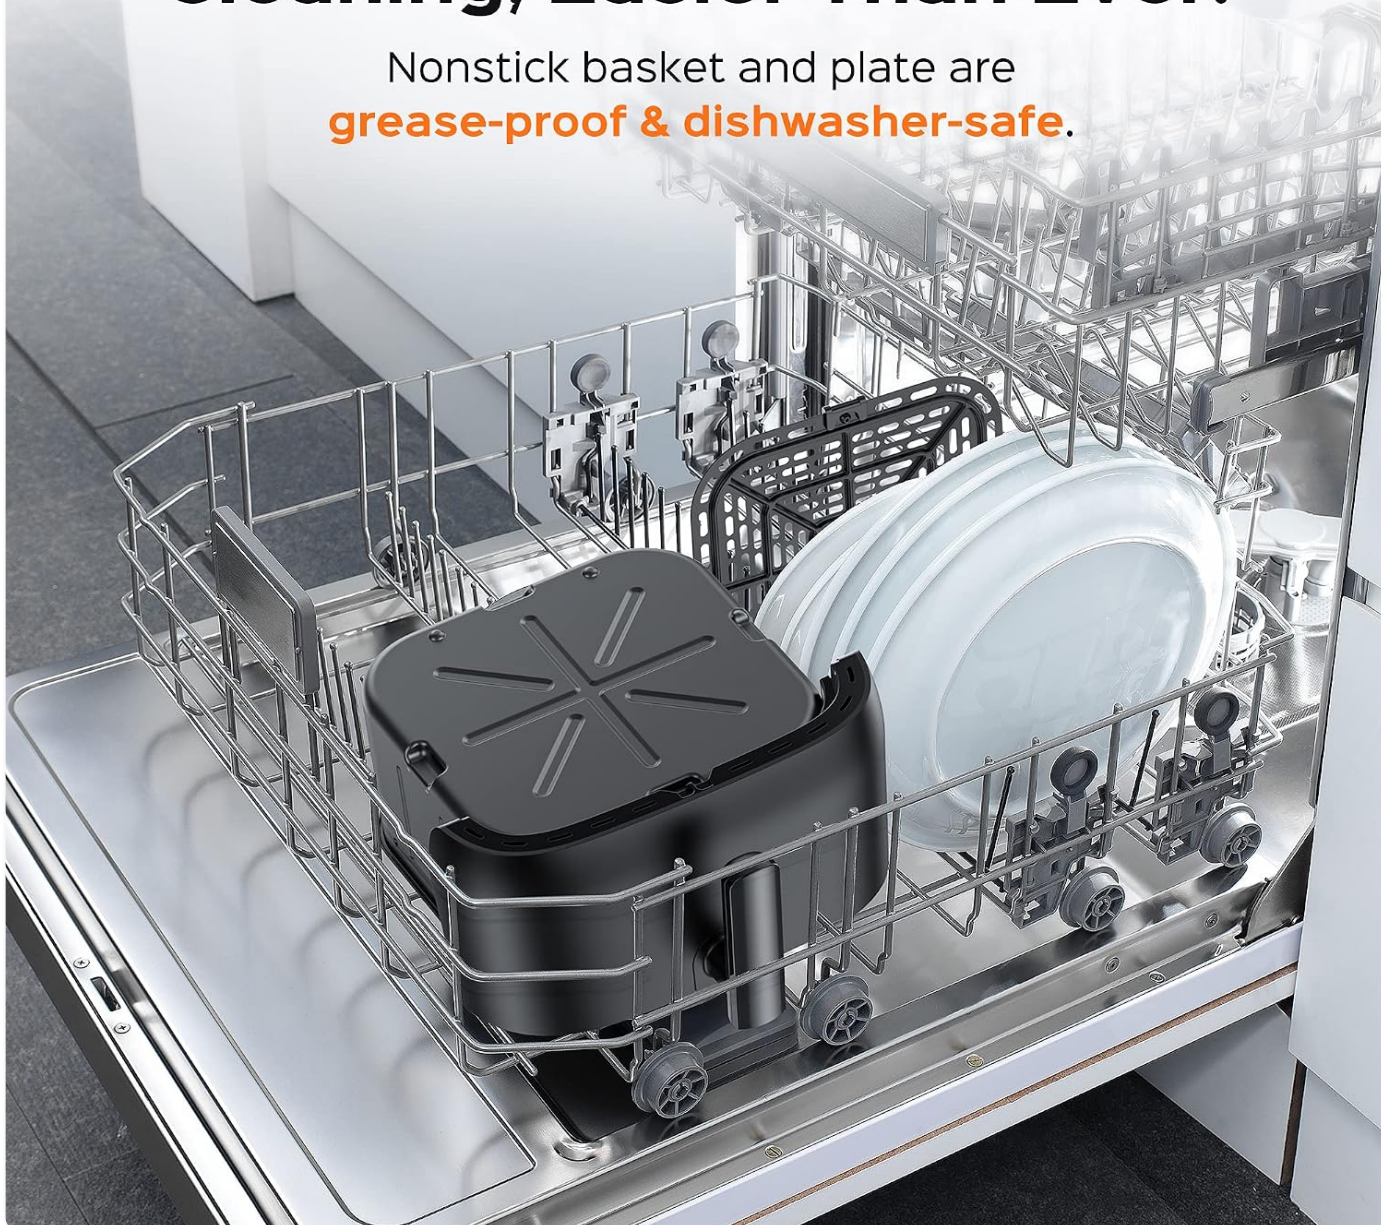

Explore a wide range of culinary possibilities with the included 100+ free recipes.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the lifespan of your Dreo Air Fryer Pro Max.

1. **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** The non-stick basket and crisper plate are dishwasher-safe. For manual cleaning, wash with warm, soapy water and a non-abrasive sponge. Rinse and dry thoroughly.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
4. **Exterior:** Clean the exterior with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the air fryer in a cool, dry place.

One Touch Start

11 smart presets for quick start. No need to adjust time and temperature.



The non-stick basket and plate are grease-proof and dishwasher-safe for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your Dreo Air Fryer Pro Max, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overcrowded; food not shaken; incorrect temperature/time.	Cook food in smaller batches. Shake or flip food halfway through cooking. Adjust temperature and time as needed for specific recipes.

Problem	Possible Cause	Solution
White smoke coming from the unit.	Grease residue from previous use; high-fat food.	Clean the basket and interior thoroughly after each use. For high-fat foods, place a piece of aluminum foil at the bottom of the basket to catch excess oil.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); basket overcrowded.	Pat food dry before air frying. Lightly coat food with oil if necessary. Do not overcrowd the basket.

SPECIFICATIONS

Model Name: DR-KAF001

Product Dimensions: 12"D x 14"W x 13"H

Color: Black

Capacity: 6.8 Quarts

Material: Stainless Steel

Output Wattage: 1500 Watts

Item Weight: 12 Pounds

Voltage: 120 Volts

Control Method: Touch

Nonstick Coating: Yes

Inner Material: Stainless Steel

Min Temperature Setting: 100 Degrees Fahrenheit

Max Temperature Setting: 450 Degrees Fahrenheit

Cable Length: 1.8 Meters

Air Frying Technology: Airwrap Technology

UPC: 860006518165

WARRANTY AND SUPPORT

Dreo offers an extended warranty for its products. Please refer to the warranty card included with your purchase or visit the official Dreo website for detailed warranty information and registration.

For technical support, troubleshooting assistance, or any questions regarding your Dreo Air Fryer Pro Max, please contact Dreo Customer Service. Contact information can typically be found in the packaging or on the official Dreo website.

You can also refer to the official PDF user manual for more detailed information [Dreo Air Fryer Pro Max User Manual \(PDF\)](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question