

Easytry123 Replacement Remote Control for Celsius SEA Breeze AC Air Conditioners

Easytry123 Replacement Remote Control Instruction Manual

For Celsius SEA Breeze AC Air Conditioners

INTRODUCTION

This document provides comprehensive instructions for the Easytry123 replacement remote control, designed for use with various Celsius SEA Breeze AC Air Conditioner models. This remote offers essential functions for controlling your air conditioning unit. Please note that as a replacement, some advanced functions present on the original remote may not be supported.

SETUP

Battery Installation

The remote control requires two AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the "OPEN" tab and lift to remove it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Back of the remote control with the battery compartment. The 'OPEN' tab is visible, indicating where to slide the cover to insert batteries.

Important: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the remote control will not be used for an extended period.

OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.



Figure 2: Front view of the remote control, displaying the LCD screen and all functional buttons for controlling the air conditioner.

Button Functions:

- **Power Button** (): Turns the air conditioner ON or OFF.
- **MODE Button**: Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **FAN Button**: Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TEMP ▲ / ▼ Buttons**: Increases or decreases the desired temperature setting.
- **TIMER ON / TIMER OFF Buttons**: Sets a specific time for the air conditioner to turn ON or OFF automatically.
- **SLEEP Button**: Activates the sleep mode, which adjusts temperature gradually for comfortable sleep and energy saving.
- **TURBO Button**: Initiates rapid cooling or heating for a short period.
- **LIGHT Button**: Controls the display light on the air conditioner unit.
- **I FEEL Button**: Activates a function where the remote's built-in sensor measures the ambient temperature and sends the data to the AC unit for more precise temperature control around the remote.
- **CLOCK Button**: Sets the current time on the remote's display.
- **BLOW Button**: Activates the blow function to dry the internal components of the AC unit, preventing mold and odors.

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, alcohol, or abrasive cleaning agents, as these can damage the remote's finish or internal components.

Battery Care

- Replace batteries when the remote's display becomes dim or the remote becomes unresponsive.
- Always replace both batteries at the same time.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control signal not reaching the AC unit.	Obstruction between remote and AC unit; remote too far away.	Ensure a clear line of sight to the AC unit's receiver. Move closer to the unit.
Some functions do not work.	This is a replacement remote; not all original functions may be supported.	Verify compatibility with your specific AC model. The remote is designed for basic and common functions.
AC unit does not respond to commands.	AC unit power issue; remote control malfunction.	Check if the AC unit is powered on. If batteries are new and line of sight is clear, the remote may be faulty.

SPECIFICATIONS

- **Brand:** Easytry123
- **Compatible Devices:** Celsius SEA Breeze AC Air Conditioners
- **Compatible Models (Partial List):** SMZCA18H4ZIGX, SMZCA24H4ZIGX, SMZD12H4ZIGX, SMZD18H4ZIGX, SMZD21H4ZIGX, 12A422YIGX, 18A420ZIGX, 18H420ZIGX, 12A422ZIGX
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This instruction manual does not include specific warranty information. For details regarding warranty, returns, or technical support, please contact the seller or retailer from whom you purchased this replacement remote control. Refer to your purchase documentation for contact information.

