

WE WERADREVGDBL3

WE FM Dual Alarm Clock Radio

Model: WERADREVGDBL3

1. INTRODUCTION

Thank you for choosing the WE FM Dual Alarm Clock Radio. This device combines a clear FM radio with a large green LED display, dual alarm functions, and a convenient USB charging port. This manual provides detailed instructions for proper setup, operation, and maintenance to ensure you get the most out of your new clock radio.

Key Features:

- Large Green LED Display with adjustable brightness for comfortable viewing.
- Dual Alarm settings for flexible scheduling.
- FM Radio for listening to your favorite stations.
- Integrated USB Port for charging your mobile devices.
- Snooze Function for extra sleep.



Image 1.1: WE FM Dual Alarm Clock Radio highlighting its main features.

2. SAFETY INFORMATION

Please read all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Ensure the power adapter is compatible with your local power supply.
- Keep the device away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Clean only with a dry cloth.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact your retailer.

- WE FM Dual Alarm Clock Radio
- Power Adapter
- User Manual (this document)



Image 3.1: The WE FM Dual Alarm Clock Radio packaging.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your clock radio.



Image 4.1: Top view of the WE FM Dual Alarm Clock Radio with controls.

Control Buttons:

- **MEM/CLK:** Memory / Clock Set button.
- **HOUR:** Hour adjustment button.
- **MIN:** Minute adjustment button.
- **TUN+/SLP:** Tune Up / Sleep Timer button.
- **12/24H:** 12-hour / 24-hour format toggle.
- **VOL-:** Volume Down button.
- **VOL+:** Volume Up button.
- **ALM1:** Alarm 1 Set button.
- **ALM2:** Alarm 2 Set button.
- **ON/OFF:** Power On/Off button.
- **SNOOZE/DIMMER:** Snooze / Display Dimmer button.

5. SETUP

5.1 Power Connection

1. Connect the power adapter to the DC IN port on the back of the clock radio.
2. Plug the other end of the power adapter into a standard wall outlet.
3. The display will light up, indicating the device is powered on.

5.2 Setting the Time

1. Press and hold the **MEM/CLK** button until the hour digits start flashing.
2. Press the **HOUR** button repeatedly to set the correct hour.
3. Press the **MIN** button repeatedly to set the correct minute.
4. Press the **MEM/CLK** button again to confirm the time setting.
5. To switch between 12-hour and 24-hour format, press the **12/24H** button.

6. OPERATING INSTRUCTIONS

6.1 Setting Alarms (Alarm 1 and Alarm 2)

The clock radio features two independent alarms.

1. Press and hold the **ALM1** (or **ALM2**) button until the alarm hour digits flash.
2. Press the **HOUR** button to set the desired alarm hour.
3. Press the **MIN** button to set the desired alarm minute.
4. Press the **ALM1** (or **ALM2**) button again to confirm the alarm time.
5. To activate/deactivate an alarm, briefly press the **ALM1** (or **ALM2**) button. An alarm icon will appear/disappear on the display.

6.2 Using the FM Radio

1. Press the **ON/OFF** button to turn on the radio.
2. Press the **TUN+** or **TUN-** (if available, otherwise use **TUN+** for scanning) button to manually tune to a station.
3. To auto-scan and save stations, press and hold the **TUN+** button. The radio will scan and store available FM stations.
4. Adjust the volume using the **VOL+** and **VOL-** buttons.

6.3 Snooze Function

When an alarm sounds, press the **SNOOZE/DIMMER** button to temporarily silence the alarm for 9 minutes. The alarm will sound again after this period.

6.4 Display Brightness Adjustment

To adjust the brightness of the LED display, briefly press the **SNOOZE/DIMMER** button when the alarm is not sounding. Cycle through available brightness levels.

6.5 USB Charging Port

The integrated USB port allows you to charge compatible mobile devices. Simply connect your device's USB charging cable to the USB port on the clock radio.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the device from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior of the clock radio.
- Do not use liquid cleaners, aerosol cleaners, or strong detergents, as they may damage the finish.

7.2 Storage

If you plan not to use the device for an extended period, unplug it from the power source and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter any issues with your clock radio, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No display / Device not turning on	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely plugged into the device and a working wall outlet.
Alarm not sounding	Alarm not activated or volume too low.	Check if the alarm icon is displayed. If not, activate the alarm. Increase the volume.
Poor radio reception	Weak signal or antenna position.	Extend the FM antenna fully and reposition it for better reception. Try auto-scanning again.
USB charging not working	Cable issue or device incompatibility.	Ensure the USB cable is functional and properly connected. Check if your device is compatible with standard USB charging.

9. SPECIFICATIONS

Feature	Detail
Brand	WE
Model Number	WERADREVGDBL3
Color	White
Display Type	Digital (Green LED)
Special Features	Dual Alarm, Large Display, USB Charging Port
Power Source	Corded Electric
Material	Acrylonitrile Butadiene Styrene (ABS)
Connectivity Technology	USB
Mounting Type	Tabletop

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This WE product is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

10.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact WE customer support. Our team is available to assist you with any issues you may encounter.

Please refer to the retailer's website or your purchase documentation for specific contact details.

