

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat DIGITRADIO BT 1 Portable Bluetooth Speaker with DAB+ Digital Radio User Manual](#)

TechniSat DIGITRADIO BT 1

TechniSat DIGITRADIO BT 1 Portable Bluetooth Speaker with DAB+ Digital Radio User Manual

Model: DIGITRADIO BT 1

1. INTRODUCTION



Figure 1: The TechniSat DIGITRADIO BT 1 portable Bluetooth speaker and DAB+ radio.

This manual provides essential information for the safe and efficient operation of your TechniSat DIGITRADIO BT 1. This device combines the clarity of DAB+ digital radio with the versatility of a portable Bluetooth speaker. It also features FM radio, an alarm clock, and a hands-free function. Please read this manual thoroughly before using the device and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.

- Avoid placing the device near heat sources or in direct sunlight.
- Do not disassemble the device. Refer all servicing to qualified personnel.
- Use only the provided USB-C charging cable.
- Ensure proper ventilation around the device during operation.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- TechniSat DIGITRADIO BT 1 unit
- Extendable radio antenna
- USB-C charging cable
- User manual (this document)

4. PRODUCT OVERVIEW

4.1 Front View



Figure 2: Front view of the TechniSat DIGITRADIO BT 1, showing the speaker grille and control panel.

The front of the device features the main speaker grille and the control panel with an LCD display.

4.2 Top Control Panel and Display



Figure 3: Top view of the control panel with the antenna extended, displaying radio information on the LCD screen.

The top panel houses the LCD display and various control buttons.

- **Power Button ():** Turns the device on/off.
- **MODE Button:** Switches between DAB+, FM, Bluetooth, and AUX-in modes.
- **SCAN Button:** Initiates a scan for radio stations.
- **Volume Buttons (- / +):** Adjusts the volume level.
- **i-MENU Button:** Accesses menu options.
- **Navigation Buttons (< / >):** Navigates through menus or stations.
- **OK Button:** Confirms selections.
- **Preset Buttons (1, 2, 3):** Direct access to saved favorite stations.

4.3 Rear View and Connections



Figure 4: Rear view of the TechniSat DIGITRADIO BT 1, showing the antenna slot, AUX-in port, and USB-C charging port.

The rear panel includes the retractable antenna, AUX-in port, and USB-C charging port.

- **Retractable Antenna:** For optimal DAB+ and FM radio reception.
- **AUX-in Port (3.5mm):** Connect external audio devices.
- **USB-C Charging Port:** For charging the internal battery.

5. SETUP

5.1 Initial Charging

1. Connect the supplied USB-C cable to the charging port on the rear of the device.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator on the display will show the charging status. A full charge provides up to nine hours of operation.

5.2 Powering On/Off

- To power on, press and hold the (Power) button until the display illuminates.
- To power off, press and hold the (Power) button until the display turns off.

5.3 Antenna Adjustment

For optimal radio reception, fully extend the telescopic antenna located at the rear of the device. Adjust its position for the best signal quality.

6. OPERATING MODES

6.1 DAB+ Digital Radio

1. Press the **MODE** button to select DAB+ mode.
2. If this is the first time using DAB+ or if you are in a new location, press the **SCAN** button to perform a full scan for available stations.
3. Use the **<** and **>** buttons to navigate through the list of available stations.
4. Press **OK** to select a station.

5. To save a favorite station, press and hold one of the preset buttons (1, 2, or 3) until the display confirms the save. To recall a saved station, simply press the corresponding preset button. The device supports 30 DAB+ favorite presets.

6.2 FM Radio

1. Press the **MODE** button to select FM mode.
2. Press the **SCAN** button to automatically search for and store available FM stations.
3. Alternatively, use the < and > buttons for manual tuning.
4. To save a favorite station, press and hold one of the preset buttons (1, 2, or 3) until the display confirms the save. To recall a saved station, simply press the corresponding preset button. The device supports 30 FM favorite presets.

6.3 Bluetooth Mode

1. Press the **MODE** button to select Bluetooth mode. The display will show "Bluetooth Pairing" or similar, indicating it's ready to connect.
2. On your smartphone or tablet, enable Bluetooth and search for available devices.
3. Select "DIGITRADIO BT 1" from the list of devices.
4. Once paired, you can stream audio from your device to the DIGITRADIO BT 1.
5. **Hands-free Function:** When a call comes in while connected via Bluetooth, you can answer it using the device's built-in microphone.

6.4 AUX-in Mode

1. Connect an external audio device (e.g., MP3 player) to the AUX-in port on the rear of the DIGITRADIO BT 1 using a 3.5mm audio cable (not included).
2. Press the **MODE** button to select AUX-in mode.
3. Control playback and volume from your external audio device.

6.5 Alarm and Timer Functions

The DIGITRADIO BT 1 includes an alarm timer and a sleep timer.

- To set the alarm: Access the menu using the **i-MENU** button, navigate to "Alarm" settings, and follow the on-screen prompts to set the time and alarm source (DAB+, FM, or buzzer).
- To set the sleep timer: Access the menu using the **i-MENU** button, navigate to "Sleep Timer" settings, and select the desired duration (e.g., 15, 30, 60 minutes). The device will automatically power off after the set time.

7. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the device is not used for an extended period, charge the battery periodically to maintain its lifespan.
- Store the device in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the device using the USB-C cable.
Poor radio reception	Antenna not extended or poor signal area.	Fully extend and adjust the antenna. Move the device to a location with better reception.
Bluetooth device not pairing	Bluetooth not enabled on source device or DIGITRADIO BT 1. Device is out of range.	Ensure both devices have Bluetooth enabled and are in pairing mode. Move devices closer.
No sound from AUX-in	Cable not connected properly or incorrect mode selected.	Check the 3.5mm audio cable connection. Ensure AUX-in mode is selected on the DIGITRADIO BT 1.

9. SPECIFICATIONS

- Model Name:** DIGITRADIO BT 1
- Model Number:** 0000/3968
- Connectivity:** Bluetooth, DAB+, FM, AUX-in
- Special Features:** DAB+ digital radio, FM radio with RDS, favorite memory (30 DAB+/30 FM), alarm timer, Bluetooth audio streaming, hands-free kit with integrated microphone.
- Compatible Devices:** Smartphone, tablet
- Power Source:** Rechargeable Lithium-ion battery, USB-C (external power adapter not included)
- Battery Life:** Up to 9 hours (approximate, depending on usage)
- Dimensions (L x W x H):** 18 cm x 8.5 cm x 6.5 cm (7.09 x 3.35 x 2.56 inches)
- Manufacturer:** TechniSat

10. WARRANTY AND SUPPORT

The TechniSat DIGITRADIO BT 1 comes with a 1-year warranty for spare parts availability. For warranty claims or technical support, please contact your retailer or visit the official TechniSat website.

Note: Software updates are not guaranteed beyond the initial purchase.

© 2023 TechniSat. All rights reserved.

Related Documents - DIGITRADIO BT 1

	<p>TechniSat DIGITRADIO 217 Operating Instructions</p> <p>Comprehensive operating instructions for the TechniSat DIGITRADIO 217, detailing its features, setup, functions, and safety guidelines for DAB+/UKW radio with Bluetooth audio streaming and alarm clock functionality.</p>
---	---

 <p>DIGITRADIO 601 DIGITRADIO 631 Internet Radio mit DAB+ / UKW Tuner und Bluetooth Streaming</p>	<p><u>TechniSat DIGITRADIO 601 & 631: Bedienungsanleitung für Internetradio mit DAB+/UKW und Bluetooth</u></p> <p>Umfassende Bedienungsanleitung für das TechniSat DIGITRADIO 601 und DIGITRADIO 631. Erfahren Sie mehr über die Funktionen, Einrichtung und Bedienung Ihres Internet-Radios mit DAB+/UKW-Tuner und Bluetooth-Streaming.</p>
 <p>Operating instructions DIGITRADIO 217 Internet radio with DAB+ / FM tuner and alarm clock function</p>	<p><u>TechniSat DIGITRADIO 217 Operating Instructions</u></p> <p>User manual for the TechniSat DIGITRADIO 217, a DAB+/UKW radio featuring Bluetooth audio streaming and an alarm clock function. Learn about setup, operation, safety, and technical specifications.</p>
 <p>Instrukcja obsługi DIGITRADIO 217 Radio internetowe z DAB+ / FM i funkcją budzików</p>	<p><u>DIGITRADIO 217: Instrukcja obsługi radia DAB+/FM z Bluetooth i budzikiem</u></p> <p>Przewodnik użytkownika dla TechniSat DIGITRADIO 217, szczegółowo opisujący funkcje radia DAB+/FM, strumieniowe przesyłanie dźwięku Bluetooth, ustawienia budzika i obsługę.</p>
 <p>DIGITRADIO 140</p>	<p><u>TechniSat DIGITRADIO 140 Instruction Manual</u></p> <p>Comprehensive instruction manual for the TechniSat DIGITRADIO 140, covering setup, operation, features like Internet Radio, DAB+, FM, Bluetooth, CD/MP3 playback, and troubleshooting.</p>
 <p>NOTICE TechniSat DigitRadio 210 IR Code: 001279327 CONRAD</p>	<p><u>TechniSat DigitRadio 210 IR User Manual - DAB/FM Radio Guide</u></p> <p>Comprehensive user manual for the TechniSat DigitRadio 210 IR, covering setup, operation, DAB/FM features, safety, and technical specifications. Learn how to use your digital radio.</p>