#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Miele /
- Miele Complete C3 Turbo Vacuum Cleaner (Model SGDA0) Instruction Manual

#### Miele SGDA0

# Miele Complete C3 Turbo Vacuum Cleaner (Model SGDA0) Instruction Manual

#### 1. Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Miele Complete C3 Turbo Vacuum Cleaner, Model SGDA0. This powerful 2000 Watt canister vacuum is designed for deep cleaning and features a multi-stage filtration system for clean air. Its unique technical design ensures effective cleaning performance even with lower power settings. Please read this manual thoroughly before first use to ensure proper handling and to prevent damage.

## 2. SAFETY INSTRUCTIONS

Always observe the following safety precautions when using your Miele Complete C3 Turbo Vacuum Cleaner:

- Ensure the voltage indicated on the rating plate matches your mains voltage.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not vacuum up burning or glowing objects, such as cigarettes, ashes, or hot embers.
- Do not vacuum up fine dust, such as flour, cement, or toner, without a dustbag and filter in place.
- · Keep the appliance away from children and pets.
- Regularly check the power cord for damage. If damaged, it must be replaced by a qualified service technician.
- Always unplug the vacuum cleaner from the mains before cleaning or performing maintenance.
- Do not operate the vacuum cleaner without the dustbag and all filters correctly installed.

#### 3. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present:

- Miele Complete C3 Turbo Vacuum Cleaner main unit
- · Flexible suction hose

- · Telescopic suction wand
- · AllTeQ floorhead
- · Dusting brush
- Crevice nozzle
- Upholstery nozzle
- Operating instructions (this manual)

# 4. SETUP

Follow these steps to assemble your vacuum cleaner:

- 1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
- 2. **Attaching the Hose:** Insert the hose connector into the suction opening on the main unit until it clicks securely into place. To detach, press the release buttons on the side of the connector.
- 3. **Connecting the Telescopic Wand:** Push the wider end of the telescopic suction wand into the handle of the hose until it clicks.
- 4. **Attaching the Floorhead:** Push the floorhead onto the narrow end of the telescopic suction wand until it clicks.
- 5. **Adjusting the Telescopic Wand:** Press the release button on the telescopic wand and adjust it to your desired length. Release the button to lock it in position.
- 6. **Power Connection:** Extend the power cord to the desired length and plug it into a suitable mains socket.



This image displays the Miele Complete C3 Turbo Vacuum Cleaner. It features a sleek black canister design with a flexible grey hose connected to the main unit. A silver telescopic suction wand is attached to the hose, leading down to a black floorhead. The main unit has control buttons visible on its front panel.

## 5. OPERATING INSTRUCTIONS

Your Miele Complete C3 Turbo Vacuum Cleaner is designed for ease of use:

- Power On/Off: Press the foot switch with the power symbol (/O) on the main unit to switch the vacuum cleaner on or off.
- Suction Power Control: Use the foot switches with '+' and '-' symbols on the main unit to adjust the suction power. Select the appropriate power level for the surface you are cleaning (e.g., low for curtains, high for hard floors).
- Cable Rewind: To rewind the power cable, gently tap the foot switch with the cable symbol. The cable will automatically retract into the unit.
- Using Attachments: The dusting brush, crevice nozzle, and upholstery nozzle can be attached directly to the handle or the telescopic wand for specialized cleaning tasks.
- Parking System: For short breaks during vacuuming, you can hook the floorhead into the parking attachment on the side of the vacuum cleaner. This also switches off the motor automatically.

#### 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner:

## 6.1. Dustbag Replacement

Replace the dustbag when the dustbag change indicator turns red. To replace:

- 1. Switch off the vacuum cleaner and unplug it from the mains.
- 2. Open the dust compartment lid by lifting the release catch.
- 3. The dustbag collar will automatically close when you pull the dustbag out.
- 4. Insert a new Miele Original dustbag into the holder until it clicks into place.
- 5. Close the dust compartment lid firmly until it latches.

#### 6.2. Filter Maintenance

Your vacuum cleaner is equipped with a motor protection filter and an exhaust filter.

- **Motor Protection Filter:** This filter protects the motor from dust. It should be replaced approximately every 4-5 dustbags or when visibly soiled. It is located behind the dustbag.
- Exhaust Filter: The Miele Complete C3 Turbo uses a multi-stage filtration system. The exhaust filter (e.g., AirClean filter or HEPA filter, depending on model variant) should be replaced according to the indicator or after approximately one year of use. Refer to the filter packaging for specific replacement intervals.

## 6.3. Cleaning the Floorhead and Accessories

Periodically check the floorhead for tangled threads or hairs and remove them using scissors. Clean the accessories with a dry cloth.

#### 6.4. Cleaning the Exterior

Wipe the exterior of the vacuum cleaner with a dry or slightly damp cloth. Do not use abrasive cleaners or solvents.

# 7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, consult the table below:

Problem	Possible Cause	Solution
Vacuum cleaner does not switch on.	No power supply; plug not inserted; power cord damaged.	Check plug and socket; check circuit breaker; inspect power cord for damage.
Poor suction power.	Dustbag full; filters clogged; hose/wand/floorhead blocked.	Replace dustbag; clean/replace filters; check and clear blockages.
Unusual noise during operation.	Foreign object in fan; motor protection filter missing/incorrectly fitted.	Switch off and unplug, check for foreign objects; ensure motor protection filter is correctly installed.
Dustbag change indicator remains red after changing dustbag.	Dustbag not correctly inserted.	Remove and re-insert dustbag, ensuring it clicks into place.

If the problem persists after attempting these solutions, please contact Miele customer service.

## 8. SPECIFICATIONS

Feature	Specification	
Brand	Miele	
Model Number	C3 Turbo Black - SGDA0	
Color	Black	
Power / Wattage	2000 watts	
Noise Level	78 Decibels	
Item Weight	8.5 Kilograms	
Form Factor	Canister	
Special Features	Wheels, One-Touch Cable Rewind	
Included Components	Canister, Hose, Wand, Floorhead, Accessories	
Is Product Cordless	No	

# 9. WARRANTY AND SUPPORT

Your Miele Complete C3 Turbo Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the

warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service inquiries, please contact Miele customer support. Contact information can typically be found on the Miele official website or in your product documentation.

#### © Miele. All rights reserved.

#### **Related Documents - SGDA0**



