

JBM 53726

JBM 53726 1/2 Inch Pneumatic Impact Gun Instruction Manual

Model: 53726 | Brand: JBM

1. INTRODUCTION

Thank you for choosing the JBM 53726 1/2 Inch Pneumatic Impact Gun. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read this manual thoroughly before use and keep it for future reference.

1.1 General Safety Warnings

- Always wear appropriate personal protective equipment (PPE), including safety glasses, hearing protection, and gloves, when operating the impact gun.
- Ensure the workpiece is securely fastened before applying torque.
- Do not operate the tool in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating the tool.
- Disconnect the air supply before changing accessories, performing maintenance, or storing the tool.
- Use only genuine JBM accessories and parts.

2. PRODUCT OVERVIEW

The JBM 53726 is a powerful 1/2 inch pneumatic impact gun designed for tightening and loosening fasteners with high torque. It features a robust metal construction and a fixed square head style for reliable performance.



Figure 1: JBM 53726 1/2 Inch Pneumatic Impact Gun. This image shows the main body of the impact gun, typically featuring a pistol grip, trigger, and the 1/2 inch square drive for attaching sockets.

2.1 Included Components

- 1 x JBM 53726 1/2 Inch Pneumatic Impact Gun

3. SETUP

Proper setup is crucial for safe and effective operation.

3.1 Air Supply Connection

1. Ensure your air compressor is capable of providing the required air pressure and volume (refer to specifications).
2. Attach an air hose (not included) to the air inlet of the impact gun. Use thread sealant tape on the threads for a secure, leak-free connection.
3. Connect the other end of the air hose to your air compressor.
4. Set the air compressor pressure regulator to the recommended operating pressure (typically 90 PSI or 6.2 bar). Do not exceed the maximum operating pressure.

3.2 Attaching Sockets

1. Ensure the air supply is disconnected from the impact gun.
2. Select the correct 1/2 inch drive impact-rated socket for your application. Do not use standard chrome sockets, as they are not designed for impact use and may shatter.

3. Push the socket firmly onto the square drive anvil of the impact gun until it locks into place.
4. To remove, pull back the retaining ring (if present) or simply pull the socket off firmly.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective use of your JBM 53726 impact gun.

4.1 Basic Operation

1. Connect the air supply to the impact gun.
2. Hold the tool firmly with both hands, if possible, to control torque reaction.
3. Position the socket squarely onto the fastener.
4. Select the desired direction (forward for tightening, reverse for loosening) using the directional switch, usually located near the trigger.
5. Press the trigger to activate the tool. The impact mechanism will engage, applying rapid, high-torque rotational force to the fastener.
6. Release the trigger to stop the tool.

4.2 Torque Control

This impact gun delivers a high amount of torque. For applications requiring precise torque, always use a calibrated torque wrench for final tightening. The impact gun is primarily for initial tightening and loosening.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your impact gun.

5.1 Lubrication

- Before each use, add a few drops of pneumatic tool oil into the air inlet. This lubricates the internal components and prevents corrosion.
- If the tool is used frequently, lubricate it several times during the workday.

5.2 Cleaning and Storage

- Keep the tool clean and free from dirt and debris. Wipe down the exterior with a clean cloth.
- Store the impact gun in a dry, clean environment, away from excessive moisture and extreme temperatures.
- Disconnect the air supply and drain any moisture from the air hose and compressor tank before storage.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tool does not operate or has low power	Low air pressure or insufficient air volume Clogged air inlet filter Lack of lubrication Worn internal parts	Check air compressor pressure and flow rate. Ensure hose is not kinked. Clean or replace air inlet filter. Add pneumatic tool oil. Contact qualified service personnel.
Air leaks from tool	Loose fittings Damaged O-rings or seals	Tighten all air fittings. Contact qualified service personnel for seal replacement.
Excessive vibration	Damaged internal components Loose socket	Cease operation and contact service. Ensure socket is securely attached.

7. SPECIFICATIONS

Brand	JBM
Model Number	53726
Part Number	8435034537260
Drive Size	1/2 Inch
Max Torque	1650 Nm (Newton-meters)
Power Source Type	Pneumatic (Air Powered)
Material	Metal
Color	Black/White
Item Weight	2.32 Kilograms
Batteries Required	No
Measurement System	Metric

8. WARRANTY AND SUPPORT

JBM products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your product or contact JBM customer support directly. Keep your purchase receipt as proof of purchase.

For technical assistance, spare parts, or service inquiries, please contact your authorized JBM dealer or visit the official JBM website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question