

## Daewoo DFP3630

# Daewoo DFP3630 450W Food Processor User Manual

Model: DFP3630 | Brand: Daewoo

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Daewoo DFP3630 Food Processor. Retain this manual for future reference.

- **Safety Lock Mechanism:** The food processor will only operate when the base, bowl, and lid are correctly assembled and securely locked. Ensure all three components are firmly engaged before attempting to power on the appliance.
- **Blade Handling:** Exercise extreme caution when handling sharp blades and discs. Always hold blades by their plastic hub. The stainless-steel S-shaped blade is typically secured to the back of the carton for safety during transport; locate and remove it carefully.
- **Stability:** The sturdy base features four holders to prevent movement during operation. For added safety, it is recommended to hold the bowl with your hands while the appliance is in use.
- **Power Supply:** Ensure the appliance is disconnected from the power supply before assembling, disassembling, or cleaning.
- **Children and Supervision:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## 2. PRODUCT OVERVIEW AND COMPONENTS

The Daewoo DFP3630 Food Processor is a versatile kitchen appliance designed for various food preparation tasks. It features a 450W motor and a 2.1L capacity bowl (1.2L working capacity).



Figure 2.1: Main unit of the Daewoo DFP3630 Food Processor.

### Included Attachments and Functions:

- **Stainless Steel Chopper Blade:** For meat and hard ingredients.
- **Plastic S-Blade:** For making pasta dough.
- **Stainless Steel Slicing Disc:** For uniform slices of vegetables and fruits.
- **Stainless Steel Shredder Disc:** For grating cheese, carrots, etc.

- **Julienne Disc:** For thin strips of vegetables.
- **Potato Cutter Disc:** For cutting potatoes into specific shapes.
- **Whisker/Emulsifier:** For whipping and emulsifying ingredients.
- **Citrus Juicer Attachment:** For extracting fresh juice from citrus fruits.



Figure 2.2: The Daewoo DFP3630 Food Processor displayed with its various attachments.



Figure 2.3: Detailed view of the interchangeable blades and attachments.

### 3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage. Ensure the S-shaped blade is located and removed from its protective packaging.
2. **Initial Cleaning:** Before first use, wash all detachable parts (bowl, lid, blades, discs, attachments) in warm soapy water, rinse thoroughly, and dry. The main motor unit should only be wiped with a damp cloth.

- 3. Assemble the Bowl:** Place the processing bowl onto the motor unit base. Rotate it clockwise until it locks securely into position.
- 4. Insert Attachment:** Select the desired blade or disc for your task. Carefully place it onto the central spindle inside the bowl.
- 5. Attach the Lid:** Place the lid onto the processing bowl, ensuring the feed chute aligns correctly. Rotate the lid clockwise until it locks securely. The safety interlock will prevent operation if not properly secured.
- 6. Power Connection:** Plug the appliance into a suitable power outlet (220 Volts).

## 4. OPERATING INSTRUCTIONS

The Daewoo DFP3630 features a control dial with 'P' (Pulse), '0' (Off), '1' (Low Speed), and '2' (High Speed) settings.

### Speed Control:

- '1' (Low Speed):** Suitable for processing soft foods such as dough, vegetables, and light mixing.
- '2' (High Speed):** Ideal for harder ingredients, chopping meat, and more intensive processing.
- 'P' (Pulse Button):** Provides short bursts of maximum power. Useful for coarse chopping, controlling texture, or when a quick burst of power is needed. Release the button to stop.

### General Operation:

- Ensure the appliance is correctly assembled and locked.
- Add ingredients to the processing bowl. For solid ingredients, use the feed chute and pusher. Do not overfill the bowl beyond the maximum capacity markings.
- Select the desired speed ('1' or '2') or use the 'P' (Pulse) function.
- Process ingredients until the desired consistency is achieved.
- Once processing is complete, turn the dial to '0' (Off) and unplug the appliance.
- Carefully disassemble the lid, then the bowl, and remove the blade/disc before emptying the contents.

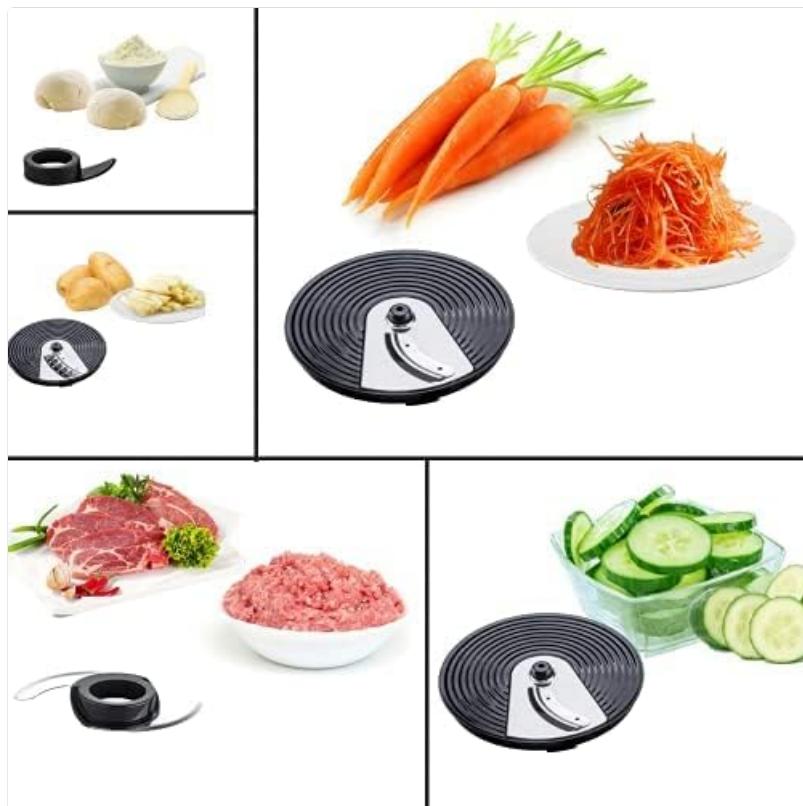


Figure 4.1: Examples of food preparation tasks, including dough making, carrot shredding, meat chopping, and cucumber slicing.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your food processor.

- 1. Disconnect Power:** Always unplug the appliance from the power outlet before cleaning.
- 2. Disassembly:** Carefully disassemble all removable parts: lid, processing bowl, blades, and discs.
- 3. Washing:** All detachable attachments are dishwasher safe and BPA-free. Alternatively, wash them by hand in warm, soapy water. Use a brush for hard-to-reach areas and exercise extreme caution when cleaning blades.
- 4. Motor Unit:** Wipe the motor unit base with a damp cloth. Never immerse the motor unit in water or any other liquid.
- 5. Drying and Storage:** Ensure all parts are thoroughly dry before reassembling or storing. Store the appliance and its attachments in a safe, dry place.

## 6. TROUBLESHOOTING

If you encounter issues with your Daewoo DFP3630 Food Processor, refer to the following common troubleshooting steps:

- Appliance Does Not Turn On:**
  - Ensure the power cord is securely plugged into a functional electrical outlet.
  - Verify that the processing bowl, lid, and any attachments are correctly assembled and securely locked into place. The safety interlock system prevents operation if components are not properly aligned.
  - Check the control dial is set to '1' or '2', or that the 'P' (Pulse) button is being pressed.

- **Motor Stops During Operation:**

- The appliance may have overheated due to prolonged use or processing very hard ingredients. Turn off the appliance, unplug it, and allow it to cool down for at least 30 minutes before resuming use.
- Check if the bowl is overloaded. Reduce the quantity of ingredients and try again.

- **Ingredients Not Processing Evenly:**

- Ensure the correct blade or disc is being used for the type of ingredient.
- Process ingredients in smaller batches.
- Use the 'P' (Pulse) function for better control over consistency.

If the problem persists after following these steps, please contact customer support or a qualified service technician.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Daewoo
Model Number	DFP3630
Color	Black
Product Dimensions	25 x 23 x 37 cm
Item Weight	3 Kilograms
Capacity	2.1 Liters (1.2L working capacity)
Power / Wattage	450 Watts
Voltage	220 Volts
Material	Plastic, Stainless Steel
Number of Speeds	3 (Low, High, Pulse)
Special Features	Safety Lock
Auto Shutoff	No
Product Care Instructions	Dishwasher Safe (detachable parts)

## 8. WARRANTY AND SUPPORT

The Daewoo DFP3630 Food Processor comes with a **2-year warranty** from the date of purchase.

This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair.

For warranty claims, technical support, or service inquiries, please contact your retailer or the authorized Daewoo service center in your region. Please retain your proof of purchase for warranty validation.

© 2023 Daewoo. All rights reserved.