

## FLEXISPOT EN2

# FLEXISPOT EN2 Electric Height Adjustable Standing Desk User Manual

Model: EN2

## 1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FLEXISPOT EN2 Electric Height Adjustable Standing Desk. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.

The FLEXISPOT EN2 desk features a spacious one-piece desktop, an electric height adjustment system with memory presets, and a removable clamp power strip for convenient device charging and cable management. It is designed to support a dynamic work environment, allowing seamless transitions between sitting and standing positions.



Image 1.1: FLEXISPOT EN2 Standing Desk with Maple Top and Black Frame, showcasing a typical setup with monitors, a laptop, and a clamp power strip.

## 2. SAFETY INFORMATION

**WARNING: Failure to follow these safety instructions may result in injury or damage to the product.**

- Always follow the assembly instructions carefully.
- An electric drill (not included) may be required for assembly.
- Ensure the desk is properly anchored to prevent tipping.
- Do not exceed the maximum weight recommendation of 176 pounds (80 kg).
- Keep the work surface clear of items that could fall and cause injury during height adjustments.
- Always unplug the desk before performing any maintenance or making adjustments to the frame or electrical components.
- Keep children and pets away from the desk during operation.

## 3. PACKAGE CONTENTS

Your FLEXISPOT EN2 Standing Desk will arrive in two separate packages, which may be shipped separately.

Please ensure you have received both packages and all components before beginning assembly.

## BOXES MAY SHIP & ARRIVE SEPARATELY

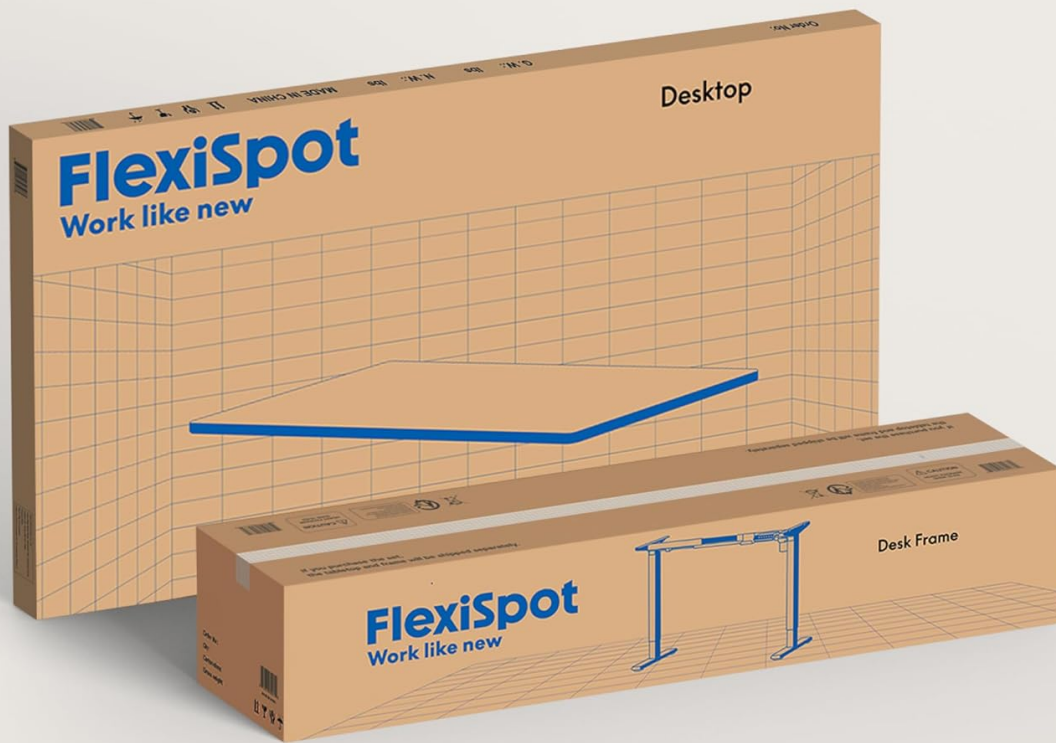


Image 3.1: Illustration showing the desk components arriving in two separate packages: one for the desktop and one for the desk frame.

### Included Components:

- One-piece desktop (48" x 30" Maple Top)
- Electric height-adjustable frame (Black)
- 6-button digital controller with 4 memory presets
- Removable clamp power strip (3 AC outlets, 2 USB charging ports)
- Cable management device
- Assembly hardware and tools (excluding electric drill)

## 4. SETUP AND ASSEMBLY

Assembly typically requires two people and an electric drill (not included). Follow the detailed instructions provided in the separate assembly guide included with your product. The process involves attaching the legs

to the desktop and connecting the control panel and motor.

### Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Ensure all screws are tightened securely, but do not overtighten.
- Properly route all cables using the provided cable management solutions to avoid interference with desk movement.

Video 4.1: Official FLEXISPOT Standing Desk Frame Installation Guide. This video demonstrates the step-by-step process of assembling the desk frame and attaching it to the desktop.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Digital Control Panel

The desk is operated using a 6-button digital controller, typically mounted on the underside of the desktop. It features up/down arrows, an LED display for height, and four programmable memory presets.



Image 5.1: Digital control panel with LED display showing current height, up/down arrows, and four numbered memory preset buttons.

### 5.2 Height Adjustment

- Press and hold the **Up Arrow (^)** button to raise the desk.
- Press and hold the **Down Arrow (v)** button to lower the desk.
- The desk adjusts smoothly from 28.1 inches (71.4 cm) to 45.7 inches (116.1 cm).
- The motor operates quietly at less than 50 dB.

### 5.3 Setting Memory Presets

The controller allows you to save up to four preferred height settings for quick adjustments.

1. Adjust the desk to your desired height using the up/down arrows.
2. Press the **Memory (M)** button. The LED display will flash.
3. Within 3 seconds, press one of the numbered preset buttons **1, 2, 3, or 4** to save the current height to that preset.
4. To recall a saved height, simply press the corresponding numbered preset button. The desk will automatically move to the saved position.

Video 5.2: FlexiSpot Brand Store video demonstrating the desk's height adjustment and memory preset functions.

## 6. FEATURES

---

## 6.1 One-Piece Desktop

The desk features a spacious, single-piece desktop made of FSC-Certified wood. This design provides a smooth, seamless work surface, enhancing stability and aesthetics compared to multi-piece desktops.



Image 6.1: Visual comparison highlighting the smooth surface of a single-piece desktop against the visible seams of a two-piece desktop.

## 6.2 Removable Clamp Power Strip

A desktop-mounted power strip is included, featuring 3 AC outlets (125V/12A) and 2 USB charging ports (5V/2A). This allows for convenient charging of electronic devices directly from your desk. The power strip can be clipped to the back or side of your desk.



Image 6.2: Close-up of the removable clamp power strip, detailing its 3 AC outlets and 2 USB-A ports, and how it attaches to the desk edge.

## 6.3 Cable Management

The desk includes a cable management device to help organize and tidy up your workspace, preventing cables from dangling and interfering with desk movement.



Image 6.3: Illustration demonstrating effective cable management with an under-desk tray, showing a tidy setup compared to unmanaged cables.

## 7. MAINTENANCE

- Regularly inspect all screws and connections to ensure they are tight.
- Clean the desktop surface with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- Keep the motor and electrical components free from dust and moisture.
- Do not place hot items directly on the desktop without protective coasters.

## 8. TROUBLESHOOTING

### 8.1 Desk Not Moving or Displaying Error Code (e.g., "r5t")

If your desk is not responding or the LED display shows an error code like "r5t", a system reset may be required.

1. Unplug the desk from the power outlet.
2. Wait for at least 10-15 seconds.
3. Plug the desk back into the power outlet.
4. Press and hold the "Down Arrow (v)" button until the desk reaches its lowest position and then slightly rises. This indicates a successful reset.
5. If the issue persists, contact customer support.

### 8.2 Desk Wobbling at Higher Heights

While the desk is designed for stability, minor wobbling can occur at maximum heights. Ensure the adjustable feet on the leg bases are properly leveled to compensate for uneven flooring.

## 9. SPECIFICATIONS

| Feature                 | Specification   |
|-------------------------|---|
| Brand                   | FLEXISPOT   |
| Model                   | EN2   |
| Desktop Material        | FSC-Certified Maple Wood                              |
| Desktop Dimensions      | 48" (W) x 30" (D)                                     |
| Desktop Thickness       | 1 inch  |
| Frame Material          | Industrial-grade Alloy Steel (Black)                  |
| Height Adjustment Range | 28.1" to 45.7" (71.4 cm to 116.1 cm)                  |
| Motor Noise Level       | < 50 dB   |
| Weight Capacity         | 176 lbs (80 kg)                                       |
| Control Panel           | 6-button digital controller with 4 memory presets     |
| Power Outlet            | 3 AC outlets (125V/12A), 2 USB charging ports (5V/2A) |



Assembly Required

Yes (electric drill recommended)

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information







- **5-Year Warranty:** Covers frames, motors, and other mechanical devices.
- **2-Year Warranty:** Covers controllers, switches, and electronics.

Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

### 10.2 Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact FLEXISPOT customer support through their official website or the retailer where you purchased the product.
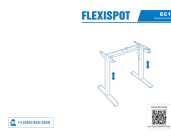
## Related Documents - EN2

|   |   |
|---|---|
|   | <a href="#">FlexiSpot EH1-EU Electric Standing Desk Frame User Manual</a><br>Comprehensive user manual for the FlexiSpot EH1-EU electric standing desk frame, detailing specifications, assembly instructions, wiring, operation, and troubleshooting for optimal use.  |
|  | <a href="#">FlexiSpot EG8B/EG8W Installation Guide and Limited Warranty</a><br>This document provides a comprehensive installation guide and limited warranty information for the FlexiSpot EG8B/EG8W adjustable standing desk. It details specifications, assembly steps, keypad operation, troubleshooting, safety precautions, and warranty terms.     |
|  | <a href="#">FlexiSpot EC1 Electric Height Adjustable Standing Desk Assembly Guide</a><br>This assembly guide provides step-by-step instructions for setting up the FlexiSpot EC1 electric height-adjustable standing desk. It includes specifications, parts list, assembly procedures, keypad operation, troubleshooting tips, and warranty information. |
|  | <a href="#">FlexiSpot E7QB Standing Desk User Manual</a><br>Comprehensive user manual for the FlexiSpot E7QB standing desk, covering components, installation, usage, troubleshooting, and warranty information.  |
|  | <a href="#">FlexiSpot Q8B/Q8W Height Adjustable Standing Desk Installation Guide and Warranty</a><br>Comprehensive installation guide and warranty information for the FlexiSpot Q8B/Q8W height adjustable standing desk, including setup instructions, usage tips, troubleshooting, and warranty details.  |
|  | <a href="#">FlexiSpot E2LB-V2/E2LW-V2 Electric Height-Adjustable Desk User Manual</a><br>User manual for the FlexiSpot E2LB-V2 and E2LW-V2 electric height-adjustable desks, covering assembly, operation, technical specifications, and troubleshooting.   |