

Pantone PT-WH005N1

Pantone Celly Wireless Headphones User Manual

Model: PT-WH005N1

INTRODUCTION

Thank you for choosing the Pantone Celly Wireless Headphones. These headphones feature Bluetooth 5.0 technology and Active Noise Cancellation (ANC) to provide an immersive audio experience by reducing external background noise. Designed for comfort with padded earcups and an adjustable headband, they offer up to 16 hours of music playback. This manual provides essential information for setup, operation, and maintenance of your headphones.

SAFETY INFORMATION

- Do not expose the headphones to extreme temperatures, humidity, or liquids.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not attempt to disassemble or modify the headphones. This will void the warranty.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the package for the following items:

- Pantone Celly Wireless Headphones
- USB Charging Cable
- Audio Cable (3.5mm Jack)
- User Manual



Image: The Pantone Celly Wireless Headphones shown in their retail packaging, highlighting the "Stereo Headphones" and "Bluetooth" features, along with "ANC Active Noise Cancelling" branding.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your headphones.



Image: A front-angle view of the Pantone Celly Wireless Headphones in navy blue, showcasing the adjustable headband and padded earcups with the Pantone logo.

Controls and Ports

- **Power Button:** Used to turn the headphones on/off and for Bluetooth pairing.
- **Volume Up/Next Track Button:** Press briefly to increase volume, press and hold for next track.
- **Volume Down/Previous Track Button:** Press briefly to decrease volume, press and hold for previous track.
- **ANC Button:** Activates or deactivates Active Noise Cancellation.
- **Microphone:** Integrated for hands-free calls.

- **USB Charging Port:** For charging the internal battery.
- **3.5mm Audio Jack:** For wired connection to audio devices.



Image: A close-up view of the USB charging port located on the side of the Pantone Celly Wireless Headphones, next to the Pantone logo.



Image: A detailed close-up of the control buttons on the Pantone Celly Wireless Headphones, showing the volume/track control buttons and a small indicator light.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones. Connect the supplied USB charging cable to the USB charging port on the headphones and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status and turn off or change color when fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power button for about 5-7 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "Pantone Celly" (or similar name) from the list of found devices.
5. Once paired, the LED indicator will stop flashing and remain solid blue, and you may hear a confirmation tone.
6. If prompted for a password, enter "0000".

The headphones will automatically attempt to reconnect to the last paired device when powered on.

OPERATING

Music Playback

- **Play/Pause:** Press the Power button once.
- **Volume Up:** Press the Volume Up (+) button briefly.
- **Volume Down:** Press the Volume Down (-) button briefly.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.

Active Noise Cancellation (ANC)

The ANC feature reduces ambient noise, providing a more focused listening experience. To activate or deactivate ANC, press the dedicated ANC button. An indicator light may illuminate when ANC is active.

Phone Calls

- **Answer/End Call:** Press the Power button once.
- **Reject Call:** Press and hold the Power button for approximately 2 seconds.
- **Redial Last Number:** Double-press the Power button.

Wired Connection (3.5mm Audio Jack)

You can use the headphones with a wired connection even if the battery is depleted. Simply connect one end of the 3.5mm audio cable to the headphone's audio jack and the other end to your audio device's headphone output. Note that Bluetooth and ANC functions will not be available in wired mode unless the headphones are powered on and have sufficient battery for ANC.

MAINTENANCE

Cleaning

Wipe the headphones with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents. Avoid getting moisture into any openings.

Storage

When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are charged. Connect to a power source and try again.
Cannot pair with device.	Ensure headphones are in pairing mode (flashing red/blue LED). Turn off and on Bluetooth on your device. Move headphones closer to the device.
No sound or low volume.	Check volume levels on both headphones and your connected device. Ensure headphones are properly paired. Try playing different audio.
ANC not working effectively.	Ensure ANC is activated. ANC is most effective against low-frequency, constant noise. It may not completely eliminate all sounds.
Poor call quality.	Ensure the microphone is not obstructed. Move to an area with less background noise. Check network signal on your phone.

SPECIFICATIONS

- Model:** PT-WH005N1
- Brand:** Pantone
- Connectivity:** Bluetooth 5.0, 3.5mm Audio Jack
- Battery Life:** Up to 16 hours (music playback)
- Features:** Active Noise Cancellation (ANC), Integrated Microphone, Adjustable Headband, Padded Earcups
- Weight:** 250 grams
- Dimensions:** 50 x 50 x 28 cm (Product dimensions, likely packaging or unfolded)
- Wireless Range:** Up to 10 meters
- Material:** Plastic
- Color:** Navy Blue

WARRANTY AND SUPPORT

Pantone Celly products are designed and manufactured to the highest quality standards. For detailed warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Pantone Celly website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact customer support via the contact information provided on the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question