

[Manuals.plus](#) /

› [Owigift](#) /

› Starter Motor Instruction Manual for Husqvarna YTH22V46 Lawn Mower Tractor

Owigift YTH22V46

Instruction Manual

Owigift Starter Motor for Husqvarna Lawn Mower Tractors

1. PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, and maintenance of your new Owigift Starter Motor. This starter motor is designed as a replacement part for various Husqvarna lawn mower tractor models, ensuring reliable engine starting.



Figure 1: The Owigift Starter Motor. This image displays the cylindrical black body of the starter motor with gold-colored metal end caps and a visible drive gear at one end, indicating its primary function in engine ignition.

1.1 Compatibility

This starter motor is compatible with Husqvarna YTH22V46 lawn mower tractor models and other specific models. Please verify your model number against the list below to ensure compatibility:

- Husqvarna YTH22V46
- Replaces Models: 960430101-00, 960430101-01, 960430161-00, 960430162-00, 960430181-00, 960430181-01, 960430185-00, 960430213-00, 960430257-00, 960450041-00, 960450041-01, 960450042-00, 960450045-00, 960450048-00, 960450062-00

Note: If you are uncertain about compatibility, please contact the manufacturer for assistance.

2. SAFETY INFORMATION

Always observe the following safety precautions when handling or installing the starter motor:

- Disconnect the battery before beginning any installation or maintenance work to prevent electrical shock or accidental starting.
- Wear appropriate personal protective equipment (PPE), including safety glasses and gloves.
- Ensure the engine is cool before working on it.

- Refer to your lawn mower tractor's original service manual for specific safety guidelines and procedures.
- Keep children and bystanders away from the work area.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Owigift Starter Motor

If any components are missing or damaged, please contact customer support immediately.

4. INSTALLATION

The following steps provide a general guide for replacing a starter motor. Specific procedures may vary depending on your Husqvarna lawn mower tractor model. Always consult your vehicle's service manual for detailed instructions.

1. **Preparation:** Park the lawn mower tractor on a flat, stable surface. Engage the parking brake. Turn off the engine and remove the ignition key. Disconnect the negative (-) battery cable, then the positive (+) battery cable.
2. **Locate the Old Starter Motor:** The starter motor is typically located near the engine's flywheel.
3. **Disconnect Wiring:** Carefully disconnect any electrical wires or cables attached to the old starter motor. Note their positions for reinstallation.
4. **Remove Mounting Bolts:** Loosen and remove the bolts securing the old starter motor to the engine block. Support the motor as you remove the last bolt to prevent it from falling.
5. **Remove Old Starter Motor:** Carefully pull the old starter motor away from the engine.
6. **Install New Starter Motor:** Position the new Owigift starter motor in place, ensuring it aligns correctly with the mounting holes. Insert and hand-tighten the mounting bolts.
7. **Tighten Mounting Bolts:** Tighten the mounting bolts securely, following torque specifications if available in your mower's service manual.
8. **Reconnect Wiring:** Reconnect all electrical wires and cables to the new starter motor. Ensure connections are clean and tight.
9. **Reconnect Battery:** Reconnect the positive (+) battery cable, then the negative (-) battery cable.
10. **Test Operation:** Attempt to start the engine to confirm the new starter motor is functioning correctly.

***Important:** If you are not comfortable performing this installation, it is recommended to seek assistance from a qualified service technician.*

5. OPERATING INSTRUCTIONS

The starter motor is an integral component of your lawn mower tractor's starting system. Its operation is automatic when you turn the ignition key or press the start button.

- Ensure the battery is fully charged and in good condition.
- Follow your lawn mower tractor's specific starting procedure (e.g., engaging the brake, setting the choke).
- Turn the ignition key to the "START" position or press the start button. The starter motor will engage the engine's flywheel, turning the crankshaft to initiate combustion.
- Release the key/button once the engine starts. Avoid prolonged cranking to prevent overheating the starter motor.

6. MAINTENANCE

Proper maintenance can extend the life of your starter motor and ensure reliable starting. While the starter motor itself requires minimal direct maintenance, regular checks of related components are crucial:

- **Battery Condition:** Regularly check your lawn mower's battery for proper charge, clean terminals, and secure connections. A weak battery can strain the starter motor.
- **Wiring Connections:** Periodically inspect all electrical connections to the starter motor for corrosion or looseness. Clean and tighten as necessary.
- **Engine Condition:** Ensure your engine is well-maintained and easy to start. Issues like fouled spark plugs or improper fuel delivery can make the starter motor work harder than necessary.
- **Avoid Over-cranking:** Do not continuously crank the engine for extended periods if it fails to start. Allow the starter motor to cool down between attempts (at least 30 seconds).

7. TROUBLESHOOTING

If you experience issues with your starter motor, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Starter motor clicks but does not crank.	Low battery charge, loose battery cables, faulty solenoid.	Charge or replace battery. Clean and tighten battery terminals. Inspect solenoid and wiring.
Starter motor cranks slowly.	Weak battery, corroded battery cables, high resistance in circuit.	Test battery voltage. Clean battery terminals and cable connections. Check for damaged cables.
Starter motor does not engage flywheel.	Faulty Bendix drive, damaged flywheel teeth.	Inspect starter motor gear and engine flywheel teeth for damage. Replacement may be necessary.
Starter motor makes grinding noise.	Misalignment, damaged starter gear or flywheel teeth.	Recheck installation alignment. Inspect gears for wear or damage.

If troubleshooting steps do not resolve the issue, it may indicate a more complex problem or a faulty component. Consult a qualified technician.

8. SPECIFICATIONS

Feature	Detail
Brand	Owigift
Model Number	YTH22V46 (Replacement Part)
Voltage	22 Volts
Material	Metal
UPC	017015814829

9. WARRANTY AND SUPPORT

This product is typically covered by a return policy allowing for refund or replacement within 30 days of purchase. For specific warranty details, please refer to your purchase documentation or contact the seller directly.

For any questions regarding compatibility, installation, or troubleshooting, please contact Owigift customer support. They aim to resolve issues within 24 hours.

Contact Information: Refer to your purchase receipt or the seller's information on the platform where the product was purchased.

© 2024 Owigift. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question