

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COOKTRON](#) /

› [COOKTRON Double Induction Cooktop Burner Instruction Manual](#)

COOKTRON Double Induction Cooktop Knob

COOKTRON Double Induction Cooktop Burner Instruction Manual

Brand: COOKTRON | Model: Double Induction Cooktop Knob

1. INTRODUCTION

Thank you for choosing the COOKTRON Double Induction Cooktop Burner. This portable electric countertop burner is designed for efficient and safe cooking, offering rapid heating and precise temperature control. With its dual burners, child safety lock, and timer functions, it's an ideal solution for various cooking needs in kitchens, RVs, offices, or during camping.



Image: The COOKTRON Double Induction Cooktop featuring two cooking zones, one with a pot of soup and the other with a frying pan containing salmon, demonstrating its dual functionality.

2. SETUP

2.1 Unpacking and Placement

- Carefully remove the cooktop from its packaging.
- Place the cooktop on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit. The ventilation ducts are designed to dissipate heat and prevent damage to the countertop.
- Ensure the power cord is not pinched or in contact with hot surfaces.

2.2 Power Connection

- Plug the cooktop into a standard 120V, 15A electrical outlet.
- The unit is ready for use when the display shows 'Lo' (low heat/standby mode) or '00' after pressing the power button.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- Press the **On/Off** button to turn the cooktop on. The display will show '00' indicating it's ready.
- Press the **On/Off** button again to turn the cooktop off. The display will show 'Lo' or 'H' if the surface is still hot.

3.2 Power and Temperature Settings

- The cooktop offers 9 power levels, adjustable from 200W to 1800W in 200W increments.
- It also features 10 temperature levels, ranging from 140°F to 464°F.
- Use the rotary knob to precisely control your desired power or temperature setting.



1. Timer Set up Button	4. Power or Temperature More Button
2. Child Lock	5. On/Off Button
3. Display	6. Adjust the Power or Temperature With Rotary knob

Image: A close-up view of the cooktop's control panel, highlighting the timer, child lock, display, power/temperature adjustment knob, and on/off button.

8 COOKING LEVEL SETTINGS

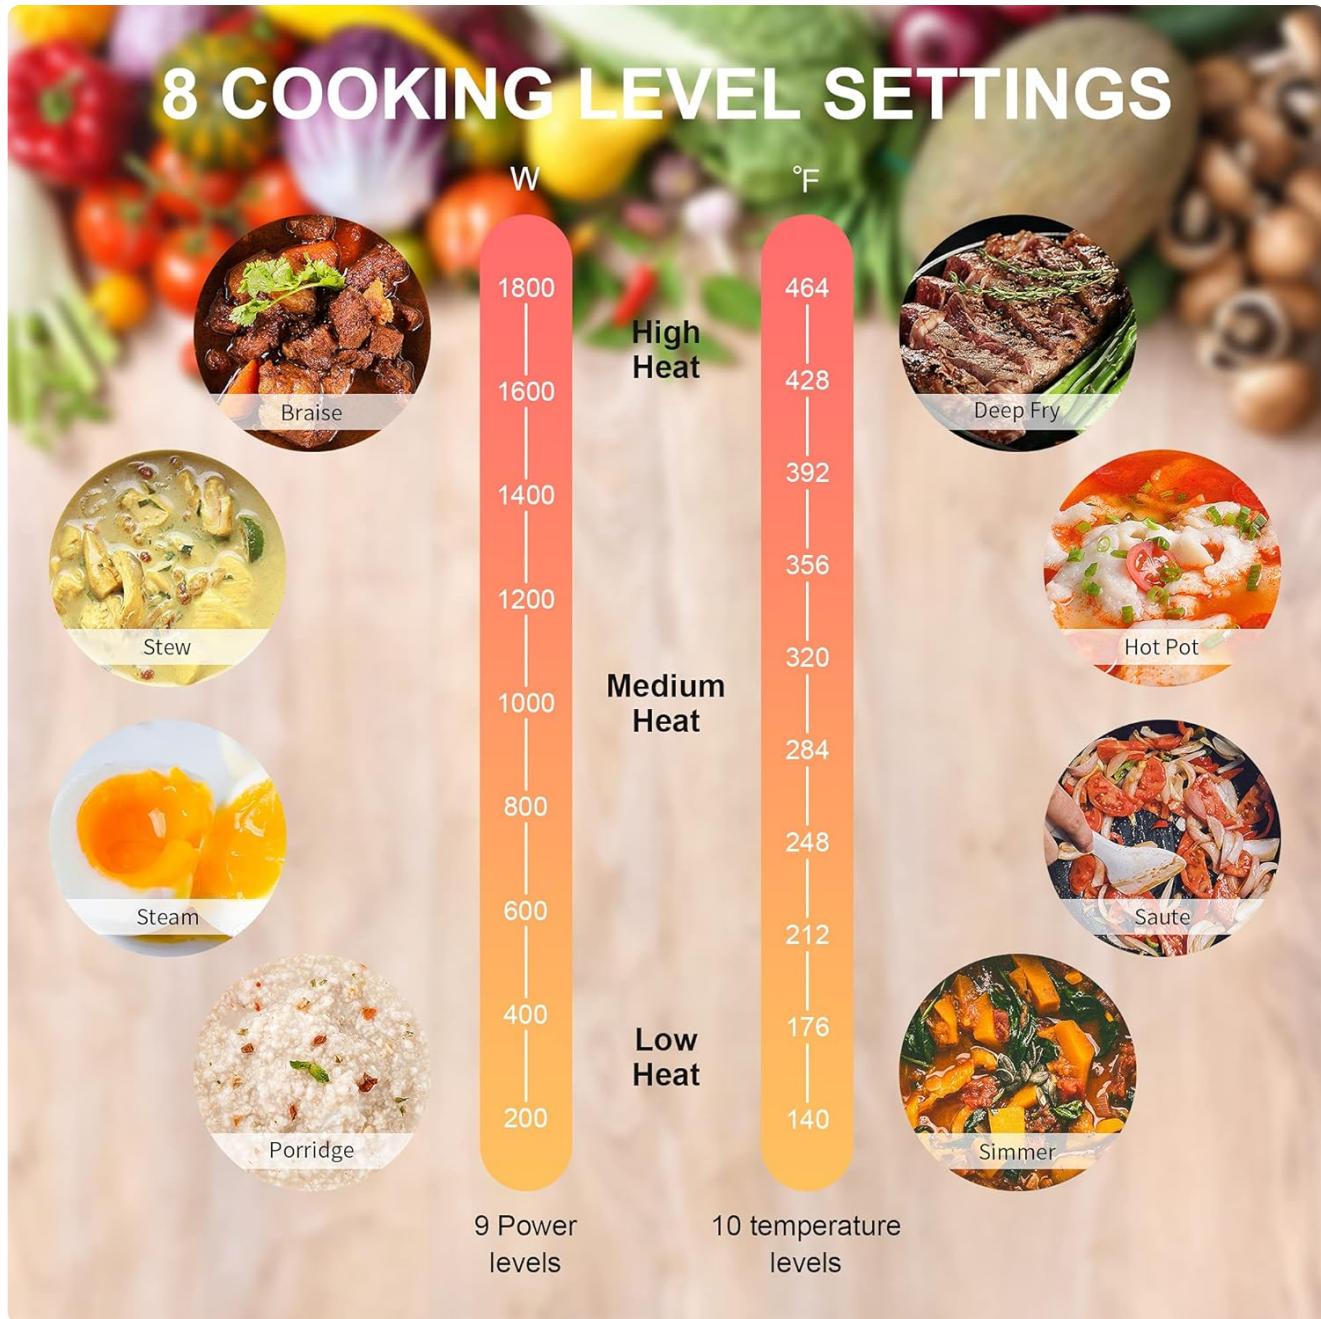


Image: A visual guide illustrating 9 power levels (200W to 1800W) and 10 temperature levels (140°F to 464°F) with corresponding cooking methods like braise, stew, steam, porridge, deep fry, hot pot, saute, and simmer.

3.3 Timer Function

- Press the **Timer** button to set a cooking duration from 1 minute to 4 hours.
- The cooktop will automatically shut off once the set time expires.

3.4 Child Safety Lock

- Activate the child safety lock to prevent accidental operation, ensuring safety when not in use.

3.5 Demonstration Video

Video: A demonstration of the COOKTRON Double Induction Cooktop Burner's features and operation, including power settings, temperature control, and safety functions.

4. COOKWARE COMPATIBILITY

The induction cooktop requires specific types of cookware to function correctly. Compatible cookware must have a magnetic bottom.

4.1 Compatible Cookware

- Stainless Steel (magnetic base)
- Cast Aluminum (magnetic base)
- Cast Iron
- Enameled Iron

Optimal heated area for cookware ranges from 5 inches to 10 inches.

4.2 Incompatible Cookware

- Ceramic
- Glass
- Aluminum (non-magnetic)
- Copper (non-magnetic)



Image: A visual guide indicating which types of cookware are compatible (Cast Iron, Stainless Steel, Enameled) and incompatible (Ceramic, Glass, Aluminum, Copper) with the COOKTRON induction cooktop.

5. SAFETY FEATURES

- **Child Safety Lock:** Ensures safety when the cooktop is not in use.
- **Automatic Shut-off:** The cooktop will return to standby mode after 30 seconds if no function is selected or if an incompatible pan is detected (displaying 'E0').
- **Overheating Reminder:** If the surface temperature exceeds 60°C (140°F), the LED will display 'H' after the machine shuts down to prevent touch burning.
- **Ventilation System:** Designed with ventilation ducts to better dissipate heat and prevent damage to the countertop.

FAST HEAT DISSIPATION

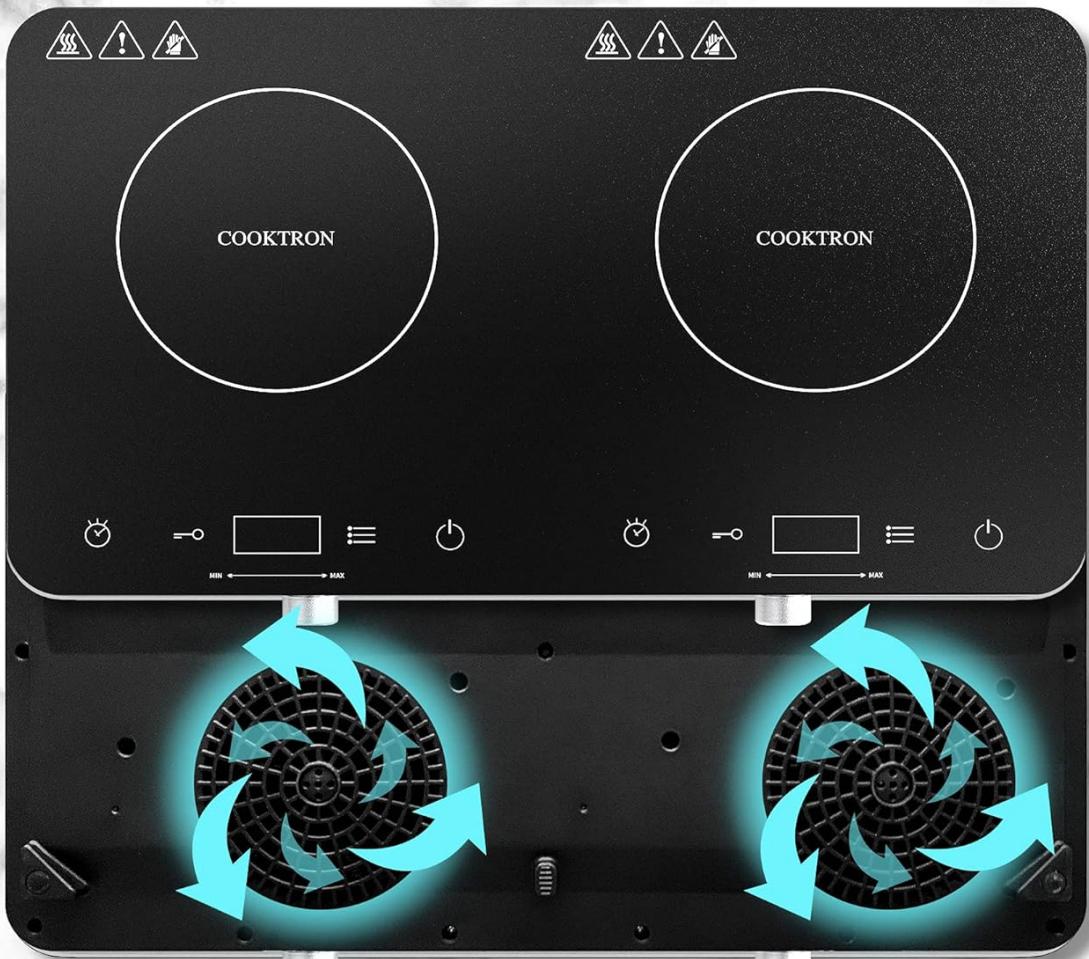


Image: The underside of the cooktop revealing two large cooling fans, illustrating the fast heat dissipation system designed to maintain optimal operating temperature.

6. MAINTENANCE AND CLEANING

- Always ensure the cooktop is unplugged and completely cool before cleaning.
- The high-quality smooth glass surface can be easily cleaned with a damp cloth.
- Avoid using abrasive cleaners, scouring pads, or harsh chemicals that could scratch or damage the surface.
- The surface is scratch-resistant and waterproof for durability.



Image: A hand wiping the smooth glass surface of the cooktop with a yellow cloth, demonstrating how easy it is to clean the appliance.

7. TROUBLESHOOTING

If the cooktop experiences unsuitable operations or displays error codes, refer to the table below for guidance. This information is for protection of the cooker and user guidance.

- **E0 Error:** Indicates no cookware is detected or incompatible cookware is used. Solution: Place a suitable pot on the hob.
- For other error codes (E1, E2, E3, E4, E5, E6) and detailed solutions, please refer to the official user manual.


A comprehensive user guide with a full list of error codes and solutions is available for download:

[Download Official User Guide \(PDF\)](#)

8. SPECIFICATIONS

Feature	Detail
Brand	COOKTRON
Model	Double Induction Cooktop Knob
Color	Black
Material	Cast Iron (Cooktop Surface)
Wattage	1800 watts
Voltage	120 Volts
Product Dimensions	15.2"D x 23.23"W x 2.52"H
Item Weight	11.66 pounds
Controls Type	Knob, Touch
Burner Type	Induction

SPECIFICATIONS

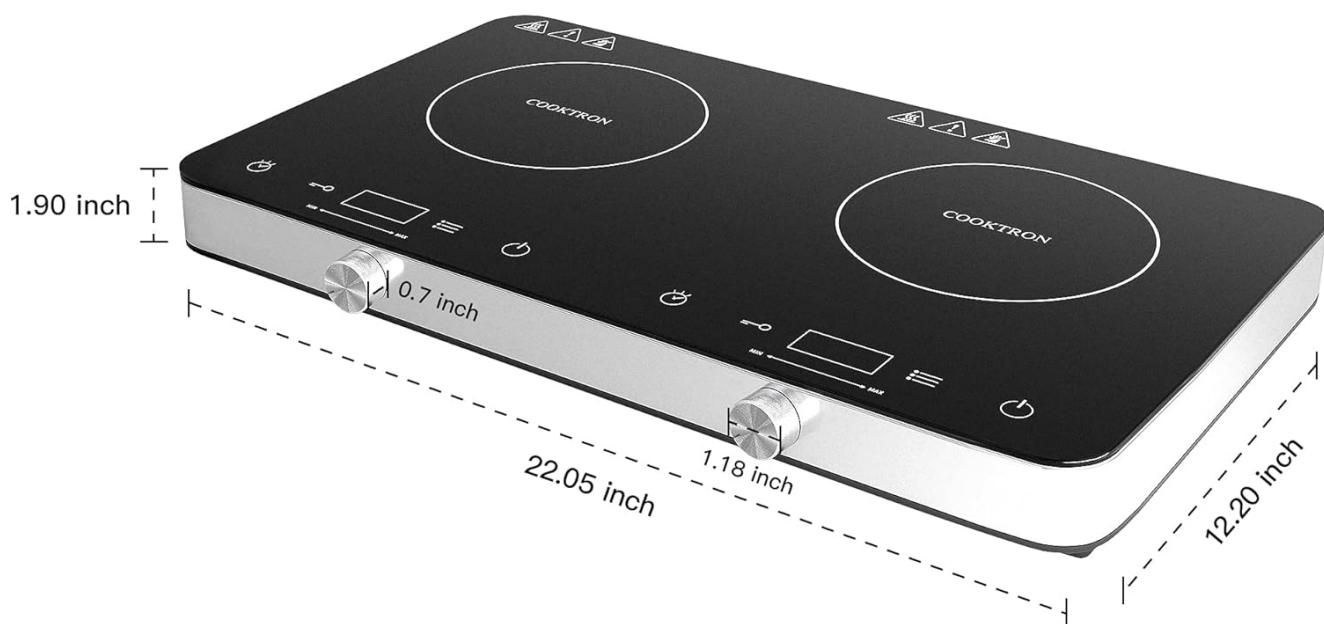

Power :

1800W

Voltage :

AC 120V~60Hz

Max Current :

15A

Temperature :

140°F~464°F

Image: A detailed diagram illustrating the dimensions of the COOKTRON Double Induction Cooktop.

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or contact COOKTRON customer service directly. Protection plans may also be available for extended coverage.

© 2025 COOKTRON. All rights reserved.