

[Manuals.plus](#) /

> [Kassione1](#) /

> Kassione1 AXD7247 Replacement Remote Control Instruction Manual for Pioneer AV Receivers

Kassione1 AXD7247

Kassione1 AXD7247 Replacement Remote Control Instruction Manual

For Pioneer AV Receiver Models

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your Kassione1 AXD7247 replacement remote control. This remote is designed to function as a direct replacement for the original Pioneer AV Receiver remote control, offering compatibility with a range of Pioneer AV Receiver models.

Please read this manual thoroughly before using the remote control to ensure optimal performance and to understand its features and functions.

2. PRODUCT OVERVIEW

The Kassione1 AXD7247 remote control is a pre-programmed unit, meaning it requires no setup or coding. Simply insert batteries, and it is ready for immediate use with compatible Pioneer AV Receivers. It features a durable construction with soft, responsive buttons for comfortable operation.





Image 1: Front view of the Kassione! AXD7247 remote control, displaying various function buttons for AV receiver operation.

2.1 Compatible Pioneer AV Receiver Models:

- VSX-D209
- VSX-D3
- VSX-D309
- VSX-D3S
- VSX-D409
- VSX-D41
- VSX-D411
- VSX-D411S
- VSX-D412
- VSX-D510
- VSX-D510-G
- VSX-D510S
- VSX-D511
- VSX-D609
- XXD3038
- AXD7246
- AXD7248

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2: Battery compartment of the remote control, illustrating the correct insertion of two AA batteries.

Note: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4. OPERATION

Once batteries are installed, the Kassione! AXD7247 remote control is ready to operate your compatible Pioneer AV Receiver. Point the remote control directly at the AV receiver's infrared sensor.

4.1 Basic Functions:

- **Power On/Off:** Use the **RECEIVER** power button to turn the AV receiver on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the audio volume.
- **Input Selection:** Use the source buttons (e.g., DVD/LD, TV/SAT, CD, TUNER) to select the desired input source on your AV receiver.
- **Navigation:** Use the directional arrow buttons (◀▶ ▲ ▼) and **ENTER** button for menu navigation, if supported by your AV receiver.
- **Muting:** Press the **MUTING** button to temporarily silence the audio. Press again to restore sound.

For detailed information on specific functions and advanced settings, please refer to the original instruction manual of your Pioneer AV Receiver model.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote has fresh AA alkaline batteries installed correctly.
 - Check for any obstructions between the remote control and the AV receiver's infrared sensor.
 - Ensure you are pointing the remote directly at the AV receiver.
- **Some functions not working:**
 - Verify that your AV receiver model is listed in the compatible models section (Section 2.1).
 - Some advanced functions may require specific settings on your AV receiver or may not be fully supported by a replacement remote. Refer to your AV receiver's original manual.

If you continue to experience issues, please contact Kassionel customer support for assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	AXD7247
Brand	Kassionel
Compatible Devices	Pioneer AV Receivers (various models)
Power Source	2 x AA Alkaline Batteries (not included)
Material	ABS
Dimensions	6.89 x 1.09 x 0.8 inches
Item Weight	2.22 ounces
Special Feature	No programming needed, works out of the package

7. WARRANTY AND SUPPORT

Kassionel strives to provide reliable products. For any questions, concerns, or assistance with your AXD7247 remote control, please contact Kassionel customer support. Please have your product model number (AXD7247) available when contacting support.

Contact information for Kassionel customer support can typically be found on the product packaging or the retailer's website where the product was purchased.

© 2025 Kassionel. All rights reserved. Pioneer is a registered trademark of its respective owner.