

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Elipson](#) /

› [Elipson Music Center Connect HD Noir - Connected Hi-Fi Amplifier User Manual](#)

## Elipson ELIPMCONHDNR

# Elipson Music Center Connect HD Noir

## USER MANUAL

### Introduction

Thank you for choosing the Elipson Music Center Connect HD. This integrated amplifier is designed to deliver high-fidelity audio performance with versatile connectivity options, including a built-in CD player, Bluetooth, and Wi-Fi. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity.

### Safety Instructions

Please read these safety instructions carefully before operating the unit. Keep this manual for future reference.

- **Power Source:** Connect the unit only to an AC power source specified on the unit's rear panel.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Do not place the unit on a bed, sofa, rug, or similar surface that may block the ventilation slots.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a dry cloth only.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

### Package Contents

Verify that all items are present in the package:

- Elipson Music Center Connect HD Unit
- Power Cable
- Remote Control (with batteries)
- User Manual (this document)
- Wi-Fi Antenna

# Setup

## 1. Unpacking

Carefully remove the unit and all accessories from the packaging. Retain the packaging for future transport or storage.

## 2. Placement

Place the Elipson Music Center Connect HD on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure there is sufficient space around the unit for proper ventilation.

## 3. Connections

Before making any connections, ensure the unit is powered off and unplugged from the wall outlet.



Front view of the Elipson Music Center Connect HD, showcasing its sleek black, circular design. The central display reads "NETWORK Ready to play", indicating its network readiness. Below the display are touch-sensitive control buttons for power, source selection, volume, and playback controls.

- **Speaker Connections:** Connect your passive speakers to the 'Speaker Out' terminals on the rear panel. Ensure correct polarity (+ to + and - to -) for each speaker. The unit supports 2 speaker outputs for stereo sound.
- **Subwoofer Output:** If you have an active subwoofer, connect it to the 'Sub Out' RCA connector.
- **Pre-Out:** For connecting an external power amplifier, use the 'Pre-Out' RCA connectors.
- **Analog Inputs:** Connect external audio sources (e.g., turntable with phono pre-amp, tape deck) to the available analog RCA inputs.
- **Digital Inputs:** Utilize the optical or coaxial digital inputs for digital audio sources.
- **Network Connection:** For Wi-Fi connectivity, screw the provided Wi-Fi antenna onto the designated connector. For a wired connection, connect an Ethernet cable to the LAN port.
- **Power Connection:** Once all audio connections are made, connect the power cable to the unit and then to a wall outlet.

# Operating

## 1. Powering On/Off

Press the power button on the front panel or the remote control to turn the unit on or off. The display will illuminate when the unit is active.

## 2. Basic Controls

- **Volume:** Use the '+' and '-' buttons on the front panel or remote to adjust the volume level.
- **Source Selection:** Press the source button (often labeled with an icon or 'Source') to cycle through available inputs (CD, Bluetooth, Network, Analog, Digital).
- **Playback Controls:** For CD and network playback, use the Play/Pause, Stop, Skip Forward, and Skip Backward buttons.

## 3. CD Playback

Insert a CD into the slot on the front panel. The unit will automatically detect the CD and begin playback. Use the playback controls to manage your music.

## 4. Bluetooth Connectivity

To pair a Bluetooth device:

1. Select Bluetooth as the source on the Music Center Connect HD.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "Elipson Music Center Connect HD" from the list to pair.
4. Once paired, you can stream audio from your device to the amplifier.

## 5. Wi-Fi and Network Features

The unit supports Wi-Fi connectivity for network streaming services like Spotify and features like RDS (Radio Data System).

- **Network Setup:** Follow the on-screen prompts or refer to the dedicated network setup section in the full digital manual (if available) to connect the unit to your home Wi-Fi network.
- **Spotify Connect:** Once connected to Wi-Fi, you can use Spotify Connect from your Spotify app to stream music directly to the amplifier.
- **RDS:** When tuned to compatible FM radio stations (if applicable), RDS will display station information on the unit's screen.

## Maintenance

### 1. Cleaning

To clean the unit, unplug it from the power outlet. Use a soft, dry, lint-free cloth to wipe the surfaces. Do not use liquid cleaners, aerosols, or abrasive chemicals, as they may damage the finish.

### 2. Storage

If you plan to store the unit for an extended period, unplug it from the power source and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

## Troubleshooting

If you encounter issues with your Elipson Music Center Connect HD, refer to the following common problems and solutions:

- **No Power:**
  - Ensure the power cable is securely connected to the unit and the wall outlet.
  - Check if the wall outlet is functioning by plugging in another device.

- **No Sound:**

- Verify that the correct input source is selected.
- Check speaker connections for correct polarity and secure fit.
- Ensure the volume is not set to minimum or muted.
- Test with different audio sources.

- **Bluetooth Pairing Issues:**

- Ensure the unit is in Bluetooth pairing mode.
- Move your Bluetooth device closer to the amplifier.
- Try unpairing and re-pairing the device.

- **Network Connection Problems:**

- Check your Wi-Fi router and internet connection.
- Ensure the Wi-Fi antenna is properly attached.
- Restart the amplifier and your router.

## Specifications

Feature	Specification
Brand	Elipson
Manufacturer	Elipson
Product Weight	1.5 Kilograms
Manufacturer Reference	ELIPMCONHDNR
Product Number	ELIPMCONHDNR
Other Features	RDS, Spotify
Audio Output Mode	Stereo
Audio Output Type	Speakers
Output Power	120 Watts
Connector Type	Bluetooth, Wifi
Guaranteed Software Updates Until	unknown
ASIN	B097HMHWTZ
Product First Available Date	22 April 2021
Color	Black
Connectivity Technology	Bluetooth, Wifi
Special Function	RDS, Spotify

## Warranty and Support

Elipson products are manufactured to the highest quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Elipson website. For technical support, troubleshooting beyond this manual, or service inquiries, please contact Elipson customer support or your authorized dealer.

*Please note: Warranty terms may vary by region. Keep your proof of purchase for warranty claims.*

© 2023 Elipson. All rights reserved.

### Related Documents - ELIPMCONHDNR

	<p><a href="#">Elipson Connect 2130Xi Amplifier User Manual</a></p> <p>Comprehensive user manual for the Elipson Connect 2130Xi amplifier, covering installation, connections, operation, features, and specifications. Learn how to connect speakers, manage sources, and utilize the WiLM HOME app.</p>
	<p><a href="#">Elipson Connect 2130Xi Amplifier User Manual</a></p> <p>Comprehensive user manual for the Elipson Connect 2130Xi amplifier, covering installation, connections, operation, features, and troubleshooting. Learn how to connect speakers, manage sources, and utilize the Wiim Home app for an enhanced audio experience.</p>
	<p><a href="#">Elipson Chroma 200 RIAA Turntable: Elegant Design, Advanced Technology</a></p> <p>Explore the Elipson Chroma 200 RIAA, a belt-driven manual turntable combining elegant design with advanced audio technologies. Features include integrated Phono-RIAA circuitry, OTT tonearm, and precise motor control for superior vinyl playback.</p>



### [Elipson Premium SUB 15 : Caisson de Basse Actif - Caractéristiques et Présentation](#)

Découvrez le caisson de basse actif Elipson Premium SUB 15. Amplification 650W Class D, haut-parleur 380mm fibre de verre, basses profondes pour home cinéma et hi-fi. Spécifications techniques, dimensions et finitions.



### [Elipson Premium SUB 10 : Caisson de Basse Actif Haute Performance](#)

Découvrez le caisson de basse actif Elipson Premium SUB 10, offrant des graves puissants et précis grâce à son haut-parleur de 250 mm et son amplificateur Class D de 300W. Idéal pour systèmes hi-fi et home cinéma.



### [Elipson Horus 8S Active Subwoofer: Connecting and Placement Guide](#)

Comprehensive guide to connecting and positioning the Elipson Horus 8S active subwoofer for optimal Hi-Fi and home cinema performance. Learn about volume, crossover, phase, and placement.