



[Manuals.plus](#) /

> [Redi-Remote](#) /

> Redi-Remote Replacement Remote Control for Integra RC-553C, CDC-3.4 User Manual

Redi-Remote RTRC553C

Redi-Remote Replacement Remote Control User Manual

For Integra Models: RC-553C, CDC-3.4

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for specific Integra audio/video components. This remote is a custom replacement and is not an original Integra product. It is engineered to provide full functionality for the compatible Integra models without requiring complex programming.

SETUP

1. Battery Installation

The remote control requires 4 AAA alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always use new batteries and replace all batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. Initial Use

This Redi-Remote replacement remote control is pre-programmed for immediate use with the specified Integra models: RC-553C and CDC-3.4. No additional programming steps are required. Simply install the batteries and point the remote towards your Integra unit to begin operation.



Image: The Redi-Remote replacement remote control, showing its general appearance and button layout. This remote is designed for Integra RC-553C and CDC-3.4 units.

OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of the original remote for your Integra RC-553C and CDC-3.4 units. It operates using infrared (IR) technology, requiring a direct line of sight to the Integra component.

Basic Functions

- **Power On/Off:** Use the dedicated power button to turn your Integra unit on or off.
- **Input Selection:** Buttons for selecting various audio/video inputs on your Integra receiver.
- **Volume Control:** Adjust the master volume level using the volume up/down buttons.
- **Navigation:** Use the directional arrow buttons and 'Enter' or 'OK' button for menu navigation.
- **Playback Controls:** For the CDC-3.4 CD changer, use play, pause, stop, skip, and fast forward/rewind buttons.

Accessing Hidden Functions

The remote control features a sliding cover over its lower half. This cover conceals additional, model-specific functions. To access these functions:

1. Locate the sliding cover on the lower section of the remote.
2. Gently slide the cover downwards to reveal the additional buttons.
3. After use, you may slide the cover back up to protect the buttons.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades, or if the indicator light (if present) does not illuminate, it is time to replace the batteries. Refer to the 'Battery Installation' section for detailed instructions.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

If you experience issues with your Redi-Remote replacement remote control, please consult the following common problems and solutions:

- **Remote is not responding:**
 - Ensure the batteries are correctly installed and are not depleted. Replace them if necessary.
 - Check for any obstructions between the remote control and the Integra unit's infrared sensor.
 - Ensure you are within the maximum operating range of 20 feet.
 - Verify that the remote is pointed directly at the Integra unit.
- **Only some functions work:**
 - Confirm that the remote is compatible with your specific Integra model (RC-553C or CDC-3.4).
 - Ensure the sliding cover is open if you are trying to access lower-half functions.

- This remote is designed for the primary Integra unit and cannot be programmed to control auxiliary devices.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTRC553C
Compatible Devices	Integra RC-553C, Integra CDC-3.4
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Maximum Number of Supported Devices	1
Button Quantity	58
Maximum Range	20 Feet
Batteries Required	4 AAA batteries
Battery Type	Alkaline
Item Weight	5 Ounces
Dimensions	7 1/2" x 2 1/4" x 3/4" (approximate)
UPC	713939344182

CUSTOMER SUPPORT

If you have any concerns or questions regarding your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. They can provide specific guidance and support for any issues you may encounter.