

Bellemave Metal Triple Bunk Bed

Bellemave Metal Triple Bunk Bed Instruction Manual

Model: Metal Triple Bunk Bed

INTRODUCTION

Thank you for choosing the Bellemave Metal Triple Bunk Bed. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new bunk bed. Please read all instructions carefully before assembly and retain this manual for future reference.

SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always assemble the bunk bed according to the provided instructions to ensure structural stability.
- Be aware of the varying weight capacities for each level: **250 lbs (113 kg) for the upper bed** and **350 lbs (159 kg) for each of the bottom beds**. Do not exceed these limits.
- Use guardrails on the upper bed to prevent falls. Ensure guardrails are properly installed and secured.
- Always supervise children when they are using the bunk bed, especially on the upper bunk and ladders.
- Ensure mattresses used are of the correct size and thickness to allow for adequate guardrail height.
- Periodically check all connections and hardware to ensure they remain tight and secure.
- Do not allow children under 6 years of age on the upper bunk.
- Prohibit horseplay on or under the bed.
- Always use the ladder for entering and exiting the upper bunk.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the separate hardware list and assembly diagram included with your product packaging.

- Metal Bed Frame Components (various beams, posts, and slats)
- Guardrails for upper and middle bunks

- Ladders (2 included for flexible placement)
- All necessary Hardware (bolts, nuts, washers, Allen wrench)



Image: The Bellemave Metal Triple Bunk Bed frame, shown without mattresses, highlighting its L-shaped configuration and three sleeping levels.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly requires two adults and approximately 1-2 hours. Please follow the step-by-step instructions and diagrams provided in the separate assembly manual included in your product packaging. Do not use power tools for assembly as this may overtighten fasteners and damage the frame.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface (like a carpet) to prevent scratches. Identify each part using the provided parts list.
2. **Assemble Base Frames:** Begin by assembling the base frames for each bunk according to the diagrams. Ensure all connections are finger-tightened initially.
3. **Attach Vertical Supports:** Connect the vertical support posts to form the multi-level structure.
4. **Install Slats:** Secure the metal slats onto each bed frame. Ensure they are evenly spaced and firmly attached.
5. **Install Guardrails:** Attach the guardrails to the upper and middle bunks as indicated in the manual. These are crucial

for safety.

6. **Attach Ladders:** Securely attach both ladders to the designated positions. Ensure they are stable and can support weight.
7. **Final Tightening:** Once all components are assembled, go back and securely tighten all bolts and fasteners using the provided Allen wrench. Do not overtighten.

SIZE:INCH

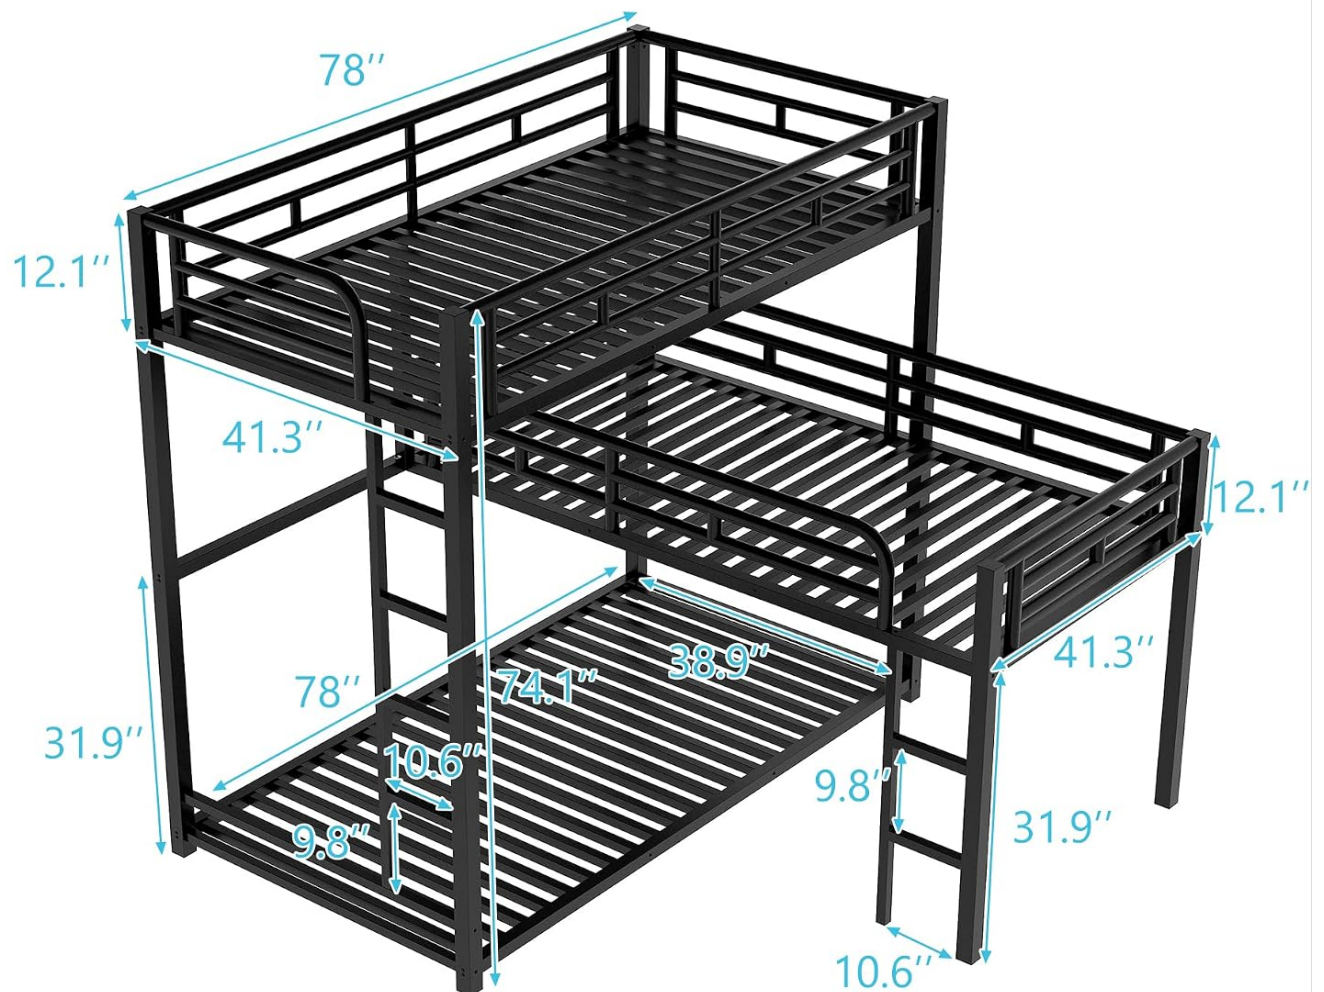


Image: A detailed diagram showing the dimensions of the Bellemave Metal Triple Bunk Bed, including length, width, and height measurements for each section.



Image: Close-up view of the two-sided ladder design, illustrating its integration into the bunk bed frame for access to the upper bunks.



Image: Detail of the robust metal slats that support the mattress, designed for durability and to eliminate the need for a box spring.

OPERATING INSTRUCTIONS (USAGE)

To ensure safe and proper use of your Bellemave Triple Bunk Bed:

- **Mattress Requirements:** Use only twin-size mattresses. The maximum mattress thickness for the upper and middle bunks should not exceed 6 inches (15 cm) to maintain adequate guardrail height.
- **Ladder Use:** Always use the provided ladders to access the upper and middle bunks. Do not climb on the frame directly.
- **Weight Distribution:** Distribute weight evenly on each bunk. Avoid concentrating heavy loads in one area.
- **Guardrails:** Ensure guardrails are always in place and securely fastened when the upper or middle bunks are in use.
- **Clearance:** Maintain adequate clearance around the bunk bed for safe movement and to prevent accidents.



Image: The Bellemave Metal Triple Bunk Bed fully assembled with mattresses and bedding, showcasing its functional design in a room setting.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your bunk bed:

- **Cleaning:** Wipe the metal frame with a dry or slightly damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Hardware Check:** Periodically (every 3-6 months) check all bolts, screws, and fasteners to ensure they are tight. Re-tighten if necessary to maintain stability and prevent squeaking.
- **Moving the Bed:** When moving the bunk bed, lift it rather than dragging it to prevent damage to the frame and flooring.
- **Ventilation:** Ensure adequate air circulation around mattresses to prevent moisture buildup.

TROUBLESHOOTING

- If you encounter issues with your Bellemave Metal Triple Bunk Bed, refer to the following common solutions:
- **Squeaking Noises:** Squeaking often indicates loose hardware. Re-tighten all bolts and screws. Ensure the bed is on a level surface.
 - **Instability/Wobbling:** This is typically due to loose connections. Carefully re-check and tighten all fasteners. Ensure the bed is assembled correctly according to the manual.
 - **Missing Parts:** If you find any parts missing upon unpacking, do not proceed with assembly. Contact customer support immediately for replacement parts.
 - **Difficulty Assembling:** Ensure you are following the assembly diagrams precisely. Sometimes, parts may appear similar but have subtle differences. Refer to part labels if available.

SPECIFICATIONS

Model Name	Metal Triple Bunk Bed
Brand	Bellemave
Material	Metal
Product Dimensions (L x W x H)	77"L x 41"W x 74"H (195.6 cm x 104.1 cm x 188 cm)
Compatible Mattress Size	Twin/Twin/Twin
Upper Bed Weight Capacity	250 lbs (113 kg)
Bottom Bed Weight Capacity (each)	350 lbs (159 kg)
Included Components	Guardrails, Hardware

WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please refer to the warranty card included with your purchase or contact Bellemave customer service directly. Please have your purchase receipt and product model number ready when contacting support.

You can typically find contact information on the Bellemave official website or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question