

Hourleey CL-A60W-50

Hourleey CL-A60W-50 Set of 3 Lighted Christmas Gift Boxes Instruction Manual

Model: CL-A60W-50

INTRODUCTION

This manual provides instructions for the safe and proper use of your Hourleey Set of 3 Lighted Christmas Gift Boxes. These pre-lit decorative boxes feature 60 warm white LED lights and are designed for both indoor and outdoor holiday displays. Please read all instructions carefully before assembly and operation.

IMPORTANT SAFETY INFORMATION

- **Fire Hazard:** Turn off the lighted gift boxes when going to bed or leaving the house to minimize fire risk.
- **Electrical Safety:** Ensure the low voltage transformer is properly connected to a suitable power outlet. Do not overload circuits.
- **Placement:** Place the boxes on a stable, level surface. Avoid placing near flammable materials.
- **Outdoor Use:** While suitable for outdoor use, ensure the power adapter and connections are protected from direct water exposure.
- **Children and Pets:** Keep out of reach of small children and pets to prevent entanglement or damage.

PACKAGE CONTENTS

Your Hourleey Lighted Christmas Gift Boxes package includes:

- 1 x Large Lighted Gift Box (7.5" x 7.5" x 7.1")

- 1 x Medium Lighted Gift Box (6.1" x 6.1" x 5.9")
- 1 x Small Lighted Gift Box (5.1" x 5.1" x 4.9")
- 3 x Detachable Pine Cone and Bow Decorations
- 1 x Low Voltage Transformer with 9.8 FT Lead Wire

SPECIFICATIONS

Feature	Detail
Model Number	CL-A60W-50
Number of Items	3
Light Color	Warm White
Number of Light Sources	60 LED
Voltage	24 Volts (DC)
Frame Material	Metal
Cover Material	Tinsel, Silver Ribbon
Large Box Dimensions	7.5" x 7.5" x 7.1"
Medium Box Dimensions	6.1" x 6.1" x 5.9"
Small Box Dimensions	5.1" x 5.1" x 4.9"
Lead Wire Length	9.8 FT
Wire Length Between Boxes	19.6 inches
UPC	600609089811

SETUP INSTRUCTIONS

1. **Unpack Contents:** Carefully remove all three lighted gift boxes and the power adapter from the packaging.
2. **Attach Decorations:** Each gift box comes with a detachable pine cone and bow decoration. These attach via Velcro to the top of each box. Align the Velcro strips and press firmly to secure.
3. **Position Boxes:** Arrange the three boxes in your desired display configuration. The connecting wires between the boxes allow for flexible placement.
4. **Connect Power:** Plug the low voltage transformer into a standard power outlet. Ensure the connection is secure.
5. **Verify Operation:** Once plugged in, the warm white LED lights inside each box should illuminate.

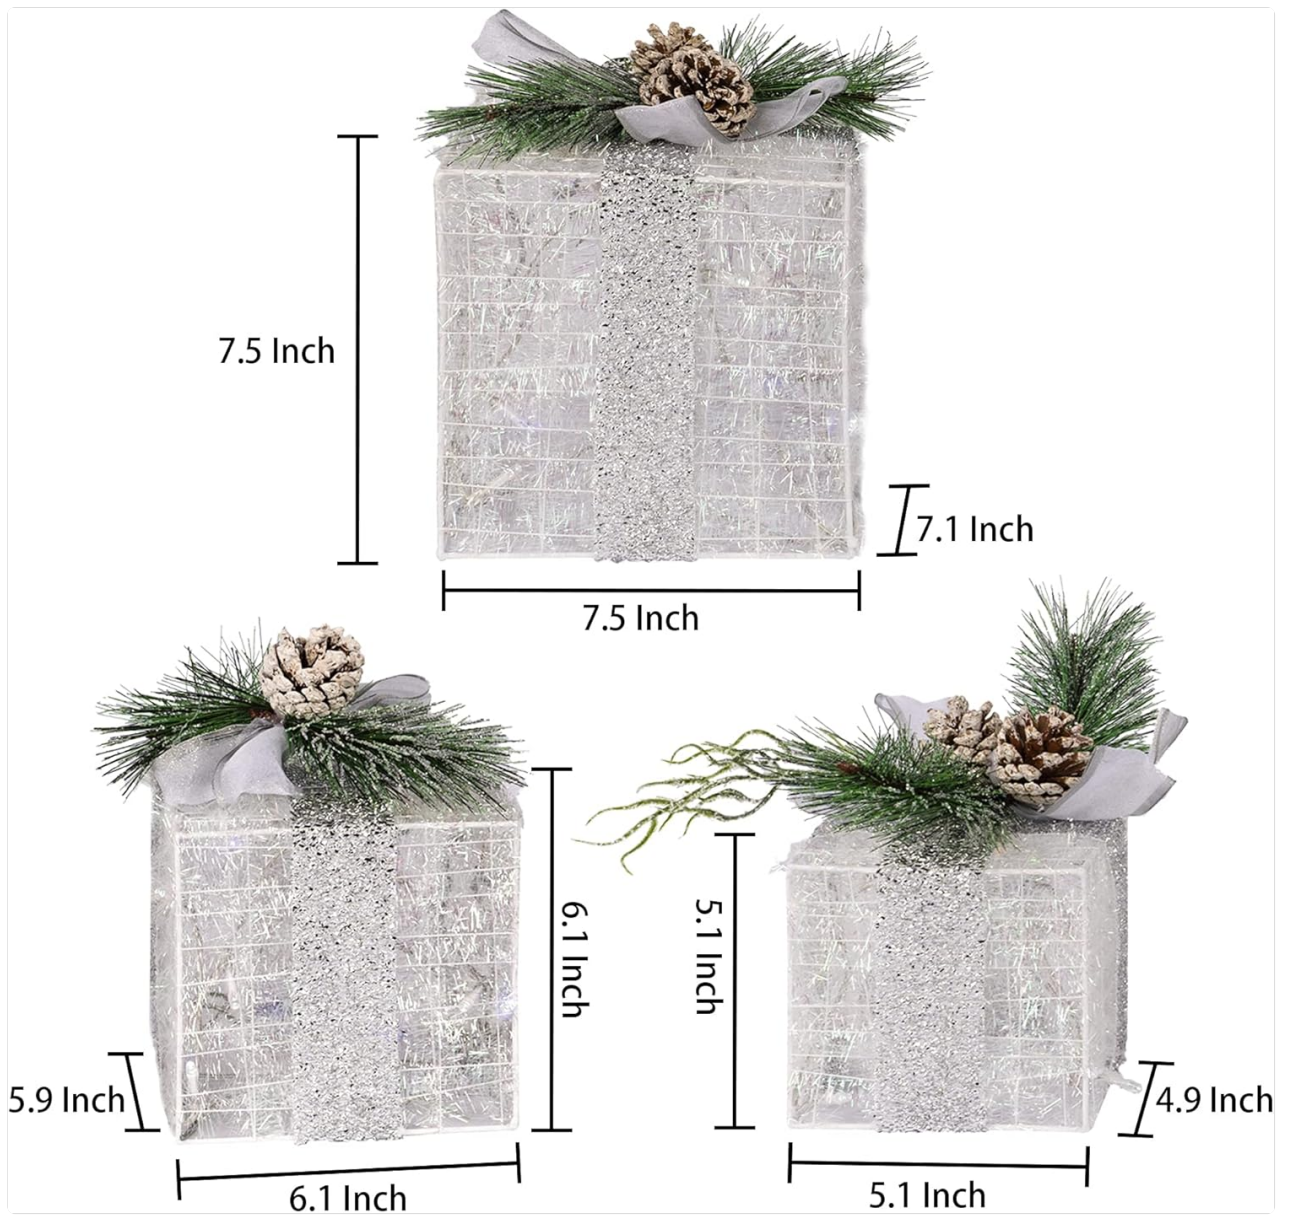


Image: Three lighted gift boxes arranged for display.

OUR LIGHTED GIFT BOX



TRANSFORMER POWERED



BRIGHTER AND MORE STABLE




THICKER WIRES, LESS LIKELY TO BREAK

OTHER LIGHTED GIFT BOX



BATTERY BOX POWERED

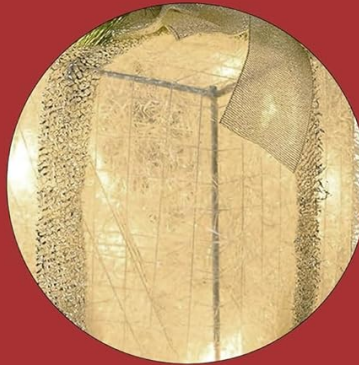

NOT BRIGHT ENOUGH



THIN WIRES THAT BREAK EASILY

Image: Dimensions of the three gift boxes.

OPERATING INSTRUCTIONS

The Hourleey Lighted Christmas Gift Boxes are designed for simple operation:

- **Power On/Off:** Once plugged into a power outlet, the lights will turn on automatically. To turn off, simply unplug the power adapter from the outlet.
- **Placement:** These boxes are suitable for placement under Christmas trees, in entryways, on porches, or in any indoor or covered outdoor area where festive lighting is desired.



Image: Hourleey Lighted Gift Boxes illuminating a festive scene.



Image: Lighted gift boxes as indoor Christmas decor.

MAINTENANCE AND STORAGE

- **Cleaning:** Gently wipe the surfaces of the gift boxes with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** To save space, the pine cone and bow decorations can be removed. The boxes are designed to nest within each other for compact storage. Store in a cool, dry place away from direct sunlight when not in use.



Image: Close-up of the detachable pine cone decoration.

TROUBLESHOOTING

- **Lights Not Turning On:**

- Ensure the power adapter is securely plugged into a working electrical outlet.
- Check if the outlet itself is functioning by plugging in another device.
- Inspect the wiring for any visible damage or loose connections.

- **Lights Dim or Flickering:**

- Verify that the power supply is stable and not experiencing fluctuations.
- Ensure all connections between the boxes and to the power adapter are firm.

- **Decorations Not Staying Attached:**

- Ensure the Velcro strips on both the decoration and the box are clean and free of debris.

- Press firmly to ensure a strong bond.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the retailer's return policy or contact Hourleey customer service directly through their official channels. Keep your purchase receipt for any warranty claims.