

manuals.plus /

› [Giantex](#) /

› [Giantex Twin Tub Semi-automatic Washing Machine \(Model 10021US-BL-FP\) User Manual](#)

Giantex 10021US-BL-FP

Giantex Twin Tub Semi-automatic Washing Machine

MODEL: 10021US-BL-FP USER MANUAL

Introduction

This manual provides comprehensive instructions for the safe and efficient use of your Giantex Twin Tub Semi-automatic Washing Machine. Please read this manual thoroughly before operating the appliance and retain it for future reference.

The Giantex Twin Tub Semi-automatic Washing Machine offers a convenient 2-in-1 design, allowing for simultaneous washing and spinning. It features separate timers for wash and spin cycles, along with three selection modes (Gentle, Normal, Drain) to accommodate various fabric types. With an 18lbs washing capacity and 8lbs spinning capacity, it is suitable for household use in limited spaces such as dormitories, RVs, and apartments. The powerful dual motor (280W washing, 140W spinning) ensures efficient cleaning and quick spin-drying. A built-in drain pump facilitates easy water drainage, keeping your floor clean.



Figure 1: The Giantex Twin Tub Semi-automatic Washing Machine, designed for efficient and convenient laundry.

Strong Power, Efficient Laundry

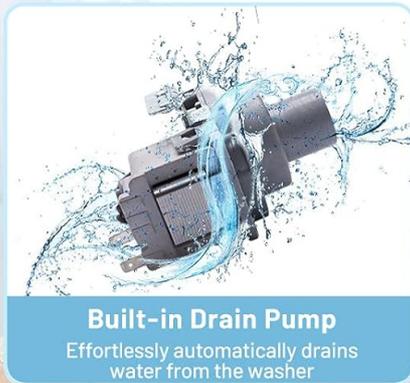


Figure 2: The machine is equipped with a built-in drain pump for effortless water drainage and a powerful dual motor for efficient washing and spinning.

What's in the Box

Upon unpacking, please ensure all components are present and undamaged:

- Giantex Twin Tub Semi-automatic Washing Machine
- Drain Hose
- Spin Lid & Safety Cover
- Water Inlet Hose
- Fixing Hoop (for hoses)
- Protective Cover (for spin tub)



Figure 3: Overview of key components and features including water inlet, easy-cleaning filter, power cord management, drain hose, and raised feet for stability.

Setup

1. **Placement:** Place the washing machine on a flat, stable surface. Ensure there is enough space around the unit for proper ventilation and operation. The dimensions are 16.5"D x 26.5"W x 31.5"H.
2. **Power Connection:** Connect the power cord to a standard 120V electrical outlet. Ensure the power wire is organized and secured to prevent tripping hazards.
3. **Water Inlet:** Connect the water inlet hose to a faucet. Alternatively, water can be poured directly into the wash tub using a bucket.
4. **Drain Hose:** Position the drain hose to allow water to flow into a sink or floor drain. The built-in drain pump will assist in expelling water.

Product Dimension



Figure 4: Product dimensions for proper placement and space consideration.



Figure 5: The portable and compact design makes this washing machine suitable for various living spaces, including RVs, homes, apartments, and dormitories.

Operating Instructions

The washing machine features separate controls for washing and spinning, allowing for flexible operation.

Easy Operation

Separate Timer Control Settings for Washer & Spinner

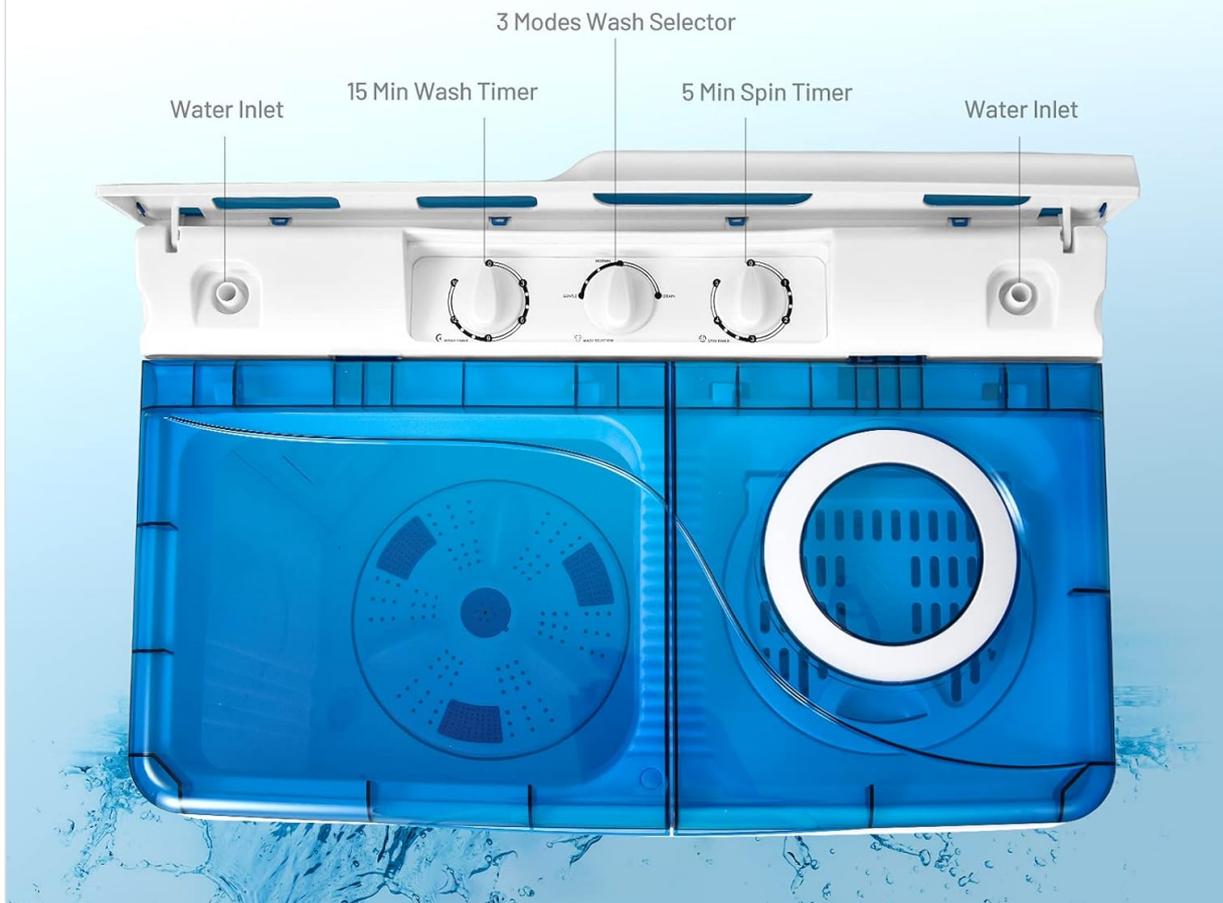


Figure 6: Control panel with Wash Timer, Wash Selector, and Spin Timer for easy operation.

1. **Loading Clothes:** Open the wash tub lid and place clothes inside. The wash tub has an 18lbs capacity.
2. **Add Water and Detergent:** Fill the wash tub with water to the desired level and add appropriate detergent.
3. **Set Wash Timer:** Turn the "Wash Timer" knob to select the desired washing time (0-15 minutes).
4. **Select Wash Mode:** Use the "Wash Selector" knob to choose between "Gentle" (for delicate fabrics like silk or floss) or "Normal" (for regular loads).
5. **Washing Cycle:** The machine will begin washing. You can observe the process through the clear lid.
6. **Draining Water:** After the wash cycle, turn the "Wash Selector" knob to "Drain" to empty the water from the wash tub.
7. **Rinsing:** Refill the wash tub with clean water and run a short wash cycle (e.g., 3-5 minutes) to rinse the clothes. Drain the water again.
8. **Spin Drying:** Transfer the rinsed clothes to the spin dry tub. Ensure the clothes are evenly distributed. Place the protective cover over the clothes. The spin dry tub has an 8lbs capacity.
9. **Set Spin Timer:** Turn the "Spin Timer" knob to select the desired spinning time (0-5 minutes).
10. **Completion:** Once the spin cycle is complete, remove the clothes. They will be damp and ready for air drying.

Washing & Spinning Separation

Wash and spin simultaneously, saving time and water



Figure 7: The twin tub design allows for separate washing and spin-drying operations.

Your browser does not support the video tag.

Video 1: This video demonstrates the operational steps of the Giantex Twin Tub Washing Machine, including filling with water, setting wash and spin timers, and draining.

Maintenance

- **Cleaning the Filter:** Regularly check and clean the easy-cleaning filter to ensure optimal performance and prevent lint buildup.
- **Draining:** Always ensure the wash tub is completely drained after each use to prevent stagnant water and odors.
- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
- **Storage:** If storing the machine for an extended period, ensure it is clean and dry. Store in a cool, dry place.



Figure 8: The easy-cleaning filter should be regularly maintained to ensure efficient operation.

Troubleshooting

If you encounter issues with your washing machine, please refer to the following general troubleshooting tips:

- **Machine Not Starting:** Ensure the power cord is securely plugged into a working outlet and the timer knobs are set correctly.
- **Water Not Draining:** Check if the drain hose is properly positioned and not kinked or blocked. Ensure the "Wash Selector" is set to "Drain".
- **Excessive Vibration/Noise:** Make sure the machine is placed on a level surface. Ensure clothes are evenly distributed in the wash or spin tub.
- **Poor Washing Performance:** Do not overload the wash tub. Use the appropriate amount of detergent and select the correct wash mode for your fabric type.

For persistent issues, please contact customer support.

Specifications

Feature	Detail
Product Dimensions	16.5"D x 26.5"W x 31.5"H
Brand	Giantex
Capacity	26 Pounds (18lbs Wash, 8lbs Spin)
Special Feature	Semi-automatic, Twin Tub, Built-in Drain Pump
Access Location	Top Load
Color	White+Blue
Item Weight	34 Pounds
Material	ABS, Polypropylene, Stainless Steel (Drum)
Controls Type	Knob
Voltage	120 Volts
Model Number	10021US-BL-FP

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Giantex website. The product typically includes a standard return policy of 30 days for refund/replacement.