



Manuals.plus /

› Mienta /

› Mienta CP10429A Citrus Juicer User Manual

Mienta CP10429A

Mienta CP10429A Citrus Juicer User Manual

Model: CP10429A | Brand: Mienta

1. INTRODUCTION

Thank you for choosing the Mienta CP10429A Citrus Juicer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions carefully before using the juicer for the first time and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- To protect against electrical shock, do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the appliance is properly assembled before operation.
- Do not use the appliance for anything other than its intended use.

3. PARTS AND FEATURES

Familiarize yourself with the components of your Mienta Citrus Juicer:

- **Motor Unit:** The base containing the motor and power cord.
- **Juice Pitcher (1 Liter Capacity):** Collects the extracted juice. Features a juice level indicator.

- **Lid:** Covers the pitcher for storage or to prevent dust.
- **Removable Filter:** Separates pulp and seeds from the juice.
- **Extraction Cone:** The part that presses and extracts juice from citrus fruits.
- **Pouring Spout:** Integrated into the pitcher for easy serving.



Figure 1: Mienta CP10429A Citrus Juicer showing the main unit, pitcher, filter, and cone.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the juice pitcher, lid, removable filter, and extraction cone in warm, soapy water. Rinse thoroughly and dry. The motor unit should only be wiped with a damp cloth.
3. **Assemble:** Place the removable filter onto the juice pitcher. Then, place the extraction cone onto the filter. Ensure all parts are securely seated.
4. **Position:** Place the assembled pitcher and cone onto the motor unit.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to extract juice from citrus fruits:

1. **Prepare Fruit:** Cut citrus fruits (oranges, lemons, grapefruits, etc.) in half.
2. **Place Fruit:** Place one half of the citrus fruit onto the extraction cone.
3. **Start Juicing:** Apply gentle downward pressure on the fruit. The motor will automatically start rotating. The juicer features two rotation directions for optimal juice extraction.
4. **Collect Juice:** The fresh juice will flow through the filter into the 1-liter pitcher below. The juice level indicator on the pitcher helps monitor the volume.
5. **Stop Juicing:** Release pressure from the fruit to stop the motor.
6. **Serve:** Once you have extracted the desired amount of juice, remove the fruit and cone. Use the integrated pouring spout to serve the juice directly from the pitcher.
7. **Storage:** You can cover the pitcher with the lid for temporary storage of the juice in the refrigerator.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your juicer:

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Remove the lid, extraction cone, filter, and juice pitcher from the motor unit.
3. **Wash Removable Parts:** The juice pitcher, lid, removable filter, and extraction cone are dishwasher safe. Alternatively, wash them by hand in warm, soapy water, then rinse and dry thoroughly.
4. **Clean Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Avoid Abrasives:** Do not use abrasive cleaning agents, scouring pads, or harsh chemicals, as these can damage the surfaces of the appliance.
6. **Storage:** Ensure all parts are completely dry before reassembling or storing the juicer. Store in a clean, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your Mienta Citrus Juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; power outage; appliance not assembled correctly.	Check power connection; ensure power is available; reassemble parts correctly.
Low juice yield.	Insufficient pressure on fruit; fruit not fresh.	Apply firm, even pressure; use fresh, ripe citrus fruits.
Motor stops during operation.	Overheating due to prolonged use; excessive pressure.	Unplug and let the motor cool down for 15-20 minutes; apply gentle, consistent pressure.
Loud noise or vibration.	Parts not assembled correctly; juicer on an uneven surface.	Check assembly of all parts; place juicer on a stable, flat surface.

8. SPECIFICATIONS

Feature	Detail
Brand	Mienta
Model Number	CP10429A
Color	Black
Product Dimensions	30 x 30 x 35 cm
Item Weight	2 Kilograms
Capacity	1 Liters
Power / Wattage	30 Watts
Material	Plastic
Special Features	Portable
Care Instructions	Dishwasher Safe (removable parts)

9. WARRANTY AND SUPPORT

This Mienta CP10429A Citrus Juicer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase or your purchase receipt for specific terms, conditions, and duration of the warranty. For technical support, service, or spare parts, please contact Mienta customer service. Contact details can typically be found on the Mienta official website or on your product packaging.