

2B GP076

2B GP076 Wireless Gamepad User Manual

Model: GP076

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your 2B GP076 Wireless Gamepad. Designed for compatibility with PC, PlayStation 2 (PS2), and PlayStation 3 (PS3) systems, this gamepad offers a versatile gaming experience with features like Turbo functionality and Dual Vibration feedback. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The 2B GP076 Wireless Gamepad is engineered for comfort and precision, providing an immersive gaming experience across multiple platforms. Its ergonomic design and responsive controls make it suitable for various game genres.



Image 1: Front view of the 2B GP076 Wireless Gamepad, showcasing the D-pad, action buttons (A, B, X, Y), analog sticks, SELECT, START, and Home buttons, along with the 2B logo and indicator lights.



Image 2: Top view of the 2B GP076 Wireless Gamepad, highlighting the micro-USB charging port located between the shoulder buttons (L1, R1, L2, R2).

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 2B GP076 Wireless Gamepad
- USB Receiver (for wireless connection)
- USB Charging Cable
- User Manual (this document)

SETUP INSTRUCTIONS

1. Charging the Gamepad

Before initial use, ensure the gamepad is fully charged. Connect the supplied USB charging cable to the gamepad's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The indicator lights on the gamepad will show charging status.

2. Connecting to PC

1. Insert the USB receiver into an available USB port on your PC.
2. Turn on the gamepad by pressing the Home button.
3. The gamepad will automatically attempt to connect to the receiver. Indicator lights will confirm a successful connection.
4. Your PC should automatically install the necessary drivers. If not, manual driver installation may be required (refer to your PC's operating system instructions).

3. Connecting to PlayStation 2 (PS2)

For PS2 compatibility, the gamepad typically requires a specific adapter (not included) to convert the USB receiver signal to the PS2 controller port. Please consult the adapter's instructions for proper setup. Once the adapter is connected, follow the PC connection steps (insert USB receiver into adapter, turn on gamepad).

4. Connecting to PlayStation 3 (PS3)

1. Insert the USB receiver into an available USB port on your PS3 console.
2. Turn on the gamepad by pressing the Home button.
3. The gamepad will automatically attempt to connect to the receiver. Indicator lights will confirm a successful connection.
4. The PS3 system should recognize the gamepad as a standard controller.

OPERATING INSTRUCTIONS

Button Layout and Functions



Image 3: Angled front view of the gamepad, providing a clearer perspective of the button placement and ergonomic design.

- **D-Pad:** Directional input for movement or menu navigation.
- **Left/Right Analog Sticks:** Provide precise 360-degree movement and camera control.
- **Action Buttons (A, B, X, Y):** Primary interaction buttons, functions vary by game.
- **SELECT Button:** Typically used for menu access or specific game functions.
- **START Button:** Usually pauses the game or opens in-game menus.
- **Home Button:** Powers on/off the gamepad, accesses system menus (e.g., PS3 XMB).
- **Shoulder Buttons (L1, R1):** Often used for secondary actions or weapon selection.
- **Trigger Buttons (L2, R2):** Analog input for actions like acceleration or aiming.

Turbo Function

The Turbo function allows a button to be repeatedly pressed automatically as long as it is held down. This can be useful for certain game mechanics.

1. To activate Turbo: Press and hold the **Turbo** button, then press the desired action button (e.g., A, B, X, Y, L1, R1, L2, R2). Release both buttons. The selected button will now have Turbo enabled.
2. To deactivate Turbo: Press and hold the **Turbo** button, then press the action button that currently has Turbo enabled. Release both buttons.

Dual Vibration Feedback

The gamepad features dual vibration motors that provide tactile feedback during gameplay, enhancing immersion. This feature is automatically enabled when supported by the game and system.

CHARGING AND BATTERY

The gamepad is equipped with a built-in rechargeable battery. When the battery is low, the indicator lights

will flash. Connect the gamepad to a power source using the provided USB cable to recharge. A full charge typically takes approximately 2-3 hours. Avoid prolonged charging once the battery is full to preserve battery life.

MAINTENANCE

- Clean the gamepad regularly with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the gamepad to extreme temperatures, direct sunlight, or moisture.
- Store the gamepad in a cool, dry place when not in use.
- Do not attempt to disassemble the gamepad, as this will void the warranty and may cause damage.

TROUBLESHOOTING

Problem	Solution
Gamepad does not turn on.	Ensure the gamepad is charged. Connect it to a power source using the USB cable.
Gamepad does not connect wirelessly.	<ul style="list-style-type: none">• Verify the USB receiver is securely plugged into the console/PC.• Ensure the gamepad is within range of the receiver (typically up to 10 meters).• Try re-pairing by turning off the gamepad, unplugging and replugging the receiver, then turning the gamepad back on.• Check for any obstructions between the gamepad and receiver.
Buttons or analog sticks are unresponsive.	<ul style="list-style-type: none">• Ensure the gamepad is properly connected.• Restart the console/PC and the gamepad.• Check game settings to ensure controller input is enabled.• If the issue persists, the gamepad may require calibration (PC only, via operating system settings) or service.
Vibration feedback is not working.	<ul style="list-style-type: none">• Verify that the game you are playing supports vibration feedback.• Check in-game settings to ensure vibration is enabled.• Ensure the gamepad battery is not critically low.

SPECIFICATIONS

- **Model:** GP076
- **Connectivity:** Wireless (via USB receiver)
- **Compatibility:** PC, PlayStation 2 (PS2), PlayStation 3 (PS3)
- **Features:** Turbo Function, Dual Vibration Feedback
- **Power:** Built-in Rechargeable Battery
- **Dimensions (Package):** 17.8 x 16.5 x 9.8 cm
- **Weight (Package):** 290 g

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official 2B website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact 2B customer service through their official channels. Contact details are typically available on the product packaging or the brand's official website.