



[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Twin Over Twin Metal Bunk Bed with Slide Instruction Manual

Bellemave Twin Over Twin Metal Bunk Bed with Slide

Bellemave Twin Over Twin Metal Bunk Bed with Slide Instruction Manual

Model: Twin Over Twin Metal Bunk Bed with Slide (ASIN: B097M97DPP)

INTRODUCTION

This instruction manual provides detailed guidance for the assembly, safe operation, and maintenance of your Bellemave Twin Over Twin Metal Bunk Bed with Slide. Please read all instructions carefully before assembly and use to ensure safety and proper function.



Image: The Bellemave Twin Over Twin Metal Bunk Bed with Slide, featuring a house-shaped frame and a red slide, set up in a bedroom.

SAFETY INFORMATION AND WARNINGS

WARNING: Always use guardrails on the upper bunk. Do not exceed weight capacity: 250 lbs for upper bunk, 350 lbs for lower bunk. Use mattresses of recommended thickness only. Adult supervision required for children using the slide. Assembly must be completed correctly to ensure stability.

- Ensure all connections are securely fastened before use.
- Regularly check all bolts and screws to ensure they remain tight.
- Do not allow children under 6 years of age on the upper bunk.
- The slide is intended for single-person use at a time.
- Keep the area around the slide clear of obstructions.
- Only use mattresses that comply with the recommended thickness to maintain guardrail effectiveness.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer service immediately.

- Bunk Bed Frame (1 unit)
- Installation Manual (1 unit)
- All necessary assembly tools

Note: Mattress is not included and must be purchased separately.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the Bellemave Twin Over Twin Metal Bunk Bed with Slide requires approximately 1-2 hours with two people. All necessary tools are included. Follow the detailed instructions provided in the separate Installation Manual for step-by-step guidance.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratching.
2. Identify all parts by comparing them with the parts list in the Installation Manual.
3. Begin by assembling the main bed frames for both the upper and lower bunks, ensuring all connections are finger-tight initially.
4. Attach the guardrails to the upper bunk frame.
5. Securely attach the ladder and the slide to the designated points on the bunk bed structure.
6. Once all major components are in place, tighten all bolts and screws using the provided tools. Do not overtighten.
7. Place the bed slats onto both the upper and lower bunk frames.
8. Perform a final check to ensure all parts are correctly assembled and securely fastened.

SIZE: INCH

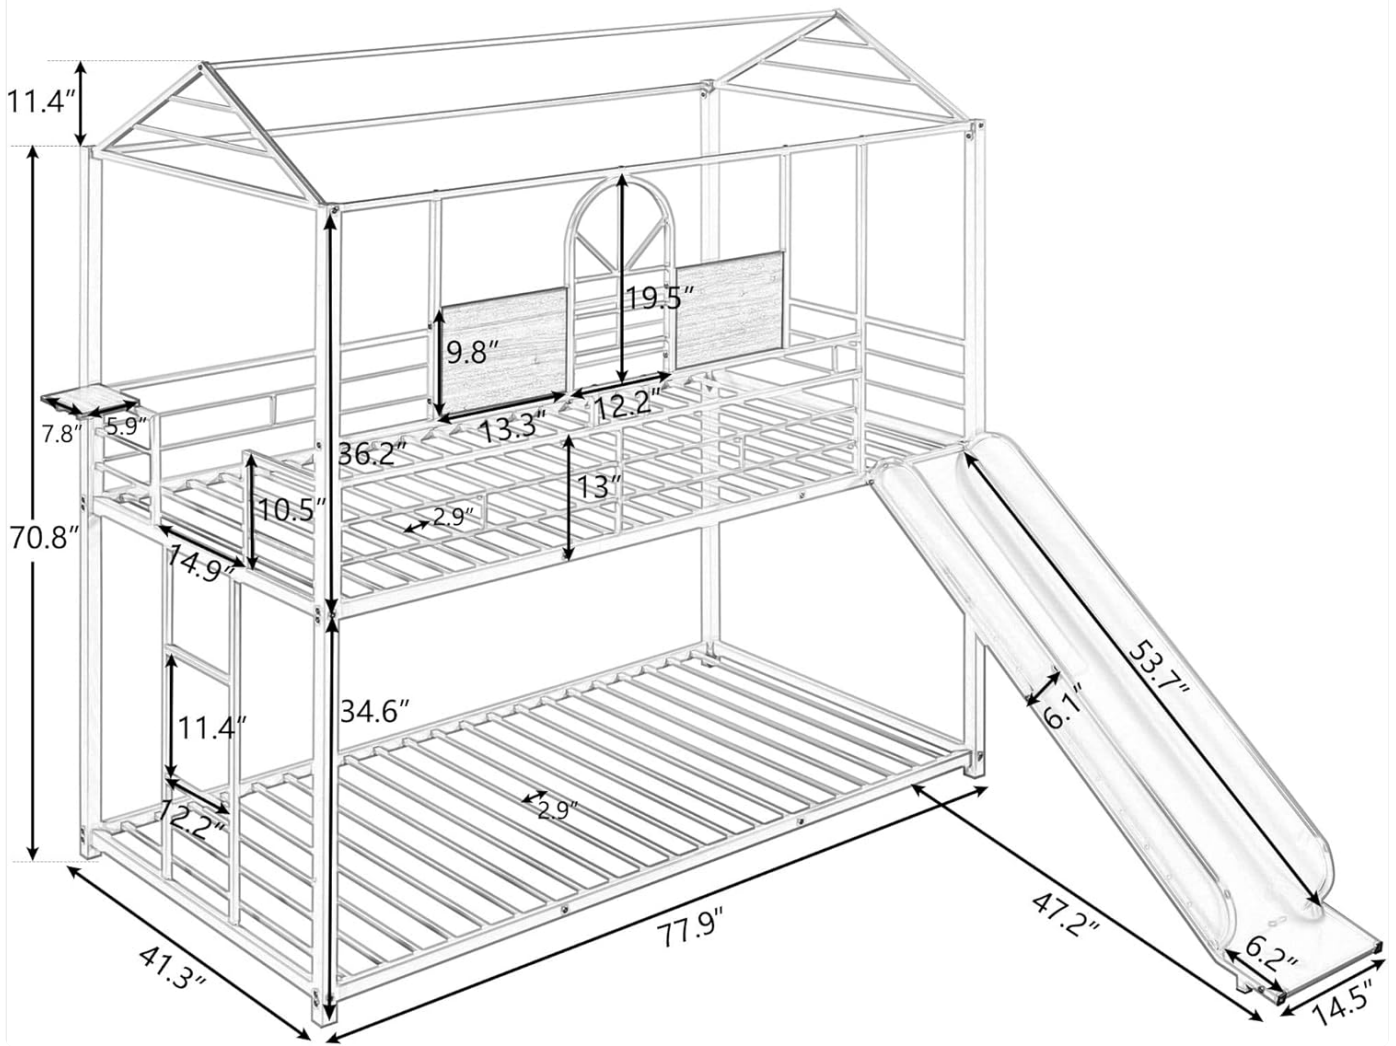


Image: Technical drawing illustrating the dimensions of the bunk bed, including length, width, height, and slide measurements.



Image: A detailed view of the upper bunk's house-shaped frame and the integrated wooden panels.

OPERATING INSTRUCTIONS

The Bellemave Twin Over Twin Metal Bunk Bed is designed for sleeping and recreational use of the integrated slide. Adhere to the following guidelines for safe operation:

- **Weight Capacity:** The upper bunk supports up to 250 lbs. The lower bunk supports up to 350 lbs. Do not exceed these limits.
- **Mattress Usage:** For the upper bunk, use a mattress with a thickness of 4-6 inches. For the lower bunk, use a mattress with a thickness of up to 8 inches. This ensures the guardrails function effectively on the upper bunk.
- **Slide Use:** The slide is intended for children under adult supervision. Ensure the landing area is clear. Only one person should use the slide at a time.
- **Ladder Use:** Use the integrated ladder for safe access to the upper bunk.

MAINTENANCE

Regular maintenance will prolong the life and ensure the safety of your bunk bed.

- **Cleaning:** Wipe down metal surfaces with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections. Tighten any loose hardware to maintain structural integrity.
- **Slat Inspection:** Ensure all bed slats are securely in place and undamaged. Replace any broken slats immediately.
- **Slide Inspection:** Check the slide for any cracks or damage that could cause injury.

TROUBLESHOOTING

This section addresses common issues you might encounter with your bunk bed.

- **Bed is noisy or wobbly:** This usually indicates loose hardware. Re-tighten all bolts and screws, ensuring they are snug but not overtightened.
- **Missing or damaged parts upon delivery:** If you receive the product with missing components or damaged parts, refer to the "Warranty and Support" section for contact information to request replacements.
- **Difficulty with assembly:** Ensure you are following the Installation Manual step-by-step. If issues persist, contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Type	Bunk Bed
Size	Twin over Twin
Color	Black with Red Slide
Product Material	Steel + MDF
Bed Slat Material	Steel
Overall Product Dimensions	78.1"L x 41.4"W x 82.8"H
Upper Bed Weight Capacity	250 LBS
Bottom Bed Weight Capacity	350 LBS
Recommended Upper Mattress Thickness	4-6 inches
Recommended Bottom Mattress Thickness	8 inches
Number of Slats	21 (Upper) + 21 (Lower)
Box Spring Required	No
Assembly Required	Yes
Suggested Number of People for Assembly	1 (Recommended 2)
Item Weight	121 pounds

WARRANTY AND SUPPORT

Bellemave is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, our customer service team is available to assist with any questions or concerns.

- For assistance with assembly, missing parts, or product inquiries, please contact our experienced customer service team.
- Our customer service team aims to respond within 24 hours.
- Please retain your purchase receipt for any warranty claims or support requests.

