



[Manuals.plus](#) /

› [LLIVEKIT](#) /

› LLIVEKIT 12L Large Air Fryer Oven Instruction Manual

## LLIVEKIT WAF

# LLIVEKIT 12L Large Air Fryer Oven Instruction Manual

Model: WAF

## IMPORTANT SAFETY INSTRUCTIONS

---

Before using your LLIVEKIT 12L Large Air Fryer Oven, please read all instructions carefully to ensure safe and efficient operation. Keep this manual for future reference.

- Always place the appliance on a stable, level, heat-resistant surface.
- Ensure a minimum clearance of 12cm around the appliance for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions.
- The appliance features overheat protection and automatic shut-off for safety.
- The cool-touch cover and handle are designed to prevent burns during operation.

## PRODUCT OVERVIEW AND COMPONENTS

---

The LLIVEKIT 12L Large Air Fryer Oven is a versatile kitchen appliance designed for frying, roasting, baking, and grilling with minimal oil. It features a digital display and touch controls for ease of use.



Image: The LLIVEKIT 12L Large Air Fryer Oven shown with its various accessories, including cooking trays, a rotating basket, and a drip tray, highlighting its multi-functional design.

### Included Accessories:

- 2 x Cooking Trays (Mesh Racks)
- 1 x Rotating Basket
- 1 x Drip Tray
- 1 x Skewers Rack (with 8 skewers)
- 1 x Rotisserie Fork
- 1 x Food Tongs
- 1 x Removal Tool (for rotisserie accessories)

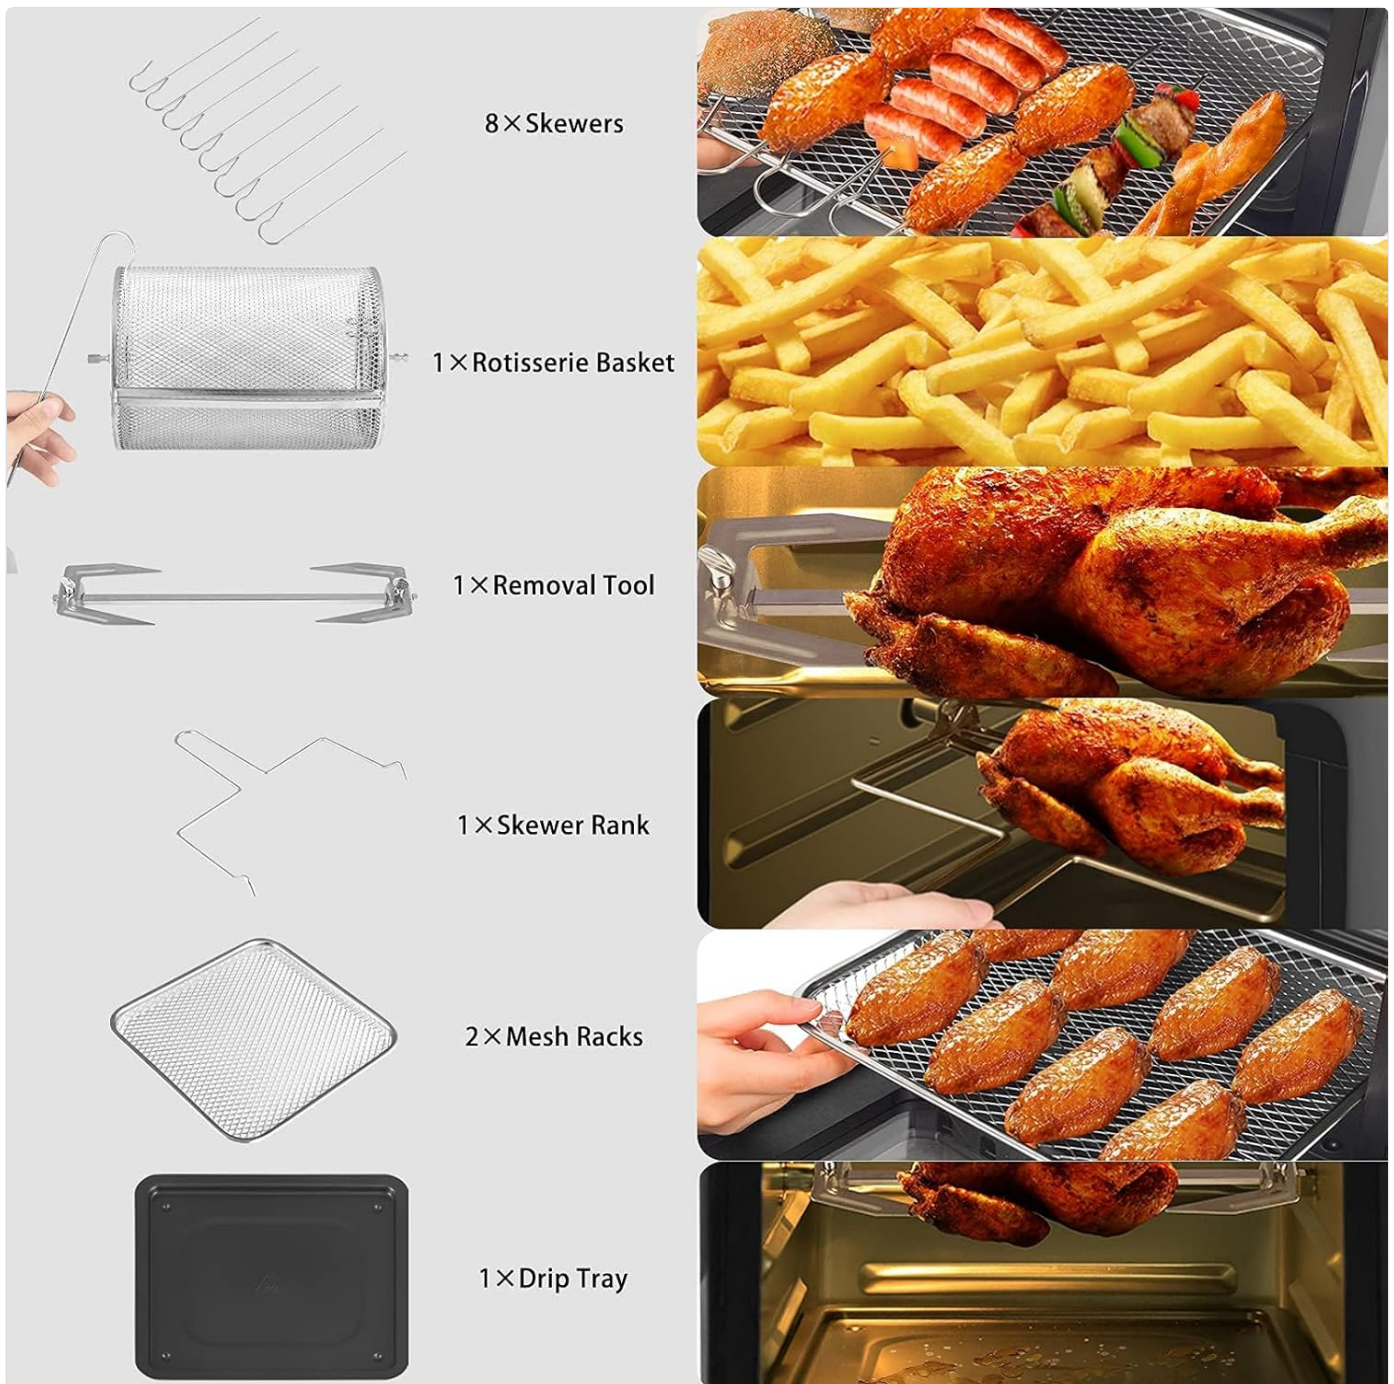


Image: A detailed view of the included accessories: skewers, rotisserie basket, removal tool, skewer rack, mesh racks, and drip tray, demonstrating their individual components and typical use.

## SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove all packaging materials and accessories from the air fryer oven.
- 2. Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (cooking trays, rotating basket, drip tray, skewers, rotisserie fork, food tongs) with warm soapy water. Rinse thoroughly and dry completely.
- 3. Placement:** Place the air fryer oven on a stable, heat-resistant, and level surface. Ensure there is at least 12cm of clear space on all sides and above the appliance for adequate air circulation. Do not place it near flammable materials or heat sources.
- 4. Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is rated for 220V.
- 5. Initial Burn-Off (Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (356°F) to eliminate any manufacturing odors. A slight "new appliance" smell is normal during this

process. Ensure the area is well-ventilated.

## OPERATING INSTRUCTIONS

### Control Panel Overview:

The LLIVEKIT Air Fryer Oven features an intuitive LED touchscreen panel for easy operation.

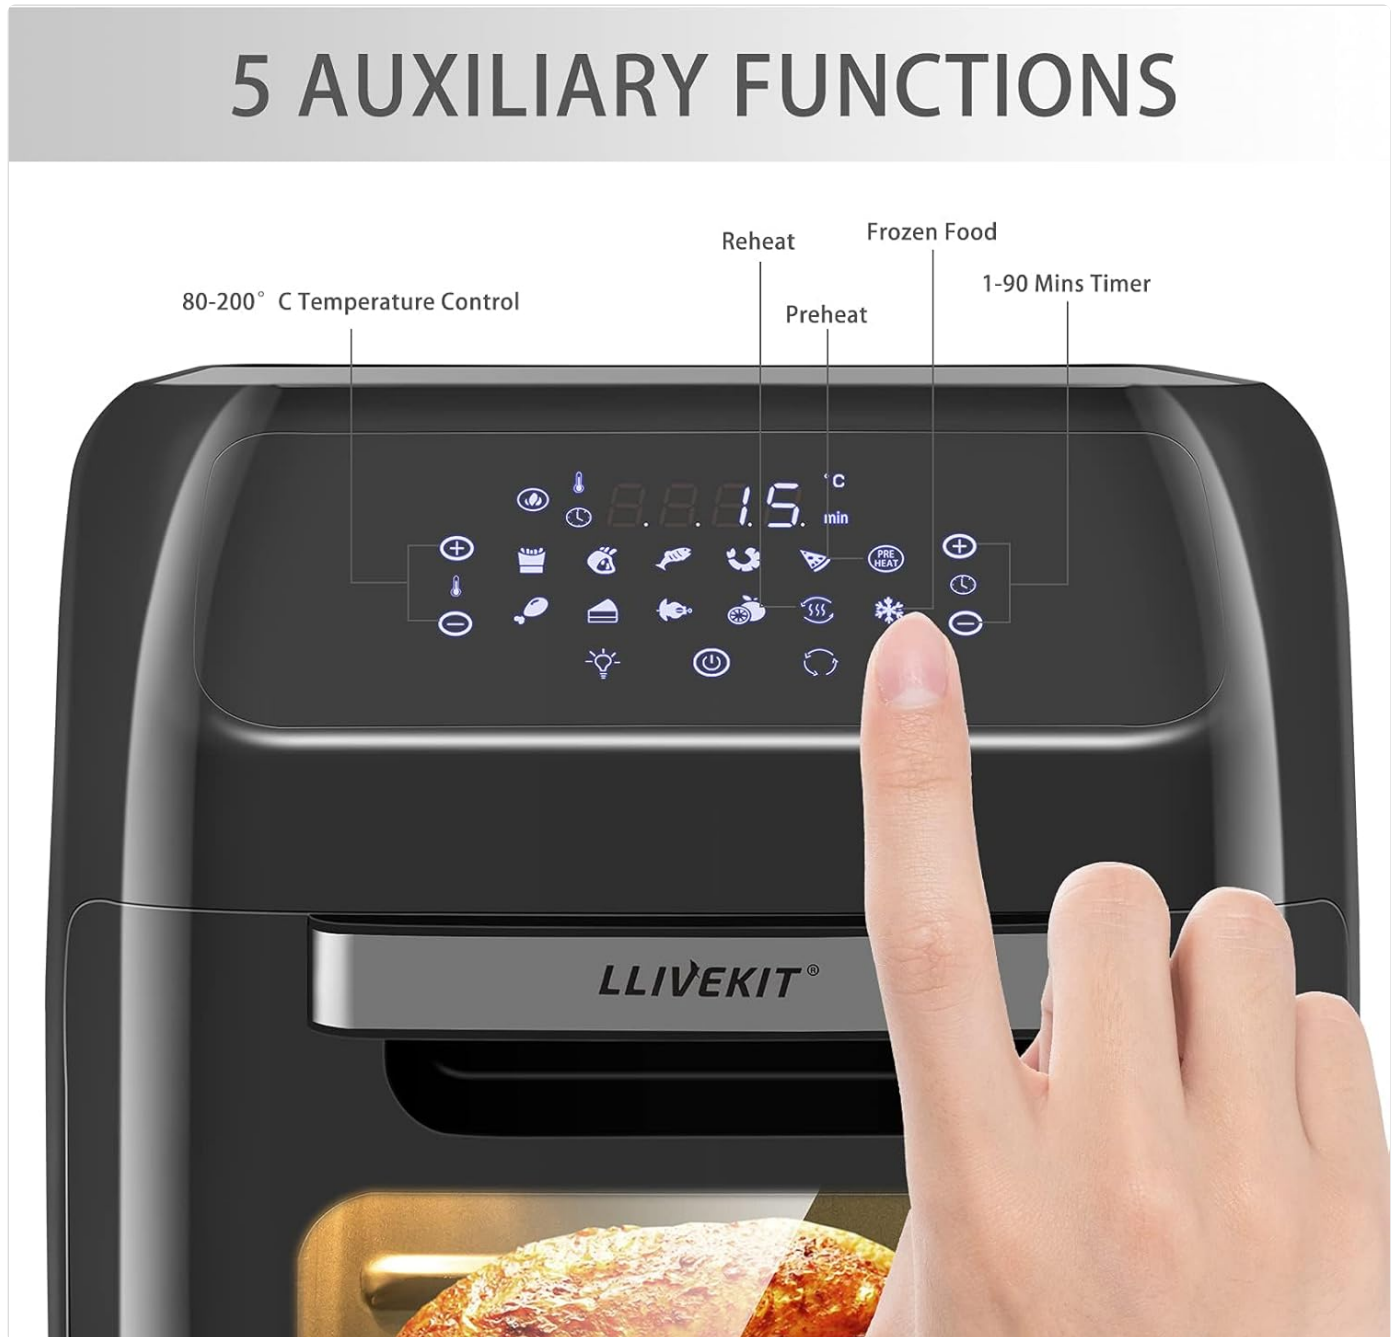


Image: Close-up view of the LED touchscreen control panel, showing various icons for presets, temperature, and timer controls.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts cooking temperature from 80°C to 200°C.
- **Timer Control:** Sets cooking time from 0 to 90 minutes.
- **Preset Functions:** Icons for 12 pre-programmed cooking modes.
- **Rotisserie Button:** Activates/deactivates the rotisserie function.
- **Light Button:** Turns the interior oven light on/off.

## Basic Cooking Steps:

1. **Prepare Food:** Place your food on the appropriate accessory (mesh rack, rotating basket, or rotisserie fork). Do not overload.
2. **Insert Accessory:** Carefully slide the accessory into the air fryer oven. Ensure the drip tray is placed at the bottom to catch any oil or crumbs.
3. **Close Door:** Close the oven door securely.
4. **Power On:** Press the Power button to turn on the appliance.
5. **Set Temperature and Time:**
  - **Manual Setting:** Use the temperature and timer controls to set your desired cooking parameters.
  - **Preset Selection:** Select one of the 12 preset icons (Chips, Steak, Fish, Shrimp, Pizza, Drumstick, Cake, Rotisserie, Dehydrator, Preheat, Frozen Food, Reheat). The appliance will automatically set a recommended temperature and time, which can be adjusted manually if needed.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
7. **Monitor Cooking:** Use the built-in light and viewing window to check on your food without opening the door.



Image: The air fryer oven with its interior light illuminated, showcasing the clear viewing window that allows users to monitor cooking progress.

8. **End of Cooking:** The appliance will beep when the cooking cycle is complete and automatically shut off. It also has a heat preservation function for 2 hours after cooking.
9. **Remove Food:** Carefully open the door and use the food tongs or removal tool (for rotisserie items) to safely remove the cooked food and accessories. Be aware that accessories will be hot.

## Using the Rotisserie Function:

The rotisserie function is ideal for cooking whole chickens or roasts evenly.

1. Secure your food onto the rotisserie fork.
2. Insert the rotisserie fork into the designated slots inside the oven.
3. Select a cooking preset or manually set temperature and time.
4. Press the Rotisserie button on the control panel to activate rotation.
5. Once cooking is complete, use the removal tool to safely extract the hot rotisserie fork and food.

# Professional stable temperature controller



 360° HIGH SPEED

 1800W HIGH POWER


 Air Circulation Technology

Image: The LLIVEKIT Air Fryer Oven with a whole chicken cooking inside, demonstrating the rotisserie function and the even heat distribution.

## Healthy Cooking with Less Oil:

The air fryer utilizes 360° high-speed air circulation technology to cook food with significantly less oil compared to traditional deep frying, promoting healthier meals.

## Healthier-Less Oil

Cooks food with up to 95% less fat for a healthy alternative



Image: A visual comparison showing the difference between deep-fried chips and air-fried chips, illustrating the reduced oil content in air-fried food.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer oven.

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Accessories:** All removable accessories (cooking trays, rotating basket, drip tray, skewers, rotisserie fork, food tongs) are dishwasher safe for convenient cleaning. For hand washing, use warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.



## Dishwasher Safe

All accessories are dishwasher safe for easy and quick cleaning.



Rotisserie Spit  
25x5cm



Baking Trays x2  
26x23.6x0.5cm



Skewers Set  
22.2x13.8cm



Rotating Basket  
φ14x25cm



Crumb Tray  
25.6x23.6x0.8cm



Rotisserie Handle  
22.5x23.5cm

Image: Air fryer accessories, including the drip tray, being placed into a dishwasher, demonstrating their dishwasher-safe design for easy cleaning.

3. **Clean Interior:** Wipe the interior of the oven with a damp cloth and mild detergent. For stubborn residue, use a non-abrasive sponge. Avoid using metal scouring pads or harsh abrasive cleaners.
4. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
5. **Storage:** Ensure the appliance and all accessories are clean and dry before storing. Store in a cool, dry place.

## TROUBLESHOOTING

If you encounter any issues with your LLIVEKIT Air Fryer Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly or thoroughly.	Overloaded basket/tray; incorrect temperature/time settings; food not shaken/turned.	Do not overload the basket/tray. Adjust temperature and time settings as needed. For best results, shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the drip tray and interior thoroughly after each use. For high-fat foods, ensure the drip tray is in place.
Unusual odor during first use.	Manufacturing residue burning off.	This is normal for initial use. Run the appliance empty for 10-15 minutes in a well-ventilated area. The odor will dissipate.
Appliance is noisy during operation.	Normal fan operation.	A certain level of fan noise is normal for air fryers as they circulate hot air. If the noise is excessive or unusual, contact customer support.

If the problem persists after trying these solutions, please contact LLIVEKIT customer support.

## SPECIFICATIONS

Feature	Detail
Brand	LLIVEKIT
Model Number	WAF
Capacity	12 Litres
Power / Wattage	1800 Watts
Voltage	220 Volts
Product Dimensions (L x W x H)	35.8 x 32.6 x 37.5 cm
Item Weight	6.4 kg
Material	Aluminium, Plastic
Special Features	Temperature Control, Programmable
Temperature Range	80°C - 200°C
Timer Range	0 - 90 Minutes



## 12L Capacity for Families

It can hold up to 2kg of whole chicken, 500g of chips, an 8-inch pizza or 32 chicken wings, even for large groups or family reunions.



Image: An illustration highlighting the 12L capacity of the air fryer oven, showing it can accommodate a whole chicken, chips, or pizza, suitable for family-sized meals.

## WARRANTY AND SUPPORT

Your LLIVEKIT 12L Large Air Fryer Oven is designed for durability and performance. Specific warranty details are typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer for precise terms and conditions.

For any questions, technical assistance, or warranty claims, please contact LLIVEKIT customer support. Contact information can usually be found on the product packaging or the official LLIVEKIT website.

**Manufacturer:** LLIVEKIT

**Model:** WAF

**ASIN:** B097MQ1MML

