

C S GSP753030

C S Replacement Lithium-Polymer Battery User Manual

Model: GSP753030 / CS-JBE300SL

Compatible with: JBL Everest Elite 300, JBL Everest Elite E45BT, JBL Everest Elite E55BT

Brand: C S

1. INTRODUCTION

This manual provides essential instructions for the safe installation, operation, and maintenance of your C S replacement Lithium-Polymer battery. This battery is specifically designed for use with compatible JBL Everest Elite headphone models. Please read this manual thoroughly before attempting any installation or use.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, electric shock, injury, or damage to the product or property.

- **Warranty Void:** The warranty is void if the battery label is removed.
- **No Disassembly:** Do not attempt to disassemble, open, or service the battery pack.
- **Correct Replacement:** Replace only with the battery pack designated for this specific product.
- **Physical Damage:** Do not crush, puncture, or short external contacts of the battery.
- **Heat Exposure:** Do not dispose of the battery in fire or water. Do not store above 60°C (140°F).
- **Initial Charge:** New battery packs must be fully charged before initial use. To reduce the risk of fire or burns, read the operating guide before using the battery.

3. PRODUCT OVERVIEW

The C S replacement battery is a Lithium-Polymer battery designed to restore power to compatible JBL Everest Elite headphones. It features three wires for connection: red (positive), black (negative), and yellow (data/thermistor). The battery's label provides key specifications and safety warnings.



This image displays the C S replacement battery, highlighting its label with essential specifications and safety warnings. The battery features three colored wires (red, yellow, black) for connection.

4. SETUP AND INSTALLATION

Important: Battery replacement in electronic devices can be complex and may require specialized tools and technical knowledge. Incorrect installation can damage your device or the battery, and may void your device's warranty. It is highly recommended to seek professional assistance for battery replacement if you are not experienced with such procedures.

General Installation Steps (Consult Device-Specific Guides):

1. **Power Off:** Ensure your device (JBL Everest Elite headphones) is completely powered off and disconnected from any power source.
2. **Disassembly:** Carefully open the headphone casing to access the internal battery compartment. This often involves removing ear pads and screws. Refer to a device-specific disassembly guide or video for your exact headphone model.
3. **Disconnect Old Battery:** Gently disconnect the old battery's wires from the headphone's circuit board. Note

the orientation and color coding of the wires (red, black, yellow).

4. **Remove Old Battery:** Carefully remove the old battery from its compartment. It may be secured with adhesive.
5. **Install New Battery:** Place the new C S replacement battery into the compartment. Ensure it fits securely without bending or forcing.
6. **Connect New Battery:** Connect the new battery's wires to the circuit board, matching the color coding (red to positive, black to negative, yellow to data/thermistor). Ensure connections are firm and correct.
7. **Reassembly:** Carefully reassemble the headphone casing, ensuring all screws and components are properly secured.
8. **Initial Charge:** Fully charge the new battery before its first use.



A detailed view of the battery's connection wires. The red wire typically indicates positive, the black wire indicates negative, and the yellow wire is often for data or thermistor functions. Correct connection is crucial for proper operation.

5. OPERATING INSTRUCTIONS

Once installed, the C S replacement battery operates as the power source for your compatible JBL Everest Elite headphones. Refer to your headphone's original user manual for specific operating procedures, including power on/off, pairing, and volume control.

Charging:

- Always use the original or a certified compatible charger for your headphones.
- Ensure the battery is fully charged before its first use after installation.
- Avoid completely discharging the battery frequently to prolong its lifespan.

6. MAINTENANCE

Storage:

- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for extended periods, ensure the battery is charged to approximately 50% to 70% capacity.

Cleaning:

- Do not expose the battery to moisture or liquids.
- If cleaning is necessary, gently wipe the exterior with a dry, soft cloth.

7. TROUBLESHOOTING

If you encounter issues after replacing the battery, consider the following:

- **Device Not Powering On:** Verify that all battery connections are secure and correctly oriented. Ensure the headphone casing is properly reassembled.
- **Battery Not Charging:** Check if the charging cable and adapter are functional and compatible with your headphones. Ensure the charging port on the headphones is clean and undamaged.
- **Shortened Battery Life:** Ensure the battery was fully charged initially. If the issue persists, the battery may be faulty, or there might be an issue with the headphone's charging circuit.
- **Overheating:** If the battery or headphones become excessively hot during charging or use, immediately discontinue use and disconnect from power. This could indicate a serious issue.

If issues persist after performing these checks, consult a qualified technician or contact the seller for further assistance.

8. SPECIFICATIONS

Feature	Specification
Battery Type	Lithium Polymer
Battery Capacity	610 mAh
Voltage	3.7 V
Energy	2.26 Wh
Part Number (Battery)	GSP753030
Model Number (Battery)	CS-JBE300SL
Compatible Device Models	JBL Everest Elite 300, JBL Everest Elite E45BT, JBL Everest Elite E55BT

Item Weight	Approximately 1.58 ounces (45 grams)
Manufacturer	C S

9. DISPOSAL INFORMATION

Lithium-Polymer batteries must be disposed of properly to prevent environmental harm and safety risks. Do not dispose of batteries with regular household waste. Please contact your local waste management authority or a certified electronics recycling center for information on battery recycling and disposal options in your area.

10. WARRANTY AND SUPPORT

Warranty information for this C S replacement battery is not provided within the product details. For specific warranty terms, conditions, and customer support, please refer to the seller or manufacturer directly.

© 2023 C S. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question