



[Manuals.plus](#) /

> [XLTTY](#) /

> [XLTTY 17.7" Pedestal Fan Instruction Manual](#)

XLTTY 17.7" Pedestal Fan

XLTTY 17.7" Pedestal Fan Instruction Manual

Model: 17.7" Pedestal Fan

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SETUP AND ASSEMBLY


This section provides instructions for assembling your XLTTY Pedestal Fan. Please follow these steps carefully before initial use.

1.1 Unpacking

- Carefully remove all components from the packaging.
- Verify that all parts listed in the "Package includes" section are present.
- Retain packaging for future storage or transport.

1.2 Component Identification

Familiarize yourself with the main components of your fan:

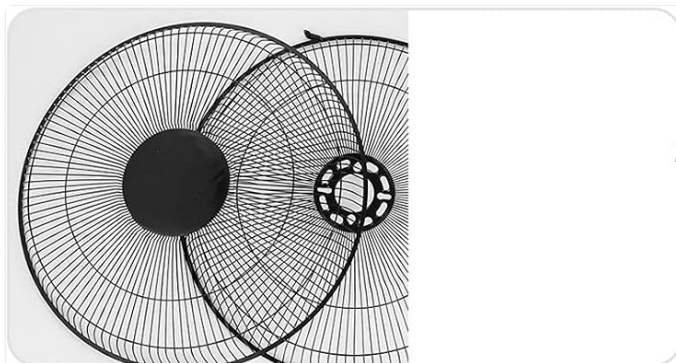

Safety double ring net cover

High-quality motor



Robust chassis



15cm telescopic pole

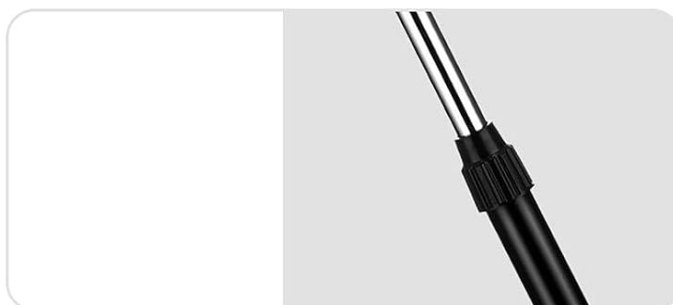


Image: Key components of the XLTTY Pedestal Fan, including the safety double-ring net cover, the motor housing, the robust circular base (chassis), and the adjustable telescopic pole.

- **Robust Chassis:** The stable circular base of the fan.
- **Telescopic Pole:** The adjustable height stand.
- **Motor Unit:** Contains the fan motor and control panel.
- **Fan Blades:** Five blades for air circulation.
- **Safety Double-Ring Net Cover:** Front and rear protective grilles.
- **Fasteners:** Nuts, bolts, and caps for assembly.

1.3 Assembly Steps

1. **Attach the Telescopic Pole to the Chassis:** Insert the bottom end of the telescopic pole into the robust chassis. Secure it firmly using the provided fasteners, ensuring the base is stable.
2. **Mount the Motor Unit:** Place the motor unit onto the top of the telescopic pole. Align the holes and secure it with the appropriate screws or locking mechanism.
3. **Install the Rear Net Cover:** Attach the rear safety net cover to the motor unit, ensuring it is correctly oriented and secured.

4. **Mount the Fan Blades:** Carefully slide the five fan blades onto the motor shaft. Ensure they are seated correctly and secured with the blade cap.
5. **Attach the Front Net Cover:** Place the front safety net cover over the fan blades and secure it to the rear net cover using the clips or screws provided. Ensure the net covers are tightly closed to prevent accidental contact with the blades.
6. **Adjust Height:** Loosen the locking mechanism on the telescopic pole to adjust the fan to your desired height (between 44.5 to 50.4 inches), then tighten to secure.



Image: Diagram illustrating the dimensions of the XLTTY Pedestal Fan, showing a fan head width of 45cm (17.7 inches), a maximum height of 128cm (50.4 inches), and a base width of 40cm (15.7 inches).

2. OPERATION INSTRUCTIONS

Your XLTTY Pedestal Fan is designed for ease of use with intuitive controls. This section details how to operate your fan effectively.

2.1 Control Panel Overview

The control panel is located on the motor unit and features mechanical knob controls for power, speed, and timer settings.



Image: The XLTTY Pedestal Fan, highlighting the control panel on the main body, which includes a rotary knob and push buttons for various settings.

2.2 Powering On/Off and Speed Settings

- **Power On:** Plug the fan into a suitable 110-220V power outlet. Turn the main knob to the desired speed setting (1, 2, or 3).
- **Speed Adjustment:** Rotate the knob to select one of the three available speeds:
 - **Speed 1 (Low):** Gentle airflow for quiet environments or light cooling.
 - **Speed 2 (Medium):** Moderate airflow for general use.
 - **Speed 3 (High):** Powerful airflow for rapid cooling.
- **Power Off:** Turn the main knob to the "0" or "OFF" position.



Image: Visual representation of the fan's three speed settings, suggesting appropriate uses: Speed 1 for quiet activities like reading, Speed 2 for focused tasks like working, and Speed 3 for more active situations like exercise.

2.3 Oscillation Function

- To activate the oscillation feature, press the oscillation button located on the top of the motor unit. The fan head will begin to rotate from side to side, distributing air across a wider area.
- To stop oscillation, press the button again.

Wide Angle Oscillation



Image: The XLTTY Pedestal Fan operating with its wide-angle oscillation feature, illustrating how air is distributed broadly across a room.

2.4 Timer Function

- The fan features a 1-hour smart timing function. To activate, rotate the timer knob to the "1H" position. The fan will operate for approximately one hour and then automatically shut off.
- This feature is ideal for falling asleep or for temporary cooling needs.

2.5 Noise Level

The XLTTY Pedestal Fan operates at a low noise level, as low as 40 decibels, ensuring a quiet environment.



Image: A comparative chart illustrating the low noise output of the XLTTY Pedestal Fan (26 dB), juxtaposed with common ambient sounds like blooming flowers (10 dB), rustling leaves (20 dB), a quiet office (40 dB), and normal conversation (50 dB).

3. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your XLTTY Pedestal Fan. Always unplug the fan before cleaning or performing any maintenance.

3.1 Cleaning the Fan

- **Exterior Cleaning:** Wipe the exterior surfaces of the fan, including the base, pole, and motor housing, with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Grille and Blades Cleaning:**
 - a. Unplug the fan from the power outlet.
 - b. Carefully remove the front safety net cover.
 - c. Wipe the fan blades with a soft, damp cloth to remove dust and debris.

- d. Clean the front and rear grilles with a soft brush or cloth.
 - e. Ensure all parts are completely dry before reassembling the front net cover.
- Do not immerse the fan or its electrical components in water.



Image: A detailed view of the XLTTY Pedestal Fan's five-blade design and the protective double-ring net cover, emphasizing the fine mesh for safety and efficient air cutting.

3.2 Storage

- When not in use for extended periods, unplug the fan and clean it thoroughly.
- Store the fan in its original packaging or a dust-free, dry location.

4. TROUBLESHOOTING

If you encounter any issues with your XLTTY Pedestal Fan, please refer to the following common problems and solutions before contacting support.

Problem	Possible Cause	Solution
Fan does not turn on.	<ul style="list-style-type: none"> Not plugged in. Power outlet malfunction. Speed setting is off. 	<ul style="list-style-type: none"> Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Turn the speed knob to a setting other than "OFF".
Weak or no airflow.	<ul style="list-style-type: none"> Fan blades are dirty. Obstruction in front or behind the fan. Incorrect speed setting. 	<ul style="list-style-type: none"> Unplug and clean the fan blades and grilles as per maintenance instructions. Ensure there are no objects blocking the airflow. Increase the speed setting.
Fan is unusually noisy.	<ul style="list-style-type: none"> Loose parts. Fan blades are dirty or unbalanced. Fan is not on a stable surface. 	<ul style="list-style-type: none"> Check all assembly points to ensure they are secure. Unplug and clean the fan blades. Ensure they are properly seated. Place the fan on a flat, stable surface.
Oscillation not working.	<ul style="list-style-type: none"> Oscillation button not pressed. Internal mechanism issue. 	<ul style="list-style-type: none"> Press the oscillation button firmly. If the issue persists, contact customer support.

5. SPECIFICATIONS

Detailed technical specifications for the XLTTY 17.7" Pedestal Fan.

Feature	Detail
Product Name	Electric Fan
Brand	XLTTY
Model	17.7" Pedestal Fan
Color	Black
Dimensions (Fan Head)	45 cm (17.7 inches)
Dimensions (Base)	40 cm (15.7 inches)
Height (Adjustable)	113 cm - 128 cm (44.5 - 50.4 inches)
Voltage	110-220V
Power	45W
Control Method	Mechanical/Knob
Speed Settings	3 Speeds
Fan Blades	5 Blades
Special Features	Oscillating, Adjustable Height, 1-Hour Timer, Quiet Operation (40dB)

Feature	Detail
Noise Level	As low as 40 Decibels
Recommended Use	Air Circulation for Home, Office, Studio, Bedrooms

6. WARRANTY AND CUSTOMER SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact the manufacturer directly.

- **Warranty:** Specific warranty terms and conditions are typically provided with the product at the time of purchase. Please retain your proof of purchase for warranty claims.
- **Customer Support:** If you require assistance, have questions, or need to report an issue that cannot be resolved using the troubleshooting guide, please contact XLTTY customer support. Contact details can usually be found on the product packaging or the manufacturer's official website.

