

[manuals.plus](#) /

› [Kedok](#) /

› [Kedok Vintage Suitcase Portable Record Player M402-A Instruction Manual](#)

**Kedok M402-A**

## **Kedok Vintage Suitcase Portable Record Player M402-A Instruction Manual**

### **INTRODUCTION**

---

This manual provides essential information for the safe and efficient operation of your Kedok Vintage Suitcase Portable Record Player, Model M402-A. Please read these instructions thoroughly before using the product and retain them for future reference.

# Vintage Suitcase Turntable



Diamond Stylus



Aux-In, RCA Output & Headphone Jack



Built-In Stereo Speakers



3-Speed Turntable



External Speaker Connection



Compact & Portable

*Image: The Kedok Vintage Suitcase Portable Record Player, Model M402-A, in a light blue finish, shown open with a record on the turntable. The portable design features a handle and built-in speakers.*

## PRODUCT FEATURES

- Vintage suitcase design for portability and aesthetic appeal.
- Built-in stereo speakers for direct audio playback.
- RCA output for connecting to external speakers.
- 3.5mm Aux-in jack for connecting external audio devices like CD players or smartphones.
- Headphone jack for private listening.
- 3-speed belt-driven turntable: Supports 33 1/3, 45, and 78 RPM records.
- Plays 7, 10, and 12-inch vinyl records.
- Auto-stop switch to cease spinning once a record finishes playing.
- Diamond stylus for record playback.



1

Stylus Included--Read stable, not hurt the record



2

Belt-driven Design-Absorb vibration for smooth music



3

Compact and portable suitcase design for conveniently taking your tunes anywhere

## PACKAGE CONTENTS

Verify that all items are included in the package:

- Turntable with stereo speakers
- RCA Cable
- Instruction Manual

## PRODUCT DIAGRAM AND COMPONENTS

Familiarize yourself with the various parts of your record player:



*Image: A detailed view of the record player's control panel, showing the turntable, tonearm, and various controls with numerical labels.*

## Control Panel Components:

1. **Control Hole Adapter:** Used for 45 RPM records with large center holes.
2. **Cueing Lever:** Lifts and lowers the tonearm.
3. **Auto Stop Control Switch:** Engages or disengages the auto-stop function.
4. **Turntable Speed Selector:** Adjusts playback speed (33/45/78 RPM).
5. **Power/Volume Knob:** Turns the unit on/off and controls volume.
6. **Headphone Jack:** For connecting headphones.

## SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the record player from its packaging.
2. **Power Connection:** Connect the power adapter to the DC IN port on the back of the unit and plug it into a wall outlet.
3. **Remove Stylus Cover:** Gently remove the protective cover from the stylus (needle).

4. **Secure Tonearm:** Release the tonearm lock.

## OPERATING INSTRUCTIONS

---

1. **Power On:** Turn the Power/Volume knob clockwise to power on the unit. The power indicator light will illuminate.
2. **Place Record:** Place a vinyl record on the turntable platter. If playing a 45 RPM record, place the 45 RPM adapter (Control Hole Adapter) on the center spindle.
3. **Select Speed:** Set the Turntable Speed Selector to the appropriate speed (33, 45, or 78 RPM) for your record.
4. **Auto Stop:** If desired, set the Auto Stop Control Switch to ON to automatically stop the turntable when the record finishes. Set to OFF for continuous play or for records that may trigger auto-stop prematurely.
5. **Start Playback:** Gently lift the tonearm using the Cueing Lever and position the stylus over the desired track on the record. Slowly lower the tonearm using the Cueing Lever to begin playback.
6. **Adjust Volume:** Rotate the Power/Volume knob to adjust the sound level.
7. **End Playback:** When the record finishes (or if auto-stop is enabled), the turntable will stop. Lift the tonearm, return it to its rest, and secure it with the tonearm lock. Turn the Power/Volume knob counter-clockwise to power off the unit.

## CONNECTION OPTIONS

---

Your record player offers several ways to connect to other audio devices:



*Image: A visual guide illustrating the RCA output, Aux-in jack, and Headphone 3.5mm Jack, along with examples of devices they can connect to.*

- **RCA Output (Line Out):** Connect external speakers via RCA cables to enhance sound output. The red jack is for the right channel, and the white jack is for the left channel.
- **Aux-in Jack:** Connect external audio players (e.g., smartphones, MP3 players, tablets) using a 3.5mm audio cable to play their audio through the record player's speakers.
- **Headphone 3.5mm Jack:** Plug in your headphones for a private listening experience.

## MAINTENANCE

- **Cleaning the Stylus:** Use a soft brush to gently clean the stylus from back to front. Avoid touching the stylus with your fingers.
- **Cleaning Records:** Use a dedicated record cleaning brush or cloth to remove dust and debris from your vinyl records before and after each play.
- **Cleaning the Unit:** Wipe the exterior of the record player with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, ensure the tonearm is secured with its lock and the stylus is protected. Close the lid to prevent dust accumulation.

## TROUBLESHOOTING

- No Power:** Ensure the power adapter is securely connected to both the record player and a working power outlet. Check if the Power/Volume knob is turned ON.
- No Sound:** Verify the volume is turned up. If using external speakers, ensure they are properly connected and powered on. If using headphones, ensure they are fully plugged into the headphone jack.
- Skipping or Distorted Sound:** Check if the record is clean and free of scratches. Ensure the stylus is clean and not damaged. Make sure the record player is on a stable, level surface to minimize vibrations.
- Turtable Not Spinning:** Confirm the power is on and the speed selector is set. If the auto-stop switch is ON, some records may not trigger it correctly, try setting it to OFF.

## SPECIFICATIONS

Feature	Specification
Model Number	M402-A
Brand	Kedok
Speeds Supported	33 1/3, 45, 78 RPM
Record Sizes	7, 10, 12 inches
Connectivity	RCA Output, 3.5mm Aux-in, 3.5mm Headphone Jack
Speakers	Built-in Stereo Speakers
Special Feature	Portable
Material	Plastic
Item Weight	6.3 pounds (2.86 Kilograms)
Package Dimensions	15.94 x 12.64 x 6.26 inches

## OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

*Video: An official product video demonstrating the features and portability of the Kedok Vintage Suitcase Record Player with Built-in Speakers.*

## IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following:

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus

(including amplifiers) that produce heat.

- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.