

Mitsubishi MRC-UNI12

Mitsubishi MRC-UNI12 Universal Remote Control Instruction Manual

Model: MRC-UNI12

1. INTRODUCTION

This manual provides detailed instructions for the Mitsubishi MRC-UNI12 Universal Remote Control. This device is designed to operate various electronic equipment, including Smart TVs, DVD players, Blu-ray players, and Cable boxes. Its versatile design aims to simplify control of multiple devices from a single unit.



Image 1.1: Front view of the Mitzu MRC-UNI12 Universal Remote Control, showcasing its button layout for various functions.

2. SETUP

2.1 Battery Installation

The Mitzu MRC-UNI12 remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

2.2 Programming the Remote Control

To operate your devices, the Mitzu MRC-UNI12 must be programmed with the correct codes for your specific equipment (TV, DVD, Blu-ray, Cable). While specific codes are not provided in this manual, the general programming steps for universal remotes typically involve:

1. **Identify Device Type:** Press and hold the corresponding device button (e.g., TV, DVD, Cable) on the remote.
2. **Enter Code:** While holding the device button, enter the 3 or 4-digit code for your device's brand. These codes are usually found in a code list provided with the remote (not included in this digital manual).
3. **Test Functionality:** Release the device button. Point the remote at your device and test basic functions like Power, Volume, and Channel.
4. **Automatic Code Search (if applicable):** If the direct code entry fails, some universal remotes offer an automatic code search function. Refer to the physical manual for specific instructions on how to activate this feature.

Note: For a complete list of device codes and detailed programming instructions, please refer to the physical instruction booklet that accompanied your Mitzu MRC-UNI12 remote control.

3. OPERATING THE REMOTE CONTROL

Once programmed, the Mitzu MRC-UNI12 remote allows control over your selected devices. Below is a general overview of common button functions.



Image 3.1: Side view of the Mitzu MRC-UNI12 remote, showing its ergonomic design.

- **Power Button** (■): Turns the selected device on or off.
- **Device Selection Buttons (TV, DVD, STB, AUDIO)**: Selects the device you wish to control. Press the corresponding button before issuing commands.
- **Number Pad (0-9)**: Used for direct channel entry or inputting programming codes.
- **Volume Up/Down (VOL+/VOL-)**: Adjusts the volume level.

- **Channel Up/Down (CH+/CH-):** Changes the channel.
- **Mute:** Silences the audio.
- **Navigation Pad (Up, Down, Left, Right, OK/Enter):** Used to navigate menus and confirm selections.
- **Menu:** Accesses the device's main menu.
- **Return/Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or function.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback on DVD/Blu-ray players.
- **Smart TV Buttons (Netflix, YouTube, Prime Video, Disney+):** Direct access buttons for popular streaming services.
- **Color Buttons (A, B, C, D):** Often used for specific functions within menus or interactive services.



Image 3.2: A user operating the Mitzu MRC-UNI12 remote control to interact with a television, demonstrating typical usage.

4. MAINTENANCE

Proper care ensures the longevity and optimal performance of your Mitzu MRC-UNI12 remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.
- **Liquid Exposure:** Do not expose the remote to liquids, as this can cause permanent damage.

5. TROUBLESHOOTING

If you encounter issues with your Mitzu MRC-UNI12 remote control, refer to the following common troubleshooting steps:

- **Remote Not Working:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote and the device's infrared sensor.
 - Verify that the remote is pointed directly at the device.
- **Specific Buttons Not Responding:**
 - Ensure the correct device mode (TV, DVD, etc.) is selected on the remote.
 - Re-program the remote for the affected device. The previous programming might have been lost or incorrect.
- **Device Not Responding After Programming:**
 - The entered code might be incorrect. Try other codes listed for your device brand in the original code booklet.
 - Attempt the automatic code search method if available for your remote.
- **Remote Control Range Issues:**
 - Ensure batteries are fresh.
 - Remove any objects that might be blocking the signal path.
 - The remote works best within a certain range and line of sight to the device's IR receiver.

6. SPECIFICATIONS

Key technical specifications for the Mitzu MRC-UNI12 Universal Remote Control:

Feature	Detail
Brand	Mitzu
Model	MRC-UNI12
Compatible Devices	Smart TV, DVD, Blu-ray, Cable
Connectivity Technology	Infrared (IR) for universal device control. <i>Note: Product specifications also list Bluetooth connectivity, which may be for specific Smart TV models or functions.</i>
Special Features	Lightweight design

Feature	Detail
Power Source	2 x AAA Batteries (not included)
Dimensions (Approx.)	22 cm (Length) x 5 cm (Width) x 2.5 cm (Thickness)
Weight (Approx.)	120 g



Image 6.1: Mitsu MRC-UNI12 remote control with approximate dimensions of 22 cm length, 5 cm width, and 2.5 cm thickness.

7. WARRANTY AND SUPPORT

Specific warranty details for the Mitsu MRC-UNI12 Universal Remote Control are typically provided with the product packaging or through the retailer at the time of purchase.

- **Warranty Information:** Please refer to the warranty card or documentation included with your purchase for terms, conditions, and duration of the product warranty.
- **Technical Support:** For technical assistance, programming issues not covered in this manual, or other product-related inquiries, please contact Mitzu customer support or the retailer from whom the product was purchased. Contact information can usually be found on the product packaging or the official Mitzu website.